STANDARD HORIZON

Nothing takes to water like Standard Horizon

QUANTUM AIS GX6000E

25 Watt VHF/FM Marine Transceiver

Owner's Manual

- Capable of connecting two optional wired RAM4 or one wired RAM4 and up to four Wireless RAM4W remote access microphones using SCU-30 wireless access point
- Integrated NMEA 2000 interface supporting all PGNs for Navigation, GPS, AIS and DSC functions
- Integrated Dual Channel AIS (Automatic Identification System) receiver
- GPS Compass, Waypoint and GPS status pages
- Dual Zone 25W PA / Loud Hailer with preprogrammed horn, siren, fog signals and listen back
- Submersible IPX8 (1.5 m for 30 minutes)
- Integrated 32 Code Voice Scrambler and 4 Code Voice Scrambler
- AIS / AIS SART target display: MMSI, Call Sign, Ship Name, BRG, DST, SOG and COG
- Front panel microphone can be connected to rear panel and extended 6 m using MEK-4 mic extension kit
- Programmable CPA or TCPA collision avoidance alarms
- Advanced 80 dB commercial Grade Receiver with Local / Distance Attenuator
- Intercom feature allows you to communicate between the radio, RAM4 and Wireless RAM4W microphones
- Integrated Voice Recorder to play back up to two minutes of RX receive audio



TABLE OF CONTENTS

Quic	ck Reference Guide	2
	SENERAL INFORMATION	
2 F	ACKING LIST	4
3 (OPTIONAL ACCESSORIES	4
4 8	Safety Precautions (Be Sure to Read)	5
	SETTING STARTED	
5.1	ABOUT VHF RADIO	
5.2	SELECTING AN ANTENNA	
5.3	COAXIAL CABLE	. 8
5.4	DISTRESS AND HAILING (CHANNEL 16)	
5.5	CALLING ANOTHER VESSEL (CHANNEL 16 OR 9)	
5.6	MAKING TELEPHONE CALLS	
5.7	BRIDGE CHANNELS 13 AND 67	
5.8	AUTOMATED RADIO CHECK SERVICE	
5.9	WHAT IS THE RANGE FOR AIS RECEIVERS?	
5.10	Accuracy of COG*	11
	CONTROLS AND INDICATORS	
6.1	FRONT PANEL	
6.2	MICROPHONE	
6.3	REAR PANEL	
	NSTALLATION	18
7.1	SAFETY / WARNING INFORMATION	
7.2	LOCATION	18
7.3	MOUNTING THE RADIO	
7.4	ELECTRICAL CONNECTIONS	20
7.5	CONNECTION OF EXTERNAL DEVICES	
	TO THE RADIO	22
7.6	INITIAL SETUP REQUIRED WHEN TURNING	~~
	ON THE POWER FOR THE FIRST TIME	
7.7	CHECKING GPS SIGNAL (GPS STATUS DISPLAY)	
7.8	GPS CONFIGURATION	
	BASIC OPERATION	
8.1	TURNING ON AND OFF THE TRANSCEIVER	
8.2	RECEPTION	
8.3	TRANSMISSION	
8.4	BASIC OPERATION OF THE MENU MODE	
8.5	TRANSMIT TIME-OUT TIMER (TOT)	36
8.6	SIMPLEX/DUPLEX CHANNEL USE	36
8.7	INTERNATIONAL, USA, AND CANADA MODE	
8.8	NOAA WEATHER CHANNELS	37
8.9	MULTI WATCH (TO PRIORITY CHANNEL)	
8.10	SCANNING	40
8.11	PRESET CHANNELS: INSTANT ACCESS	
8.12	MOB OPERATION	
8.13	PA/FOG OPERATION	
8.14	INTERCOM OPERATION	
8.15	VOICE SCRAMBLER	
8.16	DEMO MODE	
	SPS OPERATION	
9.1	DISPLAYING POSITION INFORMATION	50

9.2	CHECKING GPS STATUS		
9.3 GPS LOGGER OPERATION			
10 C	DIGITAL SELECTIVE CALLING (DSC)		
10.1	GENERAL	52	
10.2	DSC DISTRESS ALERT		
10.3	ALL SHIPS CALL		
10.4	INDIVIDUAL CALL		
10.5	GROUP CALL		
10.6	POSITION REQUEST		
10.7	POSITION REPORT		
10.8	POLLING CALL	78	
10.9	AUTO POSITION POLLING		
10.10	DSC TEST	82	
10.11	DSC LOG OPERATION	84	
	DSC LOOP BACK OPERATION		
11 N	IAVIGATION	87	
	WAYPOINT OPERATION		
11.2	ROUTING OPERATION		
	MOPERATION		
12.1	SETTING UP GM OPERATION		
12.2		97	
	UTOMATIC IDENTIFICATION SYSTEM (AIS)		
13.1	GENERAL	99	
13.2	AIS OPERATION		
13.3	AIS SETUP	103	
44 N		100	
		. 106	
14.1	SELECT DEVICE	. 106 106	
14.1 14.2	SELECT DEVICE DEVICE NUMBER	. 106 106 106	
14.1 14.2 14.3	SELECT DEVICE DEVICE NUMBER SYSTEM NUMBER	. 106 106 106 107	
14.1 14.2 14.3 14.4	SELECT DEVICE DEVICE NUMBER SYSTEM NUMBER SUMMARY OF THE NMEA 2000 SETUP	. 106 106 106 107 107	
14.1 14.2 14.3 14.4 14.5	SELECT DEVICE DEVICE NUMBER SYSTEM NUMBER SUMMARY OF THE NMEA 2000 SETUP COMPATIBLE NMEA 2000 PGN LIST	. 106 106 106 107 107 107	
14.1 14.2 14.3 14.4 14.5 15 C	SELECT DEVICE DEVICE NUMBER SYSTEM NUMBER SUMMARY OF THE NMEA 2000 SETUP COMPATIBLE NMEA 2000 PGN LIST CONFIGURATION SETUP	. 106 106 106 107 107 107 107 109	
14.1 14.2 14.3 14.4 14.5 15 C 15.1	SELECT DEVICE DEVICE NUMBER SYSTEM NUMBER SUMMARY OF THE NMEA 2000 SETUP COMPATIBLE NMEA 2000 PGN LIST CONFIGURATION SETUP DISPLAY MODE	. 106 106 106 107 107 107 109 109	
14.1 14.2 14.3 14.4 14.5 15.0 15.1 15.2	SELECT DEVICE DEVICE NUMBER SYSTEM NUMBER SUMMARY OF THE NMEA 2000 SETUP COMPATIBLE NMEA 2000 PGN LIST CONFIGURATION SETUP DISPLAY MODE DIMMER ADJUSTMENT	. 106 106 107 107 107 107 109 109 109	
14.1 14.2 14.3 14.4 14.5 15.0 15.1 15.2 15.3	SELECT DEVICE DEVICE NUMBER SYSTEM NUMBER SUMMARY OF THE NMEA 2000 SETUP COMPATIBLE NMEA 2000 PGN LIST CONFIGURATION SETUP DISPLAY MODE DIMMER ADJUSTMENT DISPLAY CONTRAST	. 106 106 107 107 107 107 109 109 109	
14.1 14.2 14.3 14.4 14.5 15.0 15.1 15.2	SELECT DEVICE DEVICE NUMBER SYSTEM NUMBER SUMMARY OF THE NMEA 2000 SETUP COMPATIBLE NMEA 2000 PGN LIST CONFIGURATION SETUP DISPLAY MODE DIMMER ADJUSTMENT DISPLAY CONTRAST KEY BEEP.	. 106 106 107 107 107 107 109 109 109 110	
14.1 14.2 14.3 14.4 14.5 15.1 15.1 15.2 15.3 15.4	SELECT DEVICE DEVICE NUMBER SYSTEM NUMBER SUMMARY OF THE NMEA 2000 SETUP COMPATIBLE NMEA 2000 PGN LIST CONFIGURATION SETUP DISPLAY MODE DISPLAY MODE DISPLAY CONTRAST KEY BEEP FOG ALERT TONE FREQUENCY	. 106 106 107 107 107 107 . 109 109 109 110 110	
14.1 14.2 14.3 14.4 14.5 15 C 15.1 15.2 15.3 15.4 15.5 15.6	SELECT DEVICE DEVICE NUMBER	. 106 106 107 107 107 107 107 109 109 110 110 110	
14.1 14.2 14.3 14.4 14.5 15 C 15.1 15.2 15.3 15.4 15.5	SELECT DEVICE DEVICE NUMBER	. 106 106 107 107 107 107 109 109 110 110 111	
14.1 14.2 14.3 14.4 14.5 15.1 15.2 15.3 15.4 15.5 15.6 15.7	SELECT DEVICE DEVICE NUMBER	. 106 106 107 107 . 107 . 107 . 109 109 109 109 110 110 110 111 112	
14.1 14.2 14.3 14.4 14.5 15.0 15.1 15.2 15.3 15.4 15.5 15.6 15.7 15.8 15.9 15.10	SELECT DEVICE DEVICE NUMBER	. 106 	
14.1 14.2 14.3 14.4 14.5 15.0 15.1 15.2 15.3 15.4 15.5 15.6 15.7 15.8 15.9 15.10	SELECT DEVICE DEVICE NUMBER	. 106 	
14.1 14.2 14.3 14.4 14.5 15.0 15.1 15.2 15.3 15.4 15.7 15.8 15.9 15.10 15.11	SELECT DEVICE DEVICE NUMBER	. 106 	
14.1 14.2 14.3 14.4 14.5 15.0 15.1 15.2 15.3 15.4 15.7 15.8 15.9 15.10 15.11	SELECT DEVICE DEVICE NUMBER	. 106 	
14.1 14.2 14.3 14.4 14.5 15 C 15.1 15.2 15.6 15.7 15.8 15.9 15.10 15.11 16 C	SELECT DEVICE DEVICE NUMBER	. 106 	
14.1 14.2 14.3 14.4 14.5 15 C 15.1 15.2 15.6 15.7 15.8 15.9 15.10 15.11 16 C 15.11 16 C 16.1	SELECT DEVICE DEVICE NUMBER	. 106 106 106 107 107 107 109 109 109 109 109 1109 1109 1100 111 1112 114 116 117 116 117 117 117 117 117 117 117 117 117 117 117 117 117 117 117 117 117 116 116 116 116 116 116 116 116 116 116 116 116 116 116 116 116 116 116	
14.1 14.2 14.3 14.4 14.5 15 C 15.1 15.2 15.3 15.4 15.5 15.6 15.7 15.8 15.9 15.10 15.11 16 C 16.1 16.2	SELECT DEVICE DEVICE NUMBER	. 106 	
14.1 14.2 14.3 14.4 14.5 15 C 15.1 15.2 15.3 15.4 15.5 15.6 15.7 15.8 15.9 15.10 15.11 16 C 16.1 16.2 16.3	SELECT DEVICE DEVICE NUMBER	. 106 	

TABLE OF CONTENTS


16.7	PRIORITY CHANNEL			
16.8 SUB CHANNEL 117				
	CHANNEL NAME			
16.10	NOISE CANCELLATION	118		
	AUDIO FILTER OPERATION			
	RX RECORDER			
	SCRAMBLER SETUP			
	SUMMARY OF THE CANNEL FUNCTION SETUP			
17 D	SC SETUP	123		
17.1				
17.2	INDIVIDUAL REPLY			
17.3	INDIVIDUAL ACKNOWLEDGMENT	123		
17.4	INDIVIDUAL RINGER	123		
17.5	GROUP DIRECTORY	123		
17.6	POSITION REPLY	124		
17.7	AUTO POSITION POLLING	124		
17.8	AUTO POSITION INTERVAL	124		
17.9		124		
17.10	NO ACTION TIMER			
	WAIT TIME FOR POSITION FIX			
17.13	DSC BEEP SUMMARY OF THE DSC SETUP MENU	125		
18 0	PS SETUP	127		
18.1	ORDER OF PRIORITY			
18.2	COMPASS DIRECTION	127		
18.3	LOCATION FORMAT			
18.4	TIME OFFSET			
18.5	TIME AREA			
18.6	TIME FORMAT			
18.7	UNITS OF MEASURE			
18.8	MAGNETIC VARIATION			
	NMEA 0183 IN/OUT			
	Position Data Output			
	OPTION GPS UNIT			
18.12	SUMMARY OF THE GPS SETUP	133		
19 A	TIS SETUP	135		
19.1	ATIS CODE PROGRAMMING	135		
19.2	ATIS CH GROUP	136		
20 S	SM-70H (RAM4) REMOTE MIC OPERATION .	137		
	REMOTE MIC CONTROLS			
20.2	RAM4 SOFT KEY ASSIGNMENT	139		
21 C	ONNECTING A USB DATA TERMINAL			
	TO THE PC .	141		
22 N	IONNECTING A USB DATA TERMINAL TO THE PC . IAINTENANCE	142		
22.1	REPLACEMENT PARTS	142		
	FACTORY SERVICE			
	TROUBLESHOOTING CHART			
23 0	HANNEL ASSIGNMENTS	144		
24 V	VARRANTY	146		
25 5	PECIFICATIONS	148		

TFM	PLATE	153
25.7	DIMENSIONS	. 150
25.6	SCU-31 EXTERNAL GPS ANTENNA	. 149
25.5	NMEA INPUT/OUTPUT	. 149
25.4	RECEIVER (for AIS)	. 149
25.3	RECEIVER (for Voice and DSC)	. 148
25.2	TRANSMITTER	. 148
25.1	GENERAL	. 148

Quick Reference Guide

The **GX6000E** is equipped with the E2O (Easy-To-Operate) menu system. Basic operation may be accomplished by following the procedure below:

- ① Press and hold the 0 key to turn on or off the radio.
- ② The MODE/STATUS indicator indicates the status of the transceiver.
- ③ Rotate the **SQL** knob clockwise to squelch or counterclockwise to un-squelch the radio.
- ④ Rotate the VOL knob to adjust the speaker audio volume.
- (5) Press the **MENU** key to access MENU.
- ⑥ Press the 16/S key on the radio or the microphone to select channel 16. Press and hold the 16/S key on the radio or the microphone to select sub channel. Press again to revert to the last selected channel.
- ⑦ Activates a DSC distress call. Lift the red cover, press the **DISTRESS** once, then press and hold until the radio alarms.
- ⑧ These three programmable soft keys can be customized through the setup menu to quickly access advanced functions of the radio. Press the ►/◀ key to switch the function of these keys, display the key functions at the bottom of the display.
- ⑨ Press the ▲/▼ key (or press the microphone's ▲/▼ keys) to select the operating channel. While the MENU screen is displayed, press the key to slide the on-screen menu upward/downward.
- Image: Press the ►/◄ key to switch the function menu. While the MENU screen is displayed, press the key to slide the on-screen menu to the right/left side.
- IPress the CLEAR key to cancel a function or menu selection.
- While the normal screen is displayed, rotate the **DIAL/ENT** knob to select your desired channel. While the MENU screen is displayed, rotate the knob to select your desired menu item.
- ③ To transmit: place your mouth about 1.5 cm away from Mic hole and speak in a normal voice level while pressing the **PTT** switch.
- Press the H/L key to toggle the transmit power between High (25W) and Low (1W).

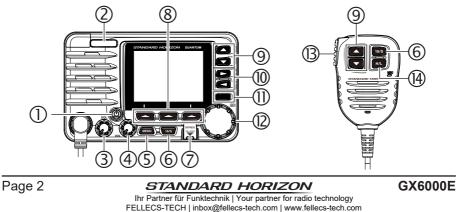

1 GENERAL INFORMATION

The STANDARD HORIZON **GX6000E** Marine VHF/FM Marine transceiver is designed to be used in International, USA, and Canadian Marine bands. The **GX6000E** can be operated from 11 to 16 VDC and has a switchable RF output power of 1 watt or 25 watts.

The **GX6000E** integrates a dual channel AIS (Automatic Identification System) receiver to display class A and B AIS vessel information (MMSI, Call Sign, Ship Name, BRG, DST, SOG and COG) directly on the LCD display. The **GX6000E** has a separate AIS antenna connection to ensure that your will be able to receive AIS signals while transmitting VHF communications. The **GX6000E** is also capable of entering and saving up to 250 waypoints, which may be selected and navigated to by using a unique navigation compass display. The **GX6000E** allows you to contact an AIS ship directly using DSC, show your vessels position in relation to AIS targets and alert you when an AIS ship may be approaching too close to your location via the Closest Point of Approach (CPA) Alarm or Time to Closest Point of Approach (TCPA) Alarm.

The **GX6000E** is capable of DSC (Digital Selective Calling) ITU-R M.493 Class D operation. Class D operation allows continuous receiving of Digital Selective Calling functions on channel 70 even if the radio is receiving a call. The **GX6000E** operates on all currently-allocated marine channels which are switchable for use with International, USA, or Canadian regulations. Emergency channel 16 can be immediately selected from any channel by pressing the red **16/S** key. NOAA weather channel can also be accessed immediately by pressing the **[WX]** soft key.

Other features of the **GX6000E** includes: Noise canceling function for transmit and receive audio, NMEA 2000 compatibility, high expandability, integrated voice recorder to play back up to two minutes of RX receive audio, speaker microphone, dual zone 25 W PA/Loud hailer with preprogrammed fog signals and listen back, capable of being connected to two optional wired **RAM4** or one wired RAM4 and four Wireless **RAM4W**^{*1} remote access microphones, allowing full control of all VHF, DSC and hailer functions remotely including an intercom feature allowing you to communicate between the radio, RAM4 and Wireless **RAM4W** microphones, scanning, priority scanning, submersible speaker microphone, high and low voltage warning, and GPS repeatability. (*1 requires SCU-30 Wireless Access Port)

2 PACKING LIST

When the package containing the transceiver is first opened, please check it for the following contents:

- Transceiver GX6000E
- Speaker Microphone
- DC Power Cord
- Mounting Bracket and Hardware
- External GPS Antenna with 15 m of Cable SCU-31*
- USB Cable (Type USB "A" plug to Type USB micro "B" plug) T9101648
- Owner's Manual
- Warranty Card

*(Depending on the transceiver version)

3 OPTIONAL ACCESSORIES

Flush-Mount Bracket Remote-Access Microphone (RAM4 Mic)	
RAM4W Wireless Remote Access Microphone	SSM-71H
Wireless Access Point	SCU-30
7 m Extension Cable for SSM-70H (RAM4) Microphone	CT-100
6 m Microphone Extension Kit (for connection to rear panel)	MEK-4
External Loud Speaker	MLS-300
12 cm Round 30 Watt Hail/PA Horn	220SW
13 × 20 cm Rectangular 40 Watt Hail/PA Horn	240SW
External GPS Antenna with 15 m of Cable	SCU-31

Safety Precautions (Be Sure to Read)

Be sure to read these important precautions, and use this product safely.

Yaesu is not liable for any failures or problems caused by the use or misuse of this product by the purchaser or any third party. Also, Yaesu is not liable for damages caused through the use of this product by the purchaser or any third party, except in cases where ordered to pay damages under the laws.

Types and meanings of the marks

A DANGER	This mark indicates an imminently hazardous situation, which, if not avoided, could result in death or serious injury.
WARNING	This mark indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
A CAUTION	This mark indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury or only property damage.

Types and meanings of symbols

These symbols signify prohibited actions, which must not be done to use this product safely. For example: indicates that the product should not be disassembled.

These symbols signify required actions, which must be done to use this product safely. For example,: So indicates that the power plug should be disconnected.





Do not operate the device when flammable gas is generated.

Doing so may result in fire and explosion.

Do not transmit with this device while carrying or using a medical appliance such as a cardiac pacemaker. When transmitting, use an external antenna and keep as far as possible away from the external antenna.

The radio wave emitted by the transmitter can cause the medical device to malfunction and result in injury or death.



 
If thunder and lightening develop nearby when an external antenna is used, immediately turn this transceiver OFF, and disconnect the external antenna from it.

A fire, electrical shock, or damage may result.

Do not touch any liquid leaking from the liquid display with your bare hands.

There is a risk of chemical burns occurring when the liquid comes into contact with the skin or gets into the eyes. In this case, seek medical treatment immediately.





Never touch the antenna during transmission. This may result in injury, electric shock and equipment failure.

Do not handle the power plug and connector etc. with wet hands. Also do not plug and unplug the power plug with wet hands.

This may result in injury, liquid leak, electric shock and equipment failure.

Disconnect the power cord and connection cables before incorporating items sold separately or replacing the fuse.

This may result in fire, electric shock and equipment failure



STANDARD HORIZON

Ihr Partner für Funktechnik | Your partner for radio technology FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

When smoke or strange odors are emitted Do not bend, twist, pull, heat and modify the from the radio, turn off the power and disconpower cord and connection cables in an unnect the power cord from the socket. reasonable manner. This may result in fire, liquid leak, overheating, This may cut or damage the cables and result in damage, ignition and equipment failure. Please fire, electric shock and equipment failure. contact our company customer support or the re-Do not pull the cable when plugging and tail store where you purchased the device. unplugging the power cord and connection Keep the power plug pins and the surroundcables. ing areas clean at all time. Always hold the plug or connector when unplugging; if not, a fire, electric shock and equipment failure may result. This may result in fire, liquid leak, overheating, breakage, ignition etc. Never cut the fuse holder off of the DC power Do not use the device when the power cord and connection cables are damaged, or when cord. This may cause a short circuit and result in ignithe DC power connector cannot be plugged tion and fire. in tightly. Contact Yaesu Amateur Customer Support or Use only the specified type fuses. the retail store where this transceiver was pur-Use of an incorrect fuse may result in fire and chased for assistance, as this may result in fire, equipment failure. electric shock and equipment failure. When connecting a DC power cord, be certain Follow the instructions provided when installing the positive and negative polarities are correct. items sold separately and replacing the fuse. Reverse connection will result in equipment This may result in fire, electric shock and equipdamage. ment failure. Do not use DC power cords other than the Use only the provided or specified screws. one enclosed or specified.

WARNING

This may result in fire, electric shock and equipment malfunctions.

Using screws of a different size, may result in

fire, electric shock and component damage.

CAUTION

Do not place the transceiver on an unsi or sloping surface, or in a location wit treme vibration.	h ex- fied options and accessories. Failure or miss operation may result.
The transceiver may fall or drop, resulting in injury and equipment damage.	pull out the DC power cord connected to the
Stay as far away from the antenna as pos during transmission. Long-term exposure to electromagnetic rad	going to be used for a long period of time. iation If not, this may result in fire and overheating.
Do not wipe the case using thinner and zene etc. Use only a soft, dry cloth to wipe stains from	ben- Strong impact forces. Physical abuse may result in component damage
case.	Keep magnetic cards and videotapes away
Reep this product out of the reach of chil Injury to the child, or damage to the transo may result.	
Do not put heavy objects on top of the p cord and connection cables. This may damage the power cord and connections, resulting in fire and electric shock.	place heavy objects on top or insert objects

STANDARD HORIZON

5 GETTING STARTED


5.1 ABOUT VHF RADIO

The radio frequencies used in the VHF marine band lie between 156 and 158 MHz with some shore stations available between 161 and 163 MHz. The marine VHF band provides communications over distances that are essentially "line of sight" (VHF signals do not travel well through objects such as buildings, hills or trees). Actual transmission range depends much more on antenna type, gain and height than on the power output of the transmitter. On a fixed mount 25 W radio transmission expected distances can be greater than 25 km, for a portable 5 W radio transmission the expected distance can be greater than 8 km in "line of sight".

5.2 SELECTING AN ANTENNA

Marine antennas are made to radiate signals equally in all horizontal directions, but not straight up. The objective of a marine antenna is to enhance the signal toward the horizon. The degree to which this is accomplished is called the antenna's gain. It is measured in decibels (dB) and is one of the major factors in choosing an antenna. In terms of effective radiated power (ERP), antennas are rated on the basis of how much gain they have over a theoretical antenna with zero gain. A 1 m, 3 dB gain antenna represents twice as much gain over the imaginary antenna.


Typically, a 1 m 3 dB gain stainless steel whip is used on a sailboat mast. The longer 2.5 m 6 dB fiberglass whip is primarily used on power boats that require the additional gain.

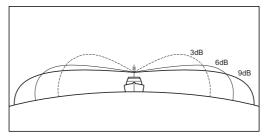

5.3 COAXIAL CABLE

VHF antennas are connected to the transceiver by means of a coaxial cable – a shielded transmission line. Coaxial cable is specified by its diameter and construction.

For runs less than 6 m, RG-58/U, about 6 mm in diameter is a good choice. For runs over 6 m but less than 15 m, the larger RG-8X or RG-213/U should be used for cable runs over 15 m RG-8X should be used. For installation of the connector onto the coaxial cable refer to the figure below.

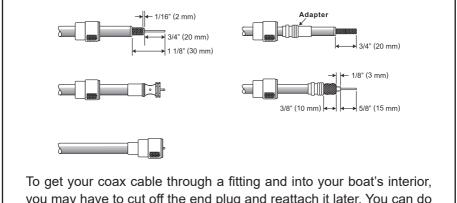

you may have to cut off the end plug and reattach it later. You can do this if you follow the directions that come with the connector. Be sure to make good soldered connections.

5.4 DISTRESS AND HAILING (CHANNEL 16)

Channel 16 is known as the Hail and Distress Channel. An emergency may be defined as a threat to life or property. In such instances, be sure the transceiver is on and set to CHANNEL 16. Then use the following procedure:

- 1. Press the microphone push-to-talk switch and say "*Mayday*, *Mayday*, *Mayday*, *Mayday*. This is _____, ____, ____" (your vessel's name).
- 2. Then repeat once: "*Mayday*, _____ " (your vessel's name).
- 3. Now report your position in latitude/longitude, or by giving a true or magnetic bearing (state which) to a well-known landmark such as a navigation aid or geographic feature such as an island or harbor entry.
- 4. Explain the nature of your distress (sinking, collision, aground, fire, heart attack, life-threatening injury, etc.).
- 5. State the kind of assistance your desire (pumps, medical aid, etc.).
- 6. Report the number of persons aboard and condition of any injured.
- 7. Estimate the present seaworthiness and condition of your vessel.

- 8. Give your vessel's description: length, design (power or sail), color and other distinguishing marks. The total transmission should not exceed 1 minute.
- 9. End the message by saying "*OVER*". Release the microphone switch and listen.
- 10. If there is no answer, repeat the above procedure. If there is still no response, try another channel.

NOTE

The **GX6000E** has the DSC Distress calling, that can transmit a distress call digitally to all ships with compatible DSC radios. Refer to section "**10 DIGITAL SELECTIVE CALLING (DSC)**".

5.5 CALLING ANOTHER VESSEL (CHANNEL 16 OR 9)

Channel 16 may be used for initial contact (hailing) with another vessel. However, its most important use is for emergency messages. This channel must be monitored at all times except when actually using another channel.

It is monitored by the U.S. and Canadian Coast Guards and by other vessels. **Use of channel 16 for hailing must be limited to initial contact only.** Calling should not exceed 30 seconds, but may be repeated 3 times at 2-minute intervals. In areas of heavy radio traffic, congestion on channel 16 resulting from its use as a hailing channel can be reduced significantly in U.S. waters by using **channel 9** as the initial contact (hailing) channel for non-emergency communications. Here, also, calling time should not exceed 30 seconds but may be repeated 3 times at 2-minute intervals.

Prior to making contact with another vessel, refer to the channel charts in this manual, and select an appropriate channel for communications after initial contact. For example, Channels 68 and 69 of the U.S. VHF Charts are some of the channels available to non-commercial (recreational) boaters. Monitor your desired channel in advance to make sure you will not be interrupting other traffic, and then go back to either channel 16 or 9 for your initial contact.

When the hailing channel (16 or 9) is clear, press the **PTT** switch on the mic and state the name of the other vessel you wish to call and then "this is" followed by the name of your vessel and your Station License (Call Sign) then release the **PTT** switch on the mic. When the other vessel returns your call, immediately request another channel by pressing the **PTT** switch on the mic and saying "*go to*," the number of the other channel, say "*over*" and release the **PTT** switch on the mic. Then switch to the new channel. When the new channel is not busy, call the other vessel.

After a transmission, say "**over**," and release the microphone's push-to-talk (**PTT**) switch. When all communication with the other vessel is completed, end the last transmission by stating your Call Sign and the word "**out**." Note that it is not necessary to state your Call Sign with each transmission, only at the beginning and end of the contact.

Remember to return to Channel 16 when not using another channel. Some radios automatically monitor Channel 16 even when set to other channels or when scanning.

5.6 MAKING TELEPHONE CALLS

To make a radiotelephone call, use a channel designated for this purpose. The fastest way to learn which channels are used for radiotelephone traffic is to ask at a local marina. Channels available for such traffic are designated *Public Correspondence* channels on the channel charts in this manual. Some examples for USA use are Channels 24, 25, 26, 27, 28, 84, 85, 86, and 87. Call the marine operator and identify yourself by your vessel's name. The marine operator will then ask you how you will pay for the call (telephone credit card, collect, etc.) and then link your radio transmission to the telephone lines.

The marine telephone company managing the VHF channel you are using may charge a link-up fee in addition to the cost of the call.

5.7 BRIDGE CHANNELS 13 AND 67

Channel 13 is used at docks, bridges and by vessels maneuvering in port. Messages on this channel must concern navigation only, such as meeting and passing in restricted waters.

Channel 67 is used for navigational traffic between vessels.

By regulation, power is normally limited to 1 Watt on these channels. Your radio is programmed to automatically reduce power to this limit on these channels. However, in certain situations it may be necessary to temporarily use a higher power. See Page 35 for means to temporarily override the low-power limit on these two channels.

5.8 AUTOMATED RADIO CHECK SERVICE

In areas across the country, Sea Tow offers boaters a way to conduct radio checks. To use Sea Tow's free Automated Radio Check service, simply tune your VHF radio to the appropriate channel for your location and conduct a radio check as you typically would. Upon releasing your radio's microphone, the system will play an automated message and relay your transmission back to you, thereby letting you know how your signal will sound to other boaters.

The Automated Radio Check Service is currently available in the areas listed below.

West Coast	Sea Tow Newport/LA - Ch. 27
Northeast	Sea Tow San Diego - Ch. 27 Sea Tow Portland-Midcoast (Maine) - Ch. 27 Sea Tow Boston - Ch. 27 Sea Tow South Shore (Mass.) - Ch. 28 Sea Tow Rhode Island - Ch. 24 Sea Tow Eastern Long Island - Ch. 27
	Sea Tow Huntington (N.Y.) - Ch. 27
	Sea Tow Manasquan (N.J.) - Ch. 28
Mid-Atlantic	Sea Tow Northern Chesapeake (Md.) - Ch. 28
	Sea Tow Central Chesapeake (Md.) - Ch. 27
	Sea Tow Hampton Roads (Va.) - Ch. 28
North Carolina	Sea Tow Wrightsville Beach - Ch. 28
	Sea Tow Ocean Isle Beach - Ch. 28
Florida	Sea Tow Sebastian - Ch. 28
	Sea Tow Fort Lauderdale - Ch. 27
	Sea Tow Charlotte Harbor - Ch. 24
	Sea Tow Tampa Bay - Ch. 27
	Sea Tow Horseshoe Beach - Ch. 27
	Sea Tow Carrabelle/St. Marks - Ch. 27
	Sea Tow Pensacola/Orange Beach (Ala.) - Ch. 27

5.9 WHAT IS THE RANGE FOR AIS RECEIVERS?

Since AIS uses similar frequencies as a marine VHF radio, it has similar radio reception capabilities - which are basically line of sight. This means that the higher the VHF antenna is mounted, the greater the reception area will be. Reception from Class A vessels that are 32 or even 48 km away on open water is not uncommon as their antennas are mounted high off the water. Class B transponders use lower power for transmissions; therefore, you can expect Class B vessels to be acquired when they are 8 to 16 km away.

NOTE

The **GX6000E** require two separate marine VHF antennas; one antenna for VHF and a second antenna for AIS.

For additional information on AIS visit the USCG website: http://www.navcen.uscg.gov/marcomms/ais.htm

5.10 Accuracy of COG*

The error in the COG (the path of the antenna position over ground) due to the actual ship's speed over ground shall not exceed the following values:


Speed range (knots)	Accuracy of COG output to user
0 to ≤1 knot	Unreliable or not available
>1 to ≤17 knots	±3°
>17 knots	±1°

* Only when the SCU-31 external GPS antenna connected.

6 CONTROLS AND INDICATORS

This section defines each control of the transceiver. See illustration below for location of controls. For detailed operating instructions refer to chapter 7 of this manual.

6.1 FRONT PANEL

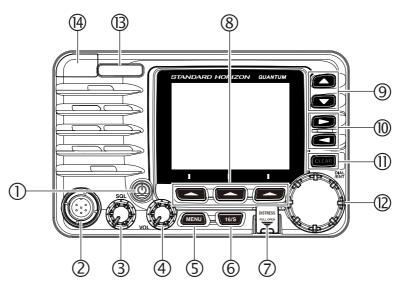

①() (Power) key

Press and hold to toggle the radio on or off. When the power is turned on, the transceiver is set to the last selected channel.

②MIC Connector

Connects the supplied speaker microphone.

③ SQL knob (Squelch control)

Adjusting this control clockwise, sets the point at which random noise on the channel does not activate the audio circuits but a received signal does. This point is called the squelch threshold. Further adjustment of the squelch control will degrade reception of wanted transmissions.

④ **VOL** knob (Volume control)

Adjusts the audio volume level.

Clockwise rotation of this knob increases the internal and speaker microphone volume.

SECONDARY USE

When in the PA or Fog mode, controls the listen-back volume.

Page 12

⑤ MENU key

Press to access MENU. For details, refer to section "8.4 BASIC OPERA-TION OF THE MENU MODE".

6 16/S key

Pressing this key immediately recalls channel 16 from any channel location. Holding down this key selects the SUB channel (The default setting is channel 9). Pressing this key again reverts to the previous selected working channel.

⑦ DISTRESS key

Used to send a DSC Distress Call. To send the distress call, refer to section **"10.2.1 Transmitting a DSC Distress Alert**".

⑧ Soft keys

The 3 programmable soft keys can be customized by the Setup Menu mode described in section "**15.8 SOFT KEYS**".

⑨ ▲/▼ key

These keys are used to change the operating channel. The Up/Down keys on the microphone can also be used to change the operating channel. Press the key momentarily, the channel increases/decreases one step. Holding the key, the channel increases/decreases continuously.

SECONDARY USE

• While the MENU screen is displayed, press the key to slide the on-screen menu upward/downward.

(1) ►/◄ key

Press these keys to switch the function of soft keys.

SECONDARY USE

While the MENU screen is displayed, press the key to slide the on-screen menu to the right/left side.

(1) CLEAR key

Press this key to cancel a menu selection.

DIAL/ENT knob

While the normal screen is displayed, rotate the **DIAL/ENT** knob to select your desired channel. While the MENU screen is displayed, rotate the knob to select your desired menu item.

SECONDARY USE

• Press this knob to enter a selection in the MENU.

^(B) MODE/STATUS indicator


Indicates the radio status with the four colors on the three positions of the mode/status indicator.

Position	Color	Description
	Blue	AIS-Board Working
Left	Purple	Receiving MSG23
	Red	AIS-Board Failed
	Green	AIS Receiving (registered MMSI)
Right	Orange	AIS Receiving (unregistered MMSI)
	Red	Receive Error

DATA jack

Use the USB micro type B jack to configure the transceiver settings and download' the GPS logger data. (*Requires SCU-31 external GPS antenna.) *Note*: When the DATA jack is securely covered with rubber cap, the **GX6000E** meets the waterproofing performance.

6.2 MICROPHONE

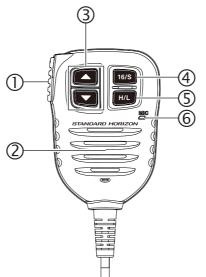

① PTT (Push-To-Talk) switch

When in radio mode and the **PTT** switch is pressed, the transmitter is enabled for voice communications to another vessel.

When PA mode is selected, pressing the **PTT** switch allows your voice to be amplified and supplied to a connected PA horn.

When an optional **RAM4** and **RAM4W** mic is connected and intercom mode is selected, pressing the **PTT** switch enables voice communications from the **GX6000E** to the **RAM4** and **RAM4W** second station microphone.

② Microphone speaker

Audio heard through internal radio speaker is heard through the speaker microphone.

③ ▲/▼ key

These keys on the microphone are used to select channels and to choose menu items.

④16/S key

Pressing this key immediately selects channel 16 from any channel location. Holding down this key selects the SUB channel (The default setting is channel 9). Pressing this key again reverts to the previous selected working channel.

⑤H/L key


Press this key to toggle between 25 W (High) and 1 W (Low) power. When the TX output power is set to "Low" while the transceiver is on channel 13 or 67, the output power will temporarily switch from "Low" to "High" power until the **PTT** switch of the microphone is released. This key is not available on transmit inhibited and low power only channels.

6 Microphone

The internal microphone transmits your voice reducing background noise using Clear Voice Noise Reduction Technology.

Note: Position your mouth about 1.5 cm away from the microphone hole and speak in a normal voice.

6.3 REAR PANEL

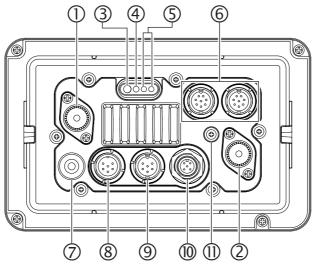

①VHF ANT jack (VHF antenna jack)

Connects an antenna to the transceiver. Use a marine VHF antenna with an impedance of 50 ohms.

Note: This **ANT** jack is used to marine voice channel.

- ② AIS ANT jack (AIS antenna jack) Connects an antenna to the AIS receiver. Use a marine VHF antenna with an impedance of 50 ohms.
- ③ PA Speaker Connection Cable (Orange, Yellow, Green & Blue) Connects the GX6000E to PA speakers. See section "3 OPTIONAL ACCES-SORIES" for a list of optional STANDARD HORIZON Speakers.

Green: PA1 Speaker (+)

Blue: PA1 Speaker (-)

```
Orange: PA2 Speaker (+)
```

```
Yellow: PA2 Speaker (-)
```

④ EXTERNAL Speaker Connection Cable (Red & White)

Connects the **GX6000E** to an optional external speaker. Refer to section "**3 OPTIONAL ACCESSORIES**" for a list of optional STANDARD HORIZON Speakers.

```
Red: External Speaker (+)
```

```
White: External Speaker (-)
```

⑤ DC Input Cable

Connects the radio to a DC power supply capable of delivering 11 to 16 VDC.


STANDARD HORIZON

- (6) RAM-1/RAM-2 Remote Access Microphone Connectors Connects the GX6000E to the SSM-70H (RAM4) Remote Station Microphone or SCU-30 Wireless Access Point^{*} for use with up to four SSM-71H (RAM4W) wireless microphones. Refer to section "20 SSM-70H (RAM4) REMOTE MIC OPERATION" for details. (* The SCU-30 Wireless Access Point may be connected only to the RAM-1 connector.)
- MMEA 0183 In/Out & NMEA 0183-HS OUT Connection Cable (Blue, Green, Gray, Brown, Yellow & White)
 Connects the **GX6000E** to a GPS chart plotter. Refer to section "7.5 CONNECTION OF EXTERNAL DEVICES TO THE RADIO".
- **® Rear MIC Connector**

Connects the supplied hand microphone if desired. This connector provides the same function as that on the front panel and allows remote use of the microphone by using the optional **MEK-4** (microphone extension kit).

- ③ GPS ANT Connector (White) Connects the SCU-31 external GPS antenna.
- Image: Market With State (Black) Connects to the NMEA 2000 network.
- (1) GND Terminal (Ground Terminal)

Connects the **GX6000E** to ships ground, for safe and optimum performance. Use the screw supplied with the **GX6000E** only.

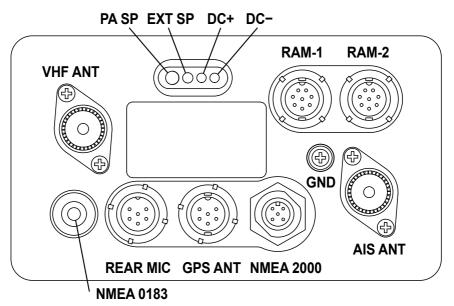

7 INSTALLATION

7.1 SAFETY / WARNING INFORMATION

This radio is restricted to occupational use, work related operations only where the radio operator must have the knowledge to control the exposure conditions of its passengers and bystanders by maintaining the minimum separation distance of 1 m. Failure to observe these restrictions will result in exceeding the FCC RF exposure limits.

Antenna Installation:

The antenna must be located at least 1 m away from passengers in order to comply with the FCC RF exposure requirements.

7.2 LOCATION

The radio can be mounted at any angle. Choose a mounting location that:

• complies with the compass safe distances shown in the table below to prevent interference to a magnetic compass

Transceiver Unit	1.0 m
Handset	0.5 m

- provides accessibility to the front panel controls
- allows connection to a power source and antennas
- has nearby space for installation of a microphone hanger
- is at least 1 m away from the radio's antenna
- the signal from the GPS satellite can receive sufficiently

Note: To insure the radio does not affect the compass or radios performance is not affected by the antenna location, temporarily connect the radio in the desired location and:


- a. Examine the compass to see if the radio causes any deviation
- b. Connect the antenna and key the radio. Check to ensure the radio is operating correctly by requesting a radio check.


7.3 MOUNTING THE RADIO

7.3.1 Supplied Mounting Bracket

The supplied mounting bracket allows overhead or desktop mounting.

Use a 5.2 mm bit to drill the holes to a surface which is more 10 mm thick and can support more than 1.5 kg and secure the bracket with the supplied screws, spring washers, flat washers, and nuts.

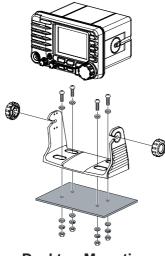

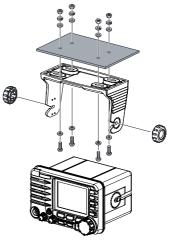


Desktop Mounting

Overhead Mounting

7.3.2 Optional MMB-84 Flush Mount Bracket

- Use the template (page 153) to mark the location where the rectangular hole is to be cut. Confirm the space behind the dash or panel is deep enough to accommodate the transceiver (at least 17 cm deep). There should be at least 1.3 cm between the transceivers heatsink and any wiring, cables or structures.
- 2. Cut out the rectangular hole and insert the transceiver.
- 3. Fasten the brackets to the sides of the transceiver with the lock washer screw combination; so that the mounting screw base faces the mounting surface (see illustration below).
- 4. Turn the adjusting screw to adjust the tension so that the transceiver is tight against the mounting surface.

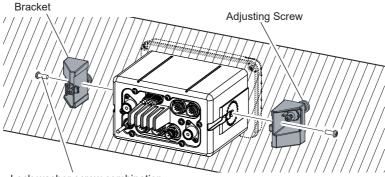

Lock-washer screw combination


7.4 ELECTRICAL CONNECTIONS

CAUTION

Reverse polarity battery connections will damage the radio!

Connect the power cord and antenna to the radio. Antenna and Power Supply connections are as follows:


- Mount the antenna at least 1 m away from the radio. At the rear of the radio, connect the antenna cable. The antenna cable must have a PL259 connector attached. RG-8/U coaxial cable must be used if the antenna is 7.6 m or more from the radio. RG58 cable can be used for distances less than 7.6 m.
- 2. Connect the red power wire to a 13.8 VDC ±20% power source. Connect the black power wire to a negative ground.
- 3. If an optional remote extension speaker is to be used, refer to section 7.5 for connections.
- 4. It is advisable to have a Certified Marine Technician check the power output and the standing wave ratio of the antenna after installation.

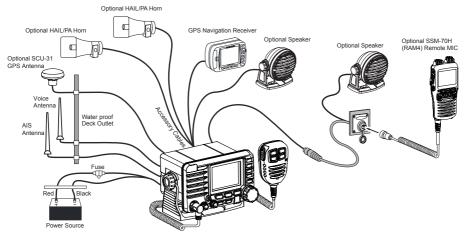




Ferrite Cores

To suppress RF interference that can cause abnormal operation of the transceiver, attach the supplied two ferrite cores as shown in the next page: bigger one to the accessory connection cable and the DC input cable together, and smaller one to the PA speaker connection cable and the external speaker connection cable together. Then snap the two halves of each ferrite core together. Attach each ferrite core as close as possible to the transceiver body. Finally, wind some plastic tape around each ferrite core, to prevent vibration from causing the two halves to split apart.

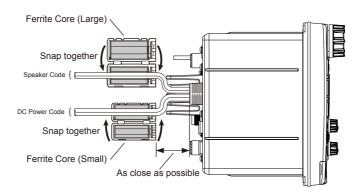

Fuse Replacement

 
To take out the fuse from the fuse holder, hold both ends of the fuse holder and pull the fuse holder apart without bending the fuse holder. When you replace the fuse, please confirm that the fuse is tightly fixed on the metal contact located inside the fuse holder. If the metal contact holding the fuse is loose, the fuse holder may heat up.



STANDARD HORIZON Ihr Partner für Funktechnik | Your partner för radio technology FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

7.5 CONNECTION OF EXTERNAL DEVICES TO THE RADIO 7.5.1 Connecting the SCU-31 External GPS Antenna to the Radio

Connect the **SCU-31** cable to the GPS ANT (six pin) connector (White) on the rear panel, then tighten the cable nut (see illustration at the right).

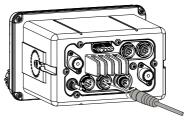

7.5.2 Connecting the NMEA 0183/NMEA 0183-HS to the Radio

External GPS Connections (NMEA 0183 4800 baud or NMEA 0183-HS 38400 baud)

The **GX6000E** can select the NMEA baud rate between "4800 bps" and "38400 bps". Refer to section "**18.9 NMEA 0183 IN/OUT**" for selection.

NMEA Input (GPS Information)

- **GX6000E** can read NMEA 0183 version 2.0 or higher, and NMEA 0183-HS version 1.01 or higher.
- The NMEA 0183 input sentences are GLL, GGA, RMC, GNS, GSA, and GSV (RMC sentence is recommended).
- If 4800 baud (default) is selected: The Blue and Green wires of input are at 4800 baud.
- If 38400 baud is selected: The Blue and Green wires of input are at 38400 baud.

NMEA Output (DSC and GPS information)

- The NMEA 0183 output sentences are DSC and DSE.
 - a. The Gray and Brown wires output DSC and DSE sentences.
 - b. The Yellow and White wires always output AIS sentences at 38400 baud.
- GSA, GSV, GLL, GGA, and RMC sentences can be output in the **GX6000E** by setting through the GPS setup menu (refer to section "**18.9 NMEA 0183 IN/OUT**").

For further information on interfacing/setting up your GPS, please contact the manufacturer of the GPS receiver externally connected.

If you have further questions, please contact your Dealer.

7.5.3 Accessory Cables and NMEA 0183 Cables

The image and table below show the wires of the **GX6000E** and the connections to optional devices such as an external GPS antenna, GPS chart plotter and an AIS receiver.

CAUTION


Care must be taken not to touch any of the NMEA wires to positive 12 VDC or the radio may be damaged.

When connecting the GPS navigation receiver, strip off about 2.5 cm of the specified wire's insulation, then splice the ends together.

The **GX6000E** uses NMEA 0183/-HS protocol to share coordinates, DSC and AIS information to and from a GPS chart plotter. The **GX6000E** transfers AIS information to a GPS chart plotter at 38400 baud (sometimes called HS or High Speed). GPS and DSC information is transferred between a GPS chart plotter with multiple ports (minimum 2) at 4800 baud (default setting).

7.5.4 NMEA 0813/NMEA 0183-HS to Chart Plotter

4800 / 38400 Baud Connections

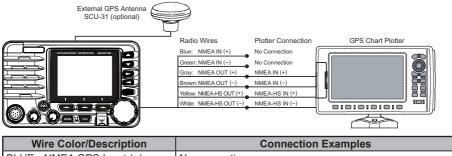


Wire Color/Description	Connection Examples
BLUE - NMEA GPS Input (+)	No connection
GREEN - NMEA GPS Input (-)	No connection
GRAY - NMEA DSC Output (+)	NMEA (+) input of GPS
BROWN - NMEA DSC Output (-)	NMEA (-) input of GPS
YELLOW - AIS Data Output (+)	NMEA-HS (+) input of AIS receiver*1
WHITE - AIS Data Output (-)	NMEA-HS (-) input of AIS receiver*1

*1: The **GX6000E** always outputs NMEA 0183-HS VDM sentence at 38400 baud.

Note: Some GPS chart plotters have a single wire for NMEA signal ground. In such a case connect the NMEA input (-) to the GPS chart plotter's single NMEA signal ground wire, and leave the NMEA output (-) open. In case the assignment of power supply and ground of a GPS chart plotter to be used is different from that of the radio, connect the signal ground wire of the GPS chart plotter to the ground terminal (GND) on the rear panel of the radio.

7.5.5 Connection to External GPS or Chart Plotter

 4800 / 38400 Baud Connections




Wire Color/Description	Connection Examples
BLUE - NMEA GPS Input (+)	NMEA (+) output of GPS
GREEN - NMEA GPS Input (-)	NMEA (-) output or common ground of GPS
GRAY - NMEA DSC Output (+)	NMEA (+) input of GPS
BROWN - NMEA DSC Output (-)	NMEA (-) input of GPS
YELLOW - AIS Data Output (+)	NMEA-HS (+) input of AIS receiver*1
WHITE - AIS Data Output (-)	NMEA-HS (-) input of AIS receiver*1

*1: The GX6000E always outputs NMEA 0183-HS VDM sentence at 38400 baud.

Note: Some GPS chart plotters have a single wire for NMEA signal ground. In such a case connect the NMEA input (-) to the GPS chart plotter's single NMEA signal ground wire, and leave the NMEA output (-) open. In case the assignment of power supply and ground of a GPS chart plotter to be used is different from that of the radio, connect the signal ground wire of the GPS chart plotter to the ground terminal (GND) on the rear panel of the radio.


7.5.6 Connection to External PA/HAIL Speaker

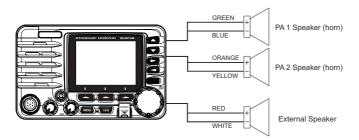

Wire Color/Description	Connection Examples
RED - External Speaker (+)	Positive wire of external 4 Ohm External speaker
WHITE - External Speaker (-)	Negative wire of external 4 Ohm External speaker
GREEN - PA1 Speaker (+)	Positive wire of external 4 Ohm audio speaker (horn)
BLUE - PA1 Speaker (−)	Negative wire of external 4 Ohm audio speaker (horn)
ORANGE - PA2 Speaker (+)	Positive wire of external 4 Ohm audio speaker (horn)
YELLOW - PA2 Speaker (-)	Negative wire of external 4 Ohm audio speaker (horn)


In some areas powerful AM broadcast stations may be heard when in listenback mode. In this case change the speaker wire to 2-conductor shielded audio cable. See the illustration below for connections.

 Page 24



7.5.7 Rear Microphone Installation

The **GX6000E** has an additional microphone connector on the rear panel that provides the same function as that on the front panel. Connect the optional MEK-4 (microphone extension kit) to the Rear MIC (six pin) connector on the rear panel, then tighten the cable nut (see illustration at the below).

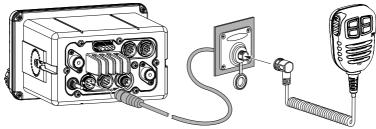

In addition, the **GX6000E** is capable of connecting hand microphone to the connector on either the front or rear panels.



Optional SSM-70H (RAM4) Installation

The **GX6000E** is capable of using two **SSM-70H** (**RAM4**) Remote Station Microphones to remotely control the Radio, AIS, DSC and PA/Fog functions. In addition the **GX6000E** can operate as a full function intercom system between the **SSM-70H** (**RAM4**) and the **GX6000E**.


WARNING

Do not connect or remove the SSM-70H (RAM4) microphone while the radio is powered on. This may result in equipment failure.

1. Connect the Routing Cable (supplied with the **SSM-70H**) to the RAM-1 or RAM-2 (eight pin) connectors on the rear panel, then tighten the cable nut (see illustration at the below).



- 2. Install the two ferrite core (supplied with the **SSM-70H** Remote Station Microphone) to the routing cable or the **CT-100** extension cable, then snap its two halves together. These require to install near the connector by the each side of a transceiver and a microphone of the cable.
- 3. Attach the ferrite cores as close as possible to the plugs, as shown below.

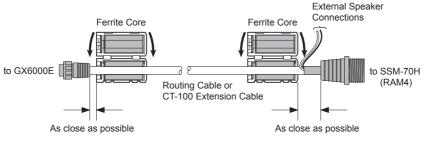

NOTE

Caution!: Before cutting the cable, it must be disconnected from the rear panel of the transceiver.

The routing cable can be cut and spliced, however care needs to be taken when reconnecting the wires to ensure water integrity.


After cutting you will notice there are the following wires:

Yellow, White, Brown, Gray, Blue, Green, Red/White*, Shield*

* The red/white and shield wires are wrapped in foil. Remove the foil, and separate the red/white and shield wires.

STANDARD HORIZON

- 4. Finally, wind some plastic tape around each ferrite core, to prevent vibration from causing the two halves to split apart.
- 5. Referring to illustration right, make a 30 mm hole in the wall, then insert the extension cable into this hole. Connect the gasket and mount base to the extension cable connector using the nut.
- Drill the four screw holes (approx. 2 mm) on the wall, then install the mounting base to the wall using four screws.
- 7. Put the rubber cap on to the nut. The installation is now complete.

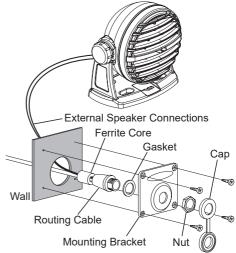

WARNING

It is not recommended to plug or unplug the **SSM-70H** (**RAM4**) Remote Station Microphone into the routing cable while the radio is powered on.

Connecting an External Speaker to the RAM4 Mic Cable

In noisy locations and **MLS-300/MLS-310** optional external speaker may be connected to the white speaker wires on the **RAM4** routing cable. The **RAM4** can drive the internal speaker or the external speaker one at a time. When connecting an external speaker, follow the procedure below to turn off the **RAM4** audio and enable the external speaker wires on the **RAM4** routing cable.

- 1. On the **RAM4** mic, press the **MENU** key to display "**MENU**".
- 2. Rotate the **DIAL/ENT** knob to select "**SETUP**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**CONFIGURA-TION**", then press the **[SELECT]** soft key.



- 4. Rotate the **DIAL/ENT** knob to select "**SPEAKER SELECT**", then press the **[SELECT]** soft key.
- Rotate the DIAL/ENT knob to select "INTERNAL" or "EXTERNAL", then press the [SELECT] soft key.
- 6. Press the **CLEAR/On** key to return to radio operation.

7.6 INITIAL SETUP REQUIRED WHEN TURNING ON THE POWER FOR THE FIRST TIME

7.6.1 Maritime Mobile Service Identity (MMSI)

What is an MMSI?

An MMSI is a nine digit number used on marine transceivers capable of using Digital Selective Calling (DSC) and Automatic Identification System (AIS) signal transmission. This number is used like a telephone number to selectively call other vessels.

THIS NUMBER MUST BE PROGRAMMED INTO THE RADIO TO OPERATE DSC FUNCTIONS.

How can I obtain an MMSI assignment?

Please contact the Radio Licensing Authority for your country for information on how to obtain an MMSI number.

WARNING

The MMSI can be inputted only once, please be careful not to input the incorrect MMSI number. If you need to change the MMSI number after it has been entered, the radio will have to be returned to Factory Service. Refer to the section "22.2 FACTORY SERVICE".

Programming the MMSI

- 1. Press the MENU key to display "MENU".
- Rotate the DIAL/ENT knob to select "MMSI/POS INFO", then press the [SELECT] soft key. (To cancel, press the [BACK] soft key.) To view your MMSI to ensure it is correct, perform steps 1 to 2.







Page 29

NOTE To view your MMSI after programming to ensure it is correct, perform steps 1 to 2. Look that the MMSI number shown on the display is correct.

- 7. When finished programming the MMSI number, press the [FINISH] soft key. The radio will ask you to input the MMSI number again. Perform steps 4 through 6 above.
- 8. After the second number has been input, press the [FINISH] soft key to store the MMSI.
- 9. Press the **[OK]** soft key to return to radio operation.



OK

3. Press the [MMSI] soft key.

The [MMSI] soft key is displayed which has not yet set the MMSI.

In the case of the GX6000E which has completed the MMSI setting, you can only check the MMSI on this screen.

- 4. Rotate the **DIAL/ENT** knob to select the first number of your MMSI, then press the [SELECT] soft key to step to the next number.
- Repeat step 4 to set your MMSI number (9 digits).

6. If a mistake was made entering in the MMSI number,

selected, then perform step 4.

rotate the **DIAL/ENT** knob to select " \leftarrow " or " \rightarrow ", press

the [SELECT] soft key until the wrong character is

MMSI/POS INFOMATION MMST ******

7.7 CHECKING GPS SIGNAL (GPS STATUS DISPLAY)

When the **GX6000E** receives the GPS signal from the SCU-31, a small satellite icon "BAB"* will appear on the display and your current location (latitude/ longitude) is shown on the display. (*When the GPS signal receiving from the NMEA 2000 or NEMA-0183, a "2K" (NMEA 2000) icon or "I/O" (NMEA-0183) icon will appear on the display.)

NOTE

 
If there is a problem with the NMEA connection between the radio and the GPS, the GPS icon will blink continuously until the connection is corrected.

The **GX6000E** has a GPS status display which shows the satellites currently being received, along with a graphical (bar-graph) representation of the relative signal strengths from the satellites.

For the **GX6000E** to properly show the GPS status page when an external GPS antenna or a chart plotter is connected it must be setup to output GSA and GSV NMEA 0183 sentences. When using the equipment of NMEA 2000, it must be able to output PGN No.129540 (GNSS Sats in View).


NOTE

- 1. Press the **MENU** key to display "**MENU**".
- 2. Rotate the **DIAL/ENT** knob to select "**GPS**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**GPS STATUS**", then press the **[ENTER]** soft key to display the GPS status currently being received.
- 4. Press the **CLEAR** key to return to radio operation.



(808)

RUSY USA CIO

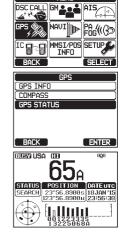

MENH

7.8 GPS CONFIGURATION

7.8.1 Changing the GPS Time

The **GX6000E** shows GPS satellite time or UTC (Universal Time Coordinated) time in factory default. A time offset is needed to show the local time in your area. The time offset must be changed in order for the radio to display the current time in your area.

- 1. Press the MENU key to display "MENU".
- 2. Rotate the **DIAL/ENT** knob to select "**SETUP**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**GPS SETUP**", then press the **[SELECT]** soft key.
- 4. Rotate the **DIAL/ENT** knob to select "**TIME OFFSET**", then press the **[SELECT]** soft key.
- 5. Rotate the **DIAL/ENT** knob to select time offset of your location. If "00:00" is assigned, the time is the same as UTC or GPS satellite time.
- 6. Press the **[ENTER]** soft key to store the time offset.
- 7. Press the **CLEAR** key to return to radio operation.

7.8.2 Changing the Time Area

This menu selection allows the radio to show UTC time or local time with offset.

- 1. Press the MENU key to display "MENU".
- Rotate the DIAL/ENT knob to select "SETUP", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**GPS SETUP**", then press the **[SELECT]** soft key.



PA ((G



- 4. Rotate the **DIAL/ENT** knob to select "**TIME AREA**", then press the **[SELECT]** soft key.
- 5. Rotate the **DIAL/ENT** knob to select "**UTC**" or "**LOCAL**".
- 6. Press the **[ENTER]** soft key to store the selected setting.
- 7. Press the **CLEAR** key to return to radio operation.

7.8.3 Changing the Time Format

This menu selection allows the radio to setup to show time in 12-hour or 24-hour format.

- 1. Press the **MENU** key to display "**MENU**".
- 2. Rotate the **DIAL/ENT** knob to select "**SETUP**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**GPS SETUP**", then press the **[SELECT]** soft key.
- 4. Rotate the **DIAL/ENT** knob to select "**TIME FORMAT**", then press the **[SELECT]** soft key.
- 5. Rotate the **DIAL/ENT** knob to select "**24hour**" or "**12hour**".
- 6. Press the **[ENTER]** soft key to store the selected setting.
- 7. Press the **CLEAR** key to return to radio operation.





GX6000E

7.8.4 Changing COG to True or Magnetic

Allows the GPS COG (Course Over Ground) and the BRG from an AIS target to be selected to show in ON or OFF. Factory default is "OFF" however by following the steps below the COG can be changed to "ON".

- 1. Press the **MENU** key to display "**MENU**".
- Rotate the DIAL/ENT knob to select "SETUP", then press the [SELECT] soft key.
- Rotate the DIAL/ENT knob to select "GPS SETUP", then press the [SELECT] soft key.
- 4. Rotate the **DIAL/ENT** knob to select "**MAGNETIC VARIATION**", then press the **[SELECT]** soft key.
- 5. Rotate the DIAL/ENT knob to select "OFF" or "ON".
- 6. Press the **[ENTER]** soft key to store the selected setting.
- 7. Press the **CLEAR** key to return to radio operation.

NOTE

Setting to "ON" is effective only when the RMC sentences with magnetic data are input from external devices such as a GPS receiver (The SCU-31 inputs the RMC sentences, but does not input with magnetic data.).



8 **BASIC OPERATION**

8.1 TURNING ON AND OFF THE TRANSCEIVER

- 1. After the transceiver has been installed, ensure that the power supply and antenna are properly connected.
- 2. Press and hold the key to turn the radio on.
- 3. Press and hold the 0 key again to turn the radio off.

8.2 RECEPTION

- 1. Rotate the **SQL** knob fully counterclockwise. This state is known as "squelch off".
- 2. Turn up the **VOL** knob until noise or audio from the speaker is at a comfortable level.
- 3. Rotate the **SQL** knob, clockwise until the random noise disappears. This state is known as the "squelch threshold".
- Rotate the DIAL/ENT knob or press the ▲/▼ key to select the desired channel. Refer to the channel chart on Page 144 for available channels.
- 5. When a message is received, adjust the volume to the desired listening level. The "**[BUSY]**" indicator on the display indicates that communications are being received.

8.3 TRANSMISSION

- 1. Perform steps 1 through 4 of RECEPTION.
- 2. Before transmitting, monitor the channel to ensure it is clear. THIS IS AN FCC REQUIREMENT!
- 3. Press the microphone's **PTT** (push-to-talk) switch. The "**[TX]**" indicator on the LCD is displayed.
- 4. Speak slowly and clearly into the microphone.
- 5. When the transmission is finished, release the microphone's **PTT** switch.

NOTE

Position your mouth about 1.5 cm away from the microphone hole and speak in a normal voice.







8.3.1 Transmit Power

The TX output power of the **GX6000E** is set to high level (25 W) in factory default, and the "**[HI]**" indicator is displayed on the top part of the screen.

To switch the TX output power:

- Press the ►/◄ key repeatedly until the [HI] or [LOW] soft key is displayed at the bottom of the screen.
- 2. Press the **[HI]** or **[LOW]** soft key to switch between HI (25 W) or LO (1 W) output power.

 
When the TX output power is set to "Low" while the transceiver is on channel 13 or 67, the output power will temporarily switch from "Low" to "High" power until the **PTT** switch of the microphone is released. This soft key is not function on transmit inhibited and low power only channels.



8.4 BASIC OPERATION OF THE MENU MODE

Using the menu mode, the various functions of the **GX6000E** can be customized to match the method of use. You can select the items that you would like to adjust from the respective lists and enter or select the appropriate settings for the intended various operation.

- 1. Press the **MENU** key on the operation mode screen to display "**MENU**".
- Rotate the DIAL/ENT knob or press the ▲/▼/►/◀ key to select the menu item, then press the [SELECT] soft key or press the DIAL/ENT knob to display "MENU LIST".
- Rotate the DIAL/ENT knob or press the ▲/▼ key to select the item, then press the [SELECT] soft key or press the DIAL/ENT knob.
- Rotate the DIAL/ENT knob or press the ▲/▼ key to select the item, then press the [SELECT] soft key or press the DIAL/ENT knob.





 Rotate the DIAL/ENT knob or press the ▲/▼ key to select the desired setting.

DSC SETUR	
INDIVIDUAL DIR	ECTORY
ADD	
EDIT	
DELETE	
BACK	SELECT

- 6. Press the **[ENTER]** soft key to or press the **DIAL/ENT** knob store the selected setting.
- Press the CLEAR key to return to radio operation. (The display can also be returned to the previous screen by pressing the [BACK] soft key.)

The same operation process as the above is written as follows in this operation manual.

8.5 TRANSMIT TIME-OUT TIMER (TOT)

When the **PTT** switch on the microphone is held down, transmit time is limited to 5 minutes. This limits unintentional transmissions due to a stuck microphone. About 10 seconds before automatic transmitter shutdown, a warning beep will be heard from the speaker(s). The transceiver will automatically go to receive mode, even if the **PTT** switch is continually held down. Before transmitting again, the **PTT** switch must first be released and then pressed again.

NOTE

Once the transmitter is shut down by the TOT, transmission to the last channel is only allowed 10 seconds after the shutdown.

8.6 SIMPLEX/DUPLEX CHANNEL USE

Refer to the **VHF MARINE CHANNEL CHART** (Page 144) for instructions on use of simplex and duplex channels.

NOTE

All channels are factory-programmed in accordance with FCC (USA), Industry Canada (Canada), and International regulations. Mode of operation cannot be altered from simplex to duplex or vice-versa.

8.7 INTERNATIONAL, USA, AND CANADA MODE

To change the channel group from International to USA or Canada:

- 1. Press the MENU key to display "MENU".
- Rotate the DIAL/ENT knob to select "SETUP", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**CHANNEL SETUP**", then press the **[SELECT]** soft key.
- 4. Rotate the **DIAL/ENT** knob to select "**CHANNEL GROUP**", then press the **[SELECT]** soft key.
- 5. Rotate the **DIAL/ENT** knob to select desired channel group "**USA**", "**INTL**", or "**CAN**".
- 6. Press the **[ENTER]** soft key to store the selected setting.
- 7. Press the **CLEAR** key to return to radio operation.

8.8 NOAA WEATHER CHANNELS

- To receive a NOAA weather channel, press the ►/< key repeatedly until the [WX] soft key is displayed at the bottom of the screen.
- 2. Press the **[WX]** soft key. The "**WX**" indicator appears on the top part of the screen.
- 3. Rotate the **DIAL/ENT** knob to select a different NOAA weather channel.
- To exit from the NOAA weather channels, press the [CH] soft key. The transceiver returns to the channel it was on prior to a weather channel and the "WX" indicator disappears from the display.





ENTER

BACK

8.8.1 NOAA Weather Alert

In the event of extreme weather disturbances, such as storms and hurricanes, the NOAA (National Oceanic and Atmospheric Administration) sends a weather alert accompanied by a 1050 Hz tone and subsequent weather report on one of the NOAA weather channels.

The **GX6000E** can receive weather alerts when monitoring a weather channel and, on the last selected weather channel during scanning modes or while on another working channel.

When an alert is received on a NOAA weather channel, scanning will stop and the transceiver will emit a loud beep to alert the user of a NOAA broadcast. Press any key to stop the alert. After stopping the beep sound, the weather alert reception confirmation screen will appear. Press **[OK]** to display a confirmation screen. The confirmation screen will ask you whether to move to the weather channel or return in the marine channel. Press **[YES]** to switch to the weather channel.



To disable the weather alert function, refer to section "16.2 WEATHER ALERT".

NOTE

If no key is pressed the alert will sound for 5 minutes and then the weather report will be received.

8.8.2 NOAA Weather Alert Testing

NOAA tests the alert system ever Wednesday between 11AM and 1PM. To test the **GX6000E**'s NOAA weather feature, setup as in section "**8.8.1 NOAA Weather Alert**" and confirm the alert is heard on Wednesdays between 11AM and 1PM local time.

8.9 MULTI WATCH (TO PRIORITY CHANNEL)

Multi watch is used to scan two or three channels for communications.

- In Dual Watch, a normal VHF channel and the priority channel are scanned alternately.
- In Triple Watch, a normal VHF channel, the priority channel, and the sub channel are scanned alternately.

When a signal is received on the normal channel the radio briefly switches between the normal channel and the priority channel to look for a transmission. If the radio receives communications on the priority channel the radio stops and listens to priority channel until communication ends and then starts dual or triple watch scan again.

8.9.1 Setting up the Multi Watch Operation

- Rotate the DIAL/ENT knob to select "DUAL" or "TRIPLE".
- 3. Press the **[ENTER]** soft key to store the selected setting.



4. Press the **[CLEAR]** key to return to radio operation.

8.9.2 Starting the Dual Watch

- 1. Adjust the **SQL** knob until the background noise disappears.
- 2. Rotate the DIAL/ENT knob to select a channel you wish to watch.
- Press ►/◀ key repeatedly until the [DUAL WATCH] soft key is displayed at the bottom of the screen, press the [DUAL WATCH] soft key.

The radio will monitor the priority channel and the channel that was selected in step 2.

If a signal is received on the channel selected in step 2, the **GX6000E** will dual watch to priority channel.

4. To stop dual watch, press the [DUAL WATCH] soft key again.

When selecting "**TRIPLE**" in the SETUP menu, **[TRIPLE WATCH]** will be displayed as the soft key instead of **[DUAL WATCH]**.



NOTE

The priority channel may be changed from CH16 (default) to another channel. Refer to section **"16.7 PRIORITY CHANNEL**".

8.10 SCANNING

"MFMORY"

1.


The **GX6000E** will automatically scan channels programmed into the preset channel memory and also the scan channel memory, and the last selected weather channel.

When an incoming signal is detected on one of the channels during scan, the radio will pause on that channel, allowing you to listen to the incoming transmission. The radio will automatically start scanning again after the transmission stops.

[/ ■ SETUP" → "CHANNEL SETUP" → "SCAN TYPE"

Rotate the DIAL/ENT knob to select "PRIORITY" or

8.10.1 Selecting the Scan Type

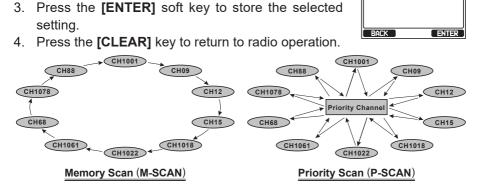

8.10.2 Programming Scan Memory

Rotate the **DIAL/ENT** knob to select a desired channel to be scanned, then press the **[MEM]** soft keys.
 "ON" icon will appear at the right side of the selected channel.

CHANNEL SETUP
SCAN MEMORY
CH: 16 🛛 🕅
CH: 17 ON
CH: 18A
CH: 19
CH: 20A ON
BACK

HANNEL SETLIE

SCAN TYPE PRIORITY

MEMORY

3. Repeat step 2 for all the desired channels to be scanned.

 
- 4. To REMOVE a channel from the list, select the channel then press the [MEM] soft key. "ON" icon of the selected channel will disappear.
- 5. When you have completed your selection, press the **CLEAR** key to return to radio operation.

To check channels to be scanned, rotate the **DIAL/ENT** knob. The "[MEM]" icon will appear when the memory channel is displayed.

Note: When "SCAN MEMORY" is assigned to the soft key, the memory function switches between on and off every time you press the [MEM] soft key.

8.10.3 Memory Scanning (M-SCAN)

- 1. Set the scan type to "MEMORY" in the SETUP menu (refer to "8.10.1 Selecting the Scan Type").
- 2. Adjust the **SQL** knob until the background noise disappears.
- 3. Press the $\blacktriangleright/\triangleleft$ key repeatedly, then press the **[SCAN]** soft key. "MEM SCAN" appears on the display. Scanning will proceed from the lowest to the highest programmed channel number and preset channel (described in the next section) and will stop on a channel when a transmission is received.



4. To stop scanning, press the [SCAN] soft key, 16/S or CLEAR key.

Priority Scanning (P-SCAN) 8.10.4

- 1. Set the scan type to "PRIORITY" in the SETUP menu (refer to "8.10.1 Selecting the Scan Type").
- Adjust the SQL knob until the background noise disappears.
- 3. Press the ►/< key repeatedly, then press the [SCAN] soft key. "PRI SCAN" appears on the display. Scanning will proceed between the memorized channels and preset channel (described in next section) and the priority channel.

The priority channel will be scanned after each programmed channel.

4. To stop scanning, press the [SCAN] soft key, 16/S or CLEAR key.







In the default setting, Channel 16 is set as the priority channel. You may change the priority channel to the desired channel from Channel 16 on the SETUP menu. Refer to section **"16.7 PRIORITY CHANNEL**".

8.11 PRESET CHANNELS: INSTANT ACCESS

10 preset channels can be programmed for instant access. Press the ►/◀ key repeatedly, then press the **[PRESET]** soft key. Pressing the **[PRESET]** key activates the user assigned channel bank. If the **[PRESET]** soft key is pressed and no channels have been assigned, alert beep will sound.

Before beginning the Instant Access operation, assign the "PRESET" command into one of the programmable keys, refer to section "**15.8 SOFT KEYS**".

8.11.1 Programming

- 1. Rotate the **DIAL/ENT** knob to select the channel to be programmed.
- Press the ►/◀ key repeatedly to indicate the function on the display, then press and hold the [PRESET] soft key until the "P-SET" icon and channel number are blinking.
- Press the [ADD] soft key to program the channel into the preset channel memory. "[P-SET]" icon will appear.
- 4. Repeat steps 1 through 3 to program the desired channels into the preset channels. Up to 10 channels can be registered. If you attempt to register the 11th channel, error beep will sound.



8.11.2 Operation

- 1. Press the $\blacktriangleright/\blacktriangleleft$ key repeatedly, then press the [PRESET] soft key to recall the preset channel. The "[P-SET]" icon will appear on the display.
- 2. Rotate the **DIAL/ENT** knob to select the desired preset channel.
- 3. Press the [PRESET] soft key to return to the last selected channel. The "[P-SET]" icon will disappear from the display.

8.11.3 Deletion

- 1. Press the $\blacktriangleright/\blacktriangleleft$ key repeatedly, then press the **[PRESET]** soft key to recall the preset channel.
- 2. Rotate the DIAL/ENT knob to select the preset channel to be deleted.
- 3. Press and hold the [PRESET] soft key until the "[P-SET]" icon and channel number are blinking.
- 4. Press the [DELETE] soft key to delete the channel from the preset channel memory.
- 5. Repeat steps 2 through 4 to delete the desired channels from preset channels.
- 6. To exit from deleting the preset channels, press the [QUIT] soft key.

8.12 MOB OPERATION

The GX6000E provides a feature to memorize the position information instantly in case of MOB (Man Over-Board).

- 1. Press the $\blacktriangleright/\triangleleft$ key repeatedly, then press the **[MOB]** soft key.
- 2. Press the [TO WPT] soft key to start the navigation to the displayed position. For details about the navigation, see section "11 NAVIGATION".

To modify the displayed position information, press the [POS/TM] soft key. For details about the modification, see "Editing a Waypoint" on page 89.

FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com



BRG: 300 T DST:5.2nm

TO WPT POS/TM QUIT



DELETE

Ihr Partner für Funktechnik | Your partner for radio technology

 
----23450

2345⊍

FIOF

CISYLISA CIT

 To transmit a DSC distress message, lift the red spring loaded DISTRESS cover on the right side of the transceiver, then press and hold the DISTRESS key (see section "10.2.1 Transmitting a DSC Distress Alert" for details).



The nature of the distress call is automatically set to "MOB".

8.13 PA/FOG OPERATION

The **GX6000E** has two 25 W hailers built-in and can be used with any 4 Ohm PA horn. Standard Horizon offers two HAIL/PA horns, the **220SW** (12 cm round 30 Watt HAIL/PA horn) and the **240SW** (13 x 20 cm rectangular 40 Watt HAIL/PA horn). When the **GX6000E** is in PA Hail mode the PA speaker listens back (acts as a microphone and provides two-way communications through the HAIL/PA horn to the main radio).

NOTE

When in the PA HAIL or FOG HORN mode, the **GX6000E** will continue to receive DSC calls and communications on the last selected working channel prior to entering the PA HAIL or FOG HORN mode. Then the **GX6000E** AIS page can also be accessed when in the PA HAIL or FOG HORN mode.

PA HAIL mode:

PA HAIL mode allows the transceiver to be used as a power hailer when an optional STANDARD HORIZON **220SW** or **240SW** HAIL/PA horn is installed. The PA Hail mode has a listen-back feature which provides two way communication through the HAIL/PA horn.

FOG HORN mode:

Automatic signaling is transmitted through the HAIL/PA horn. When the fog horn signal is not being outputted the **GX6000E** listens back through the connected HAIL/PA horn.

HORN mode:

Foghorn sound or siren sound can be transmitted through the HAIL/PA horn. When the fog horn signal is not being outputted the **GX6000E** listens back through the connected HAIL/PA horn.

8.13.1 Operating the PA HAIL mode

- Rotate the DIAL/ENT knob to speaker select "ALL", "PA1" or "PA2", then press the [SELECT] soft key. Press the microphone's PTT switch to speak through the HAIL/PA speaker.
- Press the [PA VOL] soft key, then rotate the DIAL/ ENT knob to control the AF output level. Press the [ENTER] soft key. The AF output level can be set from 0 to 31.
- 4. To listen back, rotate the **VOL** knob.
- 5. Press the **CLEAR** key to return to radio operation.

8.13.2 Operating the FOG HORN mode

The user can select the type of horn from "**Underway**", "**Stop**", "**Sail**", "**Towing**", "**Aground**" and "**Anchor**".

- Rotate the **DIAL/ENT** knob to select one of the six functions described above, then press the [SELECT] soft key.
- Rotate the DIAL/ENT knob to speaker select "ALL", "PA1" or "PA2", then press the [SELECT] soft key.
- 4. On the "FOG HORN" mode, while pressing the [HORN] soft key to activate the tone through the HAIL/ PA speaker.
 Press the [FOG VOL] soft key, then rotate the DIAL/ ENT knob to control the AF output level.
 Press the [ENTER] soft key. The AF output level can

Press the **[ENTER]** soft key. The AF output level can be set from 0 to 31.

- 5. To listen back, rotate the VOL knob.
- 6. Press the **CLEAR** key to return to radio operation.



SP SELECT



8.13.3 Fog Signal Timing Chart

TYPE		PATTERN	USAGE
UNDERWAY	One 5-second blasts every 120 seconds.	5s 5s Listen Back 120s	Motor vessel underway and making way.
STOP	Two 5-second blasts (separated by 2_ seconds) every 120 seconds.	5s 5	Motor vessel underway but stopped (not making way).
SAIL	One 5-second blasts followed by two 1-second blasts (separated by 2 seconds) every 120 seconds.	5s 1s 1s 1s 1s 11 11 11 11 11 2s 2s 2s 2s 120s 120s 2s	Sailing vessel underway, fishing vessel (underway or anchored), vessel not under command, a vessel restricted in her ability to maneuver (underway or at anchor), or a vessel towing or pushing another ahead.
TOWING	One 5-second blasts followed by three 1-second blasts (separated by 2 seconds) every 120 seconds.	5s 1s 1s 1s 1s 1s 1s 1 1 1 1 1 1s 1s 2s 2s 2s 2s 2s 2s 120s 120s 120s	Vessel under tow (manned).
AGROUND	One 11-second rings every 60 seconds.	15 15 15 15 15 15 + 250ms 15 15 15 11s 11s Listen Back 60s	Vessel is aground.
ANCHOR	One 5-second rings every 60 seconds.	525s Listen Back 60s	Vessel is at anchor. -

8.13.4 Operating the HORN mode

The user can select the type of horn from "Horn" and "Siren".

- 2. Rotate the **DIAL/ENT** knob to select "**HORN**" or "**SIREN**", then press the **[SELECT]** soft key.

НО	RN
HORN	
SIREN	
DADK	
BACK	SELECT

STANDARD HORIZON Ihr Partner für Funktechnik | Your partner for radio technology FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

- Rotate the DIAL/ENT knob to speaker select "ALL", "PA1" or "PA2", then press the [SELECT] soft key.
- On the "Horn" and "Siren" modes, while pressing the [HORN] soft key to activate the tone through the HAIL/PA speaker.
 Press the [FOG VOL] soft key, then rotate the DIAL/ ENT knob to control the AF output level. Press the [ENTER] soft key. The AF output level can be set from 0 to 31.
- 5. To listen back, rotate the **VOL** knob.
- 6. Press the **CLEAR** key to return to radio operation.

8.14 INTERCOM OPERATION

The optional **SSM-70H** (**RAM4**) remote station microphone must be connected to perform intercom functions between the **GX6000E** and the **SSM-70H** (**RAM4**).

NOTE

When using the intercom function, connect one or two **SSM-70H** (**RAM4**) Remote Station Microphone to the **GX6000E**.

 
8.14.1 Communication

- Rotate the DIAL/ENT knob to select the device to which you want to communicate, then press the [SELECT] soft key. The "✓" icon will appear at the left side of the selected station.

Note: When only one **SSM-70H** (**RAM4**) is connected to **GX6000E**, continue to step 5.

- 3. Repeat step 2 for all the desired devices.
- 4. Press the [ENTER] soft key.
- 5. When the intercom mode is enabled, "**INTERCOM**" is displayed on the radio and **SSM-70H** (**RAM4**).
- 6. Press the microphone's **PTT** switch on the radio. "Talk" will be shown on the display.

Note: A warning beep will be heard when the radio's **PTT** and **RAM4**'s **PTT** switches are pushed at the same time.







- 7. Speak slowly and clearly into the microphone, hold the microphone about 1.5 cm away from your mouth.
- 8. When finished, release the **PTT** switch.
- 9. Press the **CLEAR** key to return to radio operation.

8.14.2 Calling

Pressing the **[BELL]** soft key when in intercom mode on either the radio or **RAM4** microphone will produce a calling beep to the other station.

8.15 VOICE SCRAMBLER

The voice scrambler function for the 4-code type (**CVS2500A** compatible) or the 32-code type (**FVP-42** compatible for Furuno Electric FM-4721) is available by configuring optional settings. Refer to the section "**16.13 SCRAMBLER SETUP**" to program the voice scrambler.

- Select a channel that was programmed for scrambler mode (the """ icon will appear on the display).
- 2. Monitor the channel before transmitting.
- 3. Transmit the voice message. The transmission sent will be scrambled.

8.16 DEMO MODE

This mode is used by Standard Horizon sales persons and dealers to demonstrate radio, DSC and AIS functions. Demo mode allows latitude, longitude and time to be entered to simulate radio displays. When the demo mode is enabled, the radio display will automatically switch from the NORMAL, COMPASS, WAYPOINT, AIS and GM displays.

NOTE

When demo mode is enabled and the radio is turned off and back on the radio will still be in the demo mode.

 Enter the latitude/longitude of your vessel and your local UTC time in the 24-hour notation by the DIAL/ ENT knob. Rotate the DIAL/ENT knob to select the number and press the [SELECT] soft key to move the cursor to the next character.



 If a mistake was made entering in the latitude/longitude of your vessel and your local UTC time, rotate the DIAL/ENT knob to select "←" or "→", press the [SELECT] soft key until the wrong character is selected, then perform step 2.

^{1.}

- 4. To store the data entered, press the [FINISH] soft key.
- Rotate the DIAL/ENT knob to select "DEMO START", then press the [SELECT] soft key.
- 6. Rotate the **DIAL/ENT** knob to select "**START**", then press the **[SELECT]** soft key.



NOTE

To stop the demo mode, select "STOP" in step 6 above.

STANDARD HORIZON

9 GPS OPERATION

The **GX6000E** has the **SCU-31** external GPS antenna to receive and display the position information. When the radio is connected to an external GPS device by the NMEA-0183 or NMEA2000, you may select the order of priority of the connection devices to be used when obtaining location information via the SETUP menu (Refer to section "**18.1 ORDER OF PRIORITY**"). Your position information as well as received positions can be memorized and utilized later for navigation.

9.1 DISPLAYING POSITION INFORMATION9.1.1 GPS Information Numerical Display

 
- 1. [▲ "GPS" → "GPS INFO"
- 2. Display the numerical display.
- 3. Press the CLEAR key to return to radio operation.

 
9.1.2 GPS Information Compass Display

- 1. [▲ "GPS" → "COMPASS"
- 2. Display the compass display.
- Press the CLEAR key to return to radio operation. Note: Depending on the assignment of the soft keys you may switch the screen immediately from the basic display to the compass display by pressing the [COMP] soft key.

9.2 CHECKING GPS STATUS

- 1. [▲ GPS → "GPS STATUS"
- 2. Display the GPS status currently being received.
- 3. Press the **CLEAR** key to return to radio operation.





18 JAN,

DATE



9.3 GPS LOGGER OPERATION

The **GX6000E** includes a logger for position information that allows you to record your location at regular intervals. (Requires **SCU-31** external GPS antenna.)

1. Press the **[LOGGER]** soft key to turn the function on or off.

The recording starts and the display returns to the previous screen with the "

• You may change the log interval time of recording via the SETUP menu (Refer to section "**18.11.4** Logger Interval").

Note: To utilize the records, connect the **GX6000E** to a PC and download the log data from the radio by using the PC Programming Software. Refer to section "21 CONNECTING A USB DATA TERMINAL TO THE PC".



Logger operation alert:

- When the memory for log data becomes full, three beeps will sound and a warning message will be displayed. Afterwards the logger does not operate until the log data in the memory are erased.
- When the logger cannot record for some reason, three beeps will sound and a warning message will be displayed. Afterwards the logger does not operate anymore.
- An error message will be displayed when the radio cannot erase the log data in the memory during the operation following the alert of memory full (see above) or in the SETUP menu (Refer to section "18.11.5 Log Erase").

10 DIGITAL SELECTIVE CALLING (DSC)

10.1 GENERAL

WARNING

This **GX6000E** is designed to generate a digital maritime distress and safety call to facilitate search and rescue. To be effective as a safety device, this equipment must be used only within communication range of a shore-based VHF marine channel 70 distress and safety watch system. The range of signal may vary but under normal conditions should be approximately 20 nautical miles.

Digital Selective Calling (DSC) is a semi-automated method of establishing a radio call, it has been designated by the International Maritime Organization (IMO) as an international standard for establishing VHF, MF and HF radio calls. It has also been designated as part of the Global Maritime Distress and Safety System (GMDSS). It is planned that DSC will eventually replace aural watches on distress frequencies and will be used to announce routine and urgent maritime safety information broadcasts.

This system allows mariners to instantly send a distress call with GPS position (when connected to the transceiver) to the Coast Guard and other vessels within range of the transmission. DSC will also allow mariners to initiate or receive Distress, Urgency, Safety, Routine, Position Request, and Position Report, Automatic Position Polling, and Group calls to or from another vessel equipped with a DSC transceiver.

DSC DISTRESS ALERT 10.2

The GX6000E is capable of transmitting and receiving DSC distress messages to all DSC radios. Distress alert calls from the GX6000E include the latitude and longitude of the vessel when the external GPS unit is activated.

Transmitting a DSC Distress Alert 10.2.1

NOTE

 
To be able to transmit a DSC distress call, MMSI number must be programmed, refer to section "7.6.1 Maritime Mobile Service Identity (MMSI)". In order for your ships location to be transmitted, the GX6000E must be able to receive a valid position data from the SCU-31 external GPS antenna or other GPS device connected by NMEA 0183 or NEMA 2000. Refer to section "7.5.3 Accessory Cables and NMEA 0183 Cables"

Basic Operation

1. Lift the red spring loaded DISTRESS cover, press once and then press and hold the **DISTRESS** key for 3 seconds. The radio display will count down (3-2-1) and then transmit the distress call. The backlight of the display and keypad flashes while the radio's display is counting down.

edgment signal is received.

edgment is received.



!!DISTRESS!!

RX ACKNOWLEDGED

007654321 USCG CA

SINCE: 00:10 OK

- !!DISTRESS!! 2. When the distress signal is sent, the transceiver UNDESIGNATED watches for a transmission on CH70 until an acknowl-Position: 24°25.9755 S 118°59.4566 W POS Time: 12:56 AM LOC Transmitting !!DISTRESS!! 3. If no acknowledgment is received, the distress call is UNDESIGNATED repeated in 4 minute intervals until a DSC acknowl-Position: 24°25.9755 S 118°59.4566 W POS Time: 12:56 AM LOC Waiting for ACK TX IN: 02:10 PAUSE CANCEL
- 4. When a DSC distress acknowledgment is received, a distress alarm sounds and Channel 16 is automatically selected. The display shows the MMSI of the ship responding to your distress.
- 5. Press the microphone's **PTT** switch and state your name, vessel name, number of persons on board and the distress situation, then say "over" and wait for a reply from the acknowledging ship.
- To turn off the distress alarm before the radio retransmits the distress alert. press the 16/S key or the [QUIT] soft key.

FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

Transmitting a DSC Distress Alert with Nature of Distress

The **GX6000E** is capable of transmitting a DSC distress alert with the following "Nature of Distress" categories:

Undesignated, Fire/Explosion, Flooding, Collision, Grounding, Capsizing, Sinking, Adrift, Abandoning, Piracy, MOB.

1.

- 2. Press the **[NATURE]** soft key. The **"NATURE OF**" menu will appear on the display.
- DIST ALERT MSG Nature of: UNDESIGNATED Position: 24'25.9755 s 118'59.4566 W POS Time: 12'56 AM LOC [DISTRESS] key Hold for 3 sec.] BACK NATURE POSYTM
- 3. Rotate the **DIAL/ENT** knob to select the desired nature of distress category, then press the **[SELECT]** soft key.
- 4. Press and hold the **DISTRESS** key until a distress alert is transmitted.

Transmitting a DSC Distress Alert by Manually Inputting Location and Time

In case the **GX6000E** fails to get a GPS position fix, you may manually input your latitude and longitude, and time before transmitting the distress alert.

- 2. Press the [POS/TM] soft key.
- 3. Rotate the **DIAL/ENT** knob to select the first number of latitude, then press the **[SELECT]** soft key to step to the next number.
- Repeat step 3 to set the position and time.
 If a mistake was made, rotate the DIAL/ENT knob to select "←" or "→", press the [SELECT] soft key until the wrong character is selected, then perform step 3.
- 5. When finished programming the position and time, press the **[FINISH]** soft key. The display will return to the previous screen.
- 6. Press and hold the **DISTRESS** key until a distress alert is transmitted.



Pausing a DSC Distress Alert

After a DSC distress call is transmitted, the DSC distress call is repeated every 4 minutes until the call is canceled by the user or until the radio is turned off and on again. The **GX6000E** has the capability to suspend (pause) the retransmitting of the distress call by the procedure below.


- After the distress call is transmitted, the radio will show the display as on the right. Looking at this display you will notice "TX IN: 02:10", this is the time when the radio will re-transmit the DSC distress call.
- 2. To suspend re-transmitting the DSC call, press the **[PAUSE]** soft key.
- 3. To resume counting down to transmit the DSC Distress call, press the **[RESUME]** soft key.

Canceling a DSC Distress Alert

If a DSC distress alert was sent by error the **GX6000E** allows you to send a message to other vessels to cancel the distress call that was made.

- 1. Press the **[CANCEL]** soft key, then press the **[YES]** soft key.
- 2. After the message for cancelling has been transmitted, press the **[OK]** soft key.
- 3. Press the [FINISH] soft key.
- 4. Press the [QUIT] soft key to return to radio operation.

FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

 







10.2.2 Receiving a DSC Distress Alert

- 1. When a DSC distress call is received, an emergency alarm sounds.
- 2. Press any key to stop the alarm.
- 3. Rotate the **DIAL/ENT** knob to show information on the vessel in distress.

On the display you will notice 3 soft key selections. These selections are described below:


[ACCEPT]: Press this key to accept the DSC distress call and to switch to Channel 16.

Note: If a key is not pressed for 30 seconds or longer the radio will automatically switch to Channel 16. ("**AUTO CHANNEL CHANGE**" timer settings can be changed in "DSC SETUP" menu. The default setting is 30 sec.) [**PAUSE**]: Press this key to temporarily disable automatic switching to Channel 16. [**QUIT**]: Press this key to quit the automatic Channel 16 switching and revert to the last selected working channel.

4. After accepting the call, press the **[TO WPT]** soft key to set the vessel in distress as a destination for navigation.

Note: You may change the waypoint name.

- Rotate the DIAL/ENT knob key to select "SAVE & GOTO", then press the [SELECT] soft key to change the display to the waypoint navigation screen. The display indicates the distance and direction of the distressed vessel, and the compass displays the distressed vessel by dot (●).
- 6. To stop navigating to a waypoint, press one of the soft keys, then press the **[STOP]** soft key. The radio is switched to the normal mode.

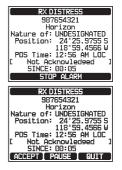



NOTE

- You must continue monitoring Channel 16 as a coast station may require assistance in the rescue attempt.
- When there is an unread distress alert, "
 "icon will appear on the display. You may review the unread distress alert from the DSC log, refer to the section "10.11.2 Reviewing a Logged DSC RX Distress Call".
- Not all DSC radios can receive a DSC distress relay call.

10.3 ALL SHIPS CALL

The all ships call function allows contact to be established with DSC equipped vessels without having their MMSI in the individual calling directory. Also, priority for the call can be designated as "Safety" or "Urgency".

- SAFETY Call: This type of call is used to transmit boating safety information to other vessels. This message usually contains information about an overdue boat, debris in the water, loss of a navigation aid or an important meteorological message. This call is the same as saying "Securite, Securite, Securite".
- URGENCY Call: This type of call is used when a vessel may not truly be in distress, but have a potential problem that may lead to a distress situation. This call is the same as saying "PAN PAN, PAN PAN, PAN PAN" on Channel 16.

10.3.1 Transmitting an All Ships Call

- Rotate the DIAL/ENT knob to select the nature of call ("SAFETY" or "URGENCY"), then press the [SELECT] soft key.
- In the INTERSHIP CH list, rotate the DIAL/ENT knob to select the operating channel ".*."on which you want to communicate, then press the [SELECT] soft key. To select operating channels from all voice channels, press the [MANUAL] soft key.
- 4. Press the **[YES]** soft key to transmit the selected type of all ships call.
- 5. After the all ships call is transmitted, the transceiver will switch to the selected channel.
- 6. Listen to the channel to make sure it is not busy, then key the microphone and say "PAN PAN, PAN PAN, PAN PAN" or "Securite, Securite, Securite" depending on the priority of the call.







7. Press the **[QUIT]** soft key to exit the all ships call menu.

10.3.2 Receiving an All Ships Call

1. When an all ships call is received, an emergency alarm will sound.

The display shows the MMSI of the vessel transmitting the all ships call and the radio will change to the requested channel after 30 seconds (the default setting of "AUTO CHANNEL CHANGE").

- 2. Press any key to stop the alarm.
- 3. Monitor the requested channel until the all ships voice communication is completed.

On the display you will notice 3 soft key selections. These selections are described below:

[ACCEPT]: Press this key to accept the DSC all ships call and to switch to requested channel.

Note: If a key is not pressed for 30 seconds or longer the radio will automatically change to the requested channel (the default setting of "AUTO CHANNEL CHANGE").

[PAUSE]: Press this key to temporarily disable automatic switching to the requested channel.

Note: In some cases, automatically switching to a requested channel might disrupt important ongoing communications. This feature allows commercial users to suspend channel switching and stay on the working channel selected before the all ships call was received.

[QUIT]: Press this key to quit the automatic channel switching and revert to the last selected working channel.

4. Press the [QUIT] key to return to the channel display.



NOTE

When there is an unread all ships call, " \Box " icon will appear on the display. You may review the unread all ships call from the DSC log, refer to the section "**10.11.2 Reviewing a Logged DSC RX Distress Call**".





10.4 INDIVIDUAL CALL

This feature allows the **GX6000E** to contact another vessel with a DSC VHF radio and automatically switch the receiving radio to a desired communications channel. This feature is similar to calling a vessel on CH16 and requesting to go to another channel (switching to the channel is private between the two vessels). Up to 100 individual contacts may be programmed.

10.4.1 Setting up the Individual / Position Call Directory

The **GX6000E** has a DSC directory that allows you to store a vessel or person's name and the associated MMSI number you wish to contact via individual calls, auto polling, position request, position report, and polling transmissions. To transmit an individual call you must program this directory with information of the persons you wish to call, similar to a cellular phone's telephone directory.

1. [IIII] I SETUP" I (DSC SETUP" I (INDIVIDUAL DIRECTORY")

- Rotate the **DIAL/ENT** knob to select "ADD", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**NAME:**", then press the **[SELECT]** soft key.
- 4. Rotate the **DIAL/ENT** knob to scroll through the first letter of the name of the vessel or person you want to reference in the directory.
- 5. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.
- Repeat steps 4 and 5 until the name is complete. The name can consist of up to fifteen characters, and if you do not use all fifteen characters, select "→" to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the name, rotate the **DIAL/ENT** knob to select " \leftarrow " or " \rightarrow ", press the **[SELECT]** soft key until the wrong character is selected, then perform steps 4 and 5.

7. When finished entering the name (using fifteen characters or less), press the **[FINISH]** soft key to advance to the MMSI number entry.



DSC SETUP

- 8. Rotate the **DIAL/ENT** knob to select "**MMSI:**", then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to scroll through numbers, 0-9. To enter the desired number and move one space to the right by pressing the [SELECT] soft key. Repeat this procedure until all nine space of the MMSI number are entered.

If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select " \leftarrow " or " \rightarrow ", press the **[SELECT]** soft key until the wrong character is selected, then perform step 9.

- 10. When finished entering the MMSI number, press the [FINISH] soft key.
- 11. To store the entered data, rotate the **DIAL/ENT** knob to select "**SAVE**", then press the **[SELECT]** soft key.
- 12. To enter another individual address, repeat steps 2 through 11.
- 13. Press the **CLEAR** key to return to radio operation.

10.4.2 Setting up the Individual Call Reply

This menu item sets up the radio to automatically (default setting) or manually respond to a DSC individual call requesting you to switch to a working channel for voice communications. When "Manual" is selected the MMSI of the calling vessel is shown allowing you to see who is calling. This function is similar to caller id on a cellular phone.


- 1. Immil Im
- Rotate the DIAL/ENT knob to select "AUTO" or "MANUAL".
- 3. Press the **[ENTER]** soft key to store the selected setting.
- 4. Press the **CLEAR** key to return to radio operation.

10.4.3 Enabling the Individual Call Acknowledgment

The radio can select either reply message "Able" (default) or "Unable" when the individual reply setting (described in the previous section) is set to "AUTOMATIC".

- 2. Rotate the **DIAL/ENT** knob to select "**ABLE**" or "**UNABLE**".
- 3. Press the **[ENTER]** soft key to store the selected setting.
- 4. Press the **CLEAR** key to return to radio operation.

 Page 60



DSC SETUP

 
INDIVIDUAL ACK.

I INARI E

BACK

DSC SETUP

INDIVIDUAL REPLY



GX6000E

ENTER

10.4.4 Transmitting an Individual Call

This feature allows the user to contact another vessel with a DSC radio. This feature is similar to calling a vessel on CH16 and requesting to go to another channel.

Individual Call using the Individual/Position Directory

1. INDIVIDUAL CALL 2 Rotate the **DIAL/ENT** knob to select "**HISTORY**" or HISTORY MEMORY "MEMORY", then press the [SELECT] soft key. MANUAL BACK SELECT INDIVIDUAL CALL 3. Rotate the **DIAL/ENT** knob to select an individual you HISTORY KAREN want to contact, press the [SELECT] soft key. ROR 366901254 Horizon-1 Standard Horizon-2 BACK SELECT INDIVIDUAL CALL 4. In the INTERSHIP CH list, rotate the **DIAL/ENT** knob INTERSHIP CH CH: 06 to select the operating channel on which you want to CH: 08 CH: 09 communicate, then press the [SELECT] soft key. To CH: 10 select operating channels from all voice channels, CH: 13 ACK I MANUAL I SELECT press the [MANUAL] soft key. NDIVIDUAL CALL 5. Press the **[YES]** soft key to transmit the individual 987654321 Horizon-1 Category: ROUTINE 1st telec: F3E/G3E SIMP Channel: 26 DSC signal. Do you want to transmit a Call? YES NO INDIVIDUAL CALL 6. When an individual call acknowledgment is received, 987654321 Horizon-1 Category: ROUTINE 1st telec: F3E/G3E SIMP Channel: 26 the established channel is automatically changed to the channel which is selected on step 4 above and a Transmitting ringing tone sounds. INDIVIDUAL CALL 7. Press the **[QUIT]** soft key to listen to the channel to 987654321 Horizon-1 Category: ROUTINE 1st_telec: F3E/G3E_SIMP make sure it is not busy, then press the microphone's Channel: 26 PTT switch and talk into the microphone to commu-

nicate with the other vessel.

QUIT

Waiting for ACK Since: 00:05

SEND

Individual Call by Manually Entering an MMSI

You may enter an MMSI number manually to contact without storing it in the individual directory.

- 2. Rotate the **DIAL/ENT** knob to select "**MANUAL**", then press the **[SELECT]** soft key.
- Rotate the DIAL/ENT knob to select the first number of the MMSI which you want to contact, then press the [SELECT] soft key to step to the next number.
- Repeat step 3 to set the MMSI number (nine digits). If a mistake was made entering in the MMSI number, rotate the DIAL/ENT knob to select "←" or "→", press the [SELECT] soft key until the wrong character is selected, then perform step 3.
- 5. When finished entering the MMSI number, press the **[FINISH]** soft key.
- In the INTERSHIP CH list, rotate the DIAL/ENT knob to select the operating channel on which you want to communicate, then press the [SELECT] soft key. To select operating channels from all voice channels, press the [MANUAL] soft key.
- 7. Press the **[YES]** soft key to transmit the individual DSC signal.
- 8. When an individual call acknowledgment is received, the established channel is automatically changed to the channel which is selected on step 6 above and a ringing tone sounds.
- Press the [QUIT] soft key to listen to the channel to make sure it is not busy, then press the microphone's PTT switch and talk into the microphone to communicate with the other vessel.





FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

10.4.5 Receiving an Individual Call

When an individual DSC call is received, the radio will automatically respond (default setting) to the calling ship, and switch to the requested channel for voice communications. Refer to section "10.4.2 Setting up the Individual Call **Reply**" to change the reply to manual if you want to see who is calling before replying to the call.

Automatic reply:

1. When an individual call is received, an individual call ringing alarm sounds. The radio automatically switches to the requested chan-

nel. The display shows the MMSI of the vessel calling.

Press any key to stop the alarm.

Monitor the requested channel until the message is completed. Press the microphone's PTT switch and talk into the microphone to communicate with the vessel that initiated the individual call.

4. Press the **[QUIT]** soft key to return to radio operation.



RX INDIVIDUAL CALL 987654321 JoroJ4321 Horizon Category: ROUTINE 1st telec: F3E/G3E SIMP Channel: 26

> Connected SINCE: 00:05 STOP ALARM

Manual reply:

1. When an individual call is received, an individual call ringing alarm sounds.

The display shows the MMSI of the vessel transmitting the individual call.

- 2. Press any key to stop the alarm.
- 3. On the display you will notice 3 soft key selections. These selections are described below:

[ACCEPT]: Press this key to accept the DSC individual call and to switch to requested channel.

[PAUSE]: Press this key to temporarily disable auto-

matic switching to the requested channel.

Note: In some cases, automatically switching to a requested channel might disrupt important ongoing communications. This feature allows commercial users to suspend channel switching and stay on the working channel selected before the individual call was received.

[QUIT]: Press this key to guit the automatic channel switching and revert to the last selected working channel.

Note: If a key is not pressed for 30 seconds or longer the radio will automatically change to radio operation.



Horizon Category: ROUTINE 1st telec: F3E/G3E SIMP Channel: 26

SINCE: 00:05 STOP ALARM

SINCE: 00:05 ACCEPT PAUSE QUIT

RX INDIVIDUAL CALL

987654321 Horizon Category: ROUTINE 1st telec: F3E/G3E SIMP Channel: 26

- 4. After accepting the call, press the **[ABLE]** soft key to switch to the requested channel. (To inform the vessel that you are unable to respond, press the **[UNABLE]** soft key.)
- 5. Press the **[YES]** soft key to send an acknowledgement.

Press the **[CHG CH]** soft key to change the channel for communication from the requested one.

6. Monitor the requested or specified channel until the message is completed.

Press the microphone's **PTT** switch and talk into the microphone to communicate with the vessel that initiated the individual call.

7. Press the **[QUIT]** soft key to return to the channel display.

NOTE

When there is an unread individual call, " \square " icon will appear on the display. You may review the unread individual call from the DSC log, refer to the section "**10.11.2 Reviewing a Logged DSC RX Distress Call**".

10.4.6 Setting up the Individual Call Ringer

When an individual call is received the radio's default setting will produce a ringing sound for 2 minutes. This selection allows the individual call ringer time to be changed.

- 1.
- [@____] ➡ "SETUP" ➡ "DSC SETUP" ➡ "INDIVIDUAL RING"
- Rotate the DIAL/ENT knob to select ringing time of individual calls.
- 3. Press the **[ENTER]** soft key to store the selected setting.

4. Press the **CLEAR** key to return to radio operation.

DSC SETUP INDIVIDUAL RING 2min 5sec 10sec 15sec 20sec BACK ENTER





The **GX6000E** has the capability to turn off the individual call ringer.

- 2. Rotate the **DIAL/ENT** knob to select "**INDIVIDUAL CALL**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select "OFF".
- 4. Press the **[ENTER]** soft key to store the selected setting.
- 5. Press the **CLEAR** key to return to radio operation.



To enable the ringer tone, repeat the above procedure, rotating the **DIAL/ENT** knob to select "**ON**" in step 3 above.

10.5 GROUP CALL

This feature allows the user to contact a group of specific vessels using DSC radios with the group call function to automatically switch to a desired channel for voice communications. This function is very useful for yacht clubs and vessels traveling together that want to collectively make announcements on a predetermined channel. Up to 32 group MMSIs may be programmed.

10.5.1 Setting up a Group Call

For this function to operate, the same group MMSI (Maritime Mobile Service Identity Number) must be programmed into all the DSC VHF radios within the group of vessels that will be using this feature. To understand Group MMSI programming, first a ship MMSI has to be understood.

Ship MMSI: The first three digits called MID (Mobile Identity Group) of a ship MMSI denote the country where the ship's MMSI is registered. The last 6 digits are specific to the ships ID.

Ship MMSI Example: If your MMSI is "366123456", "366" is MID which denote the country and "123456" is your ships MMSI.

Group MMSI:

- Group MMSI numbers are not assigned by the FCC or other organizations licensed to assign ship MMSI numbers.
- □ The first digit of a group MMSI is always set to "0" by International rules. All Standard Horizon radios are preset so when programming a group MMSI the first digit is set to "0".
- □ The USCG recommends programming the MID of a ship MMSI into the

Second, Third and Fourth digits of the group MMSI as it denotes the area the ship is located in.

□ The last 5 digits are decided upon by persons in the group. This is an important step as all radios in the group must contain the same group MMSI so they can be contacted by each other. There is a chance that another group of vessels may program in the same group MMSI. If this happens, simply change one or more of the last 5 digits of the group MMSI.

- 2. Rotate the **DIAL/ENT** knob to select "**ADD**", then press the **[SELECT]** soft key.
- Rotate the DIAL/ENT knob to select "GROUP NAME:", then press the [SELECT] soft key.
- 4. Rotate the **DIAL/ENT** knob to scroll through the first letter of the name of the group you want to reference in the directory.
- 5. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.
- Repeat steps 4 and 5 until the name is complete. The name can consist of up to fifteen characters, if you do not use all eleven characters, select "→" to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the name, rotate the **DIAL/ENT** knob to select " \leftarrow " or " \rightarrow ", press the **[SELECT]** soft key until the wrong character is selected, then perform steps 4 and 5.

- 7. When finished entering the group name (using fifteen characters or less), press the **[FINISH]** soft key to advance to the group MMSI number entry.
- Rotate the **DIAL/ENT** knob to select "MMSI:", then press the [SELECT] soft key.
- Rotate the DIAL/ENT knob to select the second number of the MMSI (nine digits: first digit permanently set to "0") which you want to contact, then press the [SELECT] soft key to step to the next number.

Repeat this procedure until all eight spaces of the MMSI number are entered.





If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select " \leftarrow " or " \rightarrow ", press the **[SELECT]** soft key until the wrong character is selected, then perform step 9.

- 10. When finished entering the MMSI number, press the **[FINISH]** soft key to confirm.
- 11. To store the data, select "SAVE", then press the [SELECT] soft key.
- 12. To enter another group address, repeat steps 2 through 11.
- 13. Press the **CLEAR** key to return to radio operation.

10.5.2 Transmitting a Group Call

Group Call using the Group Directory

- [MEND] 🗰 "DSC CALL" 🗰 "GROUP CALL" 1. GROUP CALL 2. Rotate the **DIAL/ENT** knob to select "**HISTORY**" or HISTORY MEMORY "MEMORY", then press the [SELECT] soft key. MANUAL BACK SELECT **GROUP CALL** Rotate the DIAL/ENT knob to select a group you want HISTORY Karen Bob to contact, then press the [SELECT] soft key 366901254 Horizon-1 Standard Horizon-2 USCG BACK SELECT GROUP CALL 4. In the INTERSHIP CH list, rotate the **DIAL/ENT** knob INTERSHIP CH CH: Ø6 to select the operating channel on which you want to CH: 08 communicate, then press the [SELECT] soft key. To CH: 09 CH: 10 select operating channels from all voice channels, CH: 13 BACK MANUAL SELECT press the [MANUAL] soft key. GROUP CALL 5. Press the **[YES]** soft key to transmit the group call 087654321 Horizon-Group signal. Category: ROUTINE 1st telec: F3E/G3E SIMP Channel: 26
- 6. When the group call signal is sent, the display will be as shown in the illustration at the right.
- 7. After the group call is transmitted, all the radios in the group will switch to the designated channel.
- 8. Listen to the channel to make sure it is not busy, then press the microphone's **PTT** switch to communicate with all of the vessels in the group.

```
GX6000E
```



Do you want to transmit a Call?

GROUP CALL

087654321 Horizon-Group Category: ROUTINE 1st telec: F3E/G3E SIMP Channel: 26

Transmitting

GROUP CALL

087654321 Horizon-Group Category: ROUTINE 1st telec: F3E/G3E SIMP Channel: 26

> Transmitted Since: 00:05

NO

VES

Group Call by Manually Entering an MMSI

This feature allows you to contact a group of vessels by entering in their group MMSI manually.

- 2. Rotate the **DIAL/ENT** knob to select "**MANUAL**", then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select the first number of the MMSI (nine digits: first digit permanently set to "0") which you want to contact, then press the [SELECT] soft key to step to the next number.
- Repeat step 3 to set the MMSI number.
 If a mistake was made entering in the MMSI number, rotate the DIAL/ENT knob to select "←" or "→", press the [SELECT] soft key until the wrong character is selected, then perform step.
- 5. When finished entering the MMSI number, press the [FINISH] soft key.
- In the INTERSHIP CH list, rotate the DIAL/ENT knob to select the operating channel on which you want to communicate, then press the [SELECT] soft key. To select operating channels from all voice channels, press the [MANUAL] soft key.
- 7. Press the **[YES]** soft key to transmit the group call signal.
- 8. After the group call is transmitted, all the radios in the group will switch to the designated channel.
- 9. Listen to the channel to make sure it is not busy, then press the microphone's **PTT** switch to communicate with all of the vessels in the group.



GROUP CALL
INTERSHIP CH
CH: 06
CH: 08
CH: 09
CH: 10
CH: 13
BACK IMANUAL ISELECT



1. When a group call is received, the **GX6000E** will produce a ringing alarm sound.

- 2. The display shows the group MMSI number.
- 3. Press any key to stop the alarm.

On the display you will notice 3 soft key selections. These selections are described below:

[ACCEPT]: Press this key to accept the group call and to switch to requested channel.

[PAUSE]: Press this key to temporarily disable automatic switching to the requested channel.

[QUIT]: Press this key to quit the automatic channel switching and revert to the last selected working channel.

- 4. If you want to respond, monitor the channel to make sure it is clear, then press the microphone's **PTT** switch and talk into the microphone to communicate with all of the vessels in the group.
- 5. Press the **[QUIT]** soft key to return to radio operation. *Note*: If a key is not pressed for 30 seconds or longer the radio will automatically change to radio operation.

NOTE

When there is an unread group call, " \subseteq " icon will appear on the display. You may review the unread group call from the DSC log, refer to the section "**10.11.3 Reviewing Other Logged Calls**".

10.5.4 Setting up the Group Call Ringer

The **GX6000E** has the capability to turn off the group call ringer.

- 1. [IIIII] ➡ "SETUP" ➡ "DSC SETUP" ➡ "DSC BEEP"
- 2. Rotate the **DIAL/ENT** knob to select "**GROUP CALL**", then press the **[SELECT]** soft key.

 
10.5.3 Receiving a Group Call




RX GROUP CALL







 - 3. Rotate the **DIAL/ENT** knob to select "**OFF**".
- 4. Press the **[ENTER]** soft key to store the selected setting.
- 5. Press the **CLEAR** key to return to radio operation.



To re-enable the ringer tone, repeat the above procedure, rotating the **DIAL**/**ENT** knob to select "**ON**" in step 3 above.

10.6 POSITION REQUEST

Advancements in DSC have made it possible to poll the location of another vessel and show the position of that vessel on the display of the **GX6000E**. Standard Horizon has taken this feature one step further, if a compatible GPS chart plotter is connected to the **GX6000E**, the polled position of the vessel is shown on the display of the GPS chart plotter making it easy to navigate to the location of the polled vessel. This is a great feature for anyone wanting to know the position of another vessel. For example, your buddy that is catching fish or finding the location of a person you are cruising with.

NOTE

The other vessel must have an operating GPS receiver connected to its DSC radio and must not have its radio set to deny position requests. (Refer the section "**10.4 INDIVIDUAL CALL**" to enter information into the individual directory).

10.6.1 Setting up a Position Request Reply

The **GX6000E** can be set up to automatically (default setting) or manually send your position when requested by another vessel. This selection is important if you are concerned about someone polling the position of your vessel that you may not want to. In the manual mode you will see the MMSI (Maritime Mobile Service Identity Number) or persons name shown on the display allowing you to choose to send your position to the requesting vessel.

- 1.
- Rotate the DIAL/ENT knob to select "AUTO" or "MANUAL". In "AUTO" mode, after a DSC POS request is received, the radio will automatically transmit your vessel's position. In "MANUAL" mode, the display of the GX6000E will show who is requesting the position and the [YES] soft key on radio has to be pressed to send your position to the requesting vessel.



- 3. Press the [ENTER] soft key to store the selected setting.
- 4. Press the **CLEAR** key to return to radio operation.

10.6.2 Transmitting a Position Request to Another Vessel

Position Request using the Individual/Position Directory

Refer to section "**10.4 INDIVIDUAL CALL**" to enter information into the individual directory.

[(MEND)] 🗰 "DSC CALL" 🗰 "POS REQUEST CALL" 1. POS REQUEST CALL Rotate the **DIAL/ENT** knob to select "HISTORY" or 2. HISTORY MEMORY "MEMORY", then press the [SELECT] soft key. MANUAL BACK SELECT POS REQUEST CALL 3. Rotate the **DIAL/ENT** knob to select a name that was KAREN stored in the individual/position directory. BOE 366901254 Horizon-1 Standard Horizon-2 USCG BACK SELECT POS REQUEST CALL 4. Press the [SELECT] soft key, then press the [YES] 987654321 Horizon-1 Category: SAFETY 1st telec: SHIP POSITION soft key to transmit the position request DSC call. 5. When the **GX6000E** receives the position from the Do you want to transmit a Call? polled vessel it is shown on the radio display. YES NO POS REQUEST CALL 6. Press the [QUIT] soft key to return to radio operation. 987654321 Horizon-1 Category: SAFETY 1st telec: SHIP POSITION Waiting for ACK Since: 00:05

NOTE

If the **GX6000E** does not receive position data from the polled vessel, the display will show "NO POSITION DATA".

Position Request by Manually Entering an MMSI

This feature allows you to request the position of a vessel by manually entering the MMSI.

- 1.

QUIT

RESEND

- Rotate the DIAL/ENT knob to select "MANUAL", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select the first number of the MMSI (nine digits) which you want to contact, then press the **[SELECT]** soft key to step to the next number.
- Repeat step 3 to set the MMSI number.
 If a mistake was made entering in the MMSI number, rotate the DIAL/ENT knob to select "←" or "→", press the [SELECT] soft key until the wrong character is selected, then perform step 3.
- 5. When finished entering the MMSI number, press the [FINISH] soft key.
- 6. Press the **[YES]** soft key to transmit the position request DSC call.
- 7. When the **GX6000E** receives the position from the polled vessel it is shown on the radio display.
- 8. Press the **[QUIT]** soft key to return to radio operation.
 - NOTE

The received position from the polled vessel can be transferred to a GPS chart plotter via NMEA DSC and DSE sentences.

10.6.3 Receiving a Position Request

- 1. When a position request call is received from another vessel, a ringing sound will be produced, and the display will be as shown in the illustration at the right.
- 2. Press any key to stop the alarm.
- To send your vessel's position to the requesting vessel, press the [REPLY] soft key.
 Or to exit from position request display, press the [QUIT] soft key.







4. Press the **[QUIT]** soft key to return to the channel display.



NOTE

When there is an unread position request call, " \sqsubseteq " icon will appear on the display. You may review the unread individual call from the DSC log, refer to the section "**10.11.3 Reviewing Other Logged Calls**".

10.6.4 Manual Input of Position Information

If the **GX6000E** is located in an area where GPS reception is limited when you are going to reply to the received position request, you may manually input your location (latitude and longitude) and time to be sent.

- 2. Press the [POS/TM] soft key.
- Rotate the **DIAL/ENT** knob to select the first number of latitude, then press the [SELECT] soft key to step to the next number.
- Repeat step 3 to set the position and time.
 If a mistake was made, rotate the DIAL/ENT knob to select "←" or "→", press the [SELECT] soft key until the wrong character is selected, then perform step 3.



- 5. When finished programming the position and time, press the **[FINISH]** soft key. The display will return to the previous screen.
- 6. Press the **[OK]** soft key.
- 7. Press the CLEAR key to return to radio operation.



10.6.5 Setting up a Position Request Ringer

The **GX6000E** has the capability to turn off the position request ringer.

- 2. Rotate the **DIAL/ENT** knob to select "**POS REQUEST**", then press the **[SELECT]** soft key.
- 3. Rotate the DIAL/ENT knob to select "OFF".
- 4. Press the **[ENTER]** soft key to store the selected setting.
- 5. Press the **CLEAR** key to return to radio operation.

To enable the ringer tone, repeat the above procedure, rotating the **DIAL/ENT** knob to select "**ON**" in step 3 above.

10.7 POSITION REPORT

The feature is similar to position request, however instead of requesting a position of another vessel this function allows you to send your position to another vessel.

10.7.1 Transmitting a DSC Position Report Call

DSC Position Report Call using the Individual/Position Directory

Refer to section **"10.4 INDIVIDUAL CALL**" to enter information into the individual directory.

[1. POS REPORT CALL Rotate the **DIAL/ENT** knob to select "**HISTORY**" or 2 HISTORY MEMOR' "MEMORY", then press the [SELECT] soft key. MANUAL BACK SELECT POS REPORT CALL 3. Rotate the **DIAL/ENT** knob to select the name in the HISTORY KAREN directory, then press the [SELECT] soft key. BOB 366901254 Horizon-1 Standard Horizon-2 SELECT



- If you want to change the position displayed, press the 4. [POS/TM] soft key to go to the position information input screen. After inputting new position information, press the [FINISH] soft key to confirm.
- Press the [YES] soft key to send your position to the selected vessel.
- 6. Press the **[QUIT]** soft key to return to radio operation.

DSC Position Report Call by Manually Entering an MMSI

This feature allows you to send your position to another vessel by manually entering the MMSI of the ship you want to send your position to.

- [(MENU)] 🗰 "DSC CALL" 🗰 "POS REPORT CALL" 1.
- Rotate the **DIAL/ENT** knob to select "MANUAL", then 2. press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select the first number of the MMSI which you want to contact, then press the [SELECT] soft key to step to the next number.
- Repeat step 3 to set the MMSI number. If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select " \leftarrow " or " \rightarrow ", press the [SELECT] soft key until the wrong character is selected, then perform step 3.
- POS REPORT CALL MMSI 98765432 → Delete
- When finished entering the MMSI number, press the [FINISH] soft key.
- If you want to change the position displayed, press the **[POS/TM]** soft key 6. to go to the position information input screen. After inputting new position information, press the [FINISH] soft key to confirm.
- 7. Press the [YES] soft key to send your position to the selected vessel.











8. Press the [QUIT] soft key to return to radio operation.



RX PDS REPORT 987654321 Horizon Category: SAFETY 1st telec: SHIP POSITION Position: 24°25.9755 S DPC Time: 120°59.4566 W

POS Time: 12:56 AM LOC SINCE: 00:05 STOP ALARM RX POS REPORT

987654321 Horizon Category: SAFETY 1st telec: SHIP POSITION Position: 24°25.9755 S 118°59.4566 W

POS Time: 12:56 AM LOC SINCE: 00:05 SAVE INFO RUIT RX POS REPORT

POS INFO 987654321 Horizon Position: 24/25.9755 S 118/59.4566 W POS Time: 12:56 AM LOC DST: 18.2 nm BRG: 006'T BQCK WPT QUIT

10.7.2 Receiving a DSC Position Report Call

When another vessel transmits their vessels location to the **GX6000E** the following will happen:

- 1. When a position report call is received from another vessel, a ringing sound will be produced.
- 2. Press any key to stop ringing.
- 3. Press the **[INFO]** soft key to see more detailed position information of the station.
- 4. To exit to radio mode, press the [QUIT] soft key.

10.7.3 Navigating to the Reported Position

The **GX6000E** has a feature that allows you to navigate to a received position report call by using the compass display. Navigating to the position of a position report call may be enabled by the procedure below.

- 1. After the position report call has been received, press the **[INFO]** soft key.
- 2. Press the [WPT] soft key.



 The display indicates the distance and direction of the received vessel, and the compass displays the received vessel with a dot (●).

Stopping Navigation to the Reported Position

- 1. Press one of the soft keys to show the key selections.
- Press the **[STOP]** soft key. The radio will stop navigating to the waypoint and the normal VHF display will be shown.

10.7.4 Saving the Reported Position as a Waypoint

The **GX6000E** can save a position report call in the radio's memory as a waypoint.

- 1. After the position report call has been received, press the **[SAVE]** soft key.
- If you want to change the name of the waypoint, rotate the DIAL/ENT knob to select "NAME", then press the [SELECT] soft key.
- Enter the name of the waypoint you want to reference in the directory. For details, refer to "10.4.1 Setting up the Individual / Position Call Directory".
- 4. Rotate the **DIAL/ENT** knob to select "**SAVE**", then press the **[SELECT]** soft key to save the waypoint into memory.
- 5. Press the **[OK]** soft key to return to the position report display.







Navigating to a Saved Waypoint

Refer to section "11.1.1 Starting and Stopping Navigation" for details.

10.7.5 Setting up a Position Report Ringer

The GX6000E has the capability to turn off the position report ringer.

1.

- Rotate the DIAL/ENT knob to select "POS REPORT", then press the [SELECT] soft key.
- 3. Rotate the DIAL/ENT knob to select "OFF".
- 4. Press the **[ENTER]** soft key to store the selected setting.
- 5. Press the **CLEAR** key to return to radio operation.

To re-enable the ringer tone, repeat the above procedure, rotating the **DIAL**/**ENT** knob to select "**ON**" in the step 3 above.

10.8 POLLING CALL

The GX6000E has the capability to track another vessel.

10.8.1 Transmitting a Polling Call to a Vessel

Polling Call using the Individual/Position Call Directory

- 1. [INTERNATION OF CALL" IN "POLLING CALL"
- Rotate the DIAL/ENT knob to select "HISTORY" or "MEMORY", then press the [SELECT] soft key.
- Rotate the **DIAL/ENT** knob to select a name that was stored in the individual/position call directory, then press the **[SELECT]** soft key.





1.

- 4. Press the **[YES]** soft key to transmit the polling call.
- After a polling call is transmitted, if the reply signal is not received, "Waiting for ACK" is shown on the display which means the **GX6000E** is waiting for the vessel you called to send an acknowledgement.
- 6. To transmit the call again, press the **[RESEND]** soft key.
- 7. Press the [QUIT] soft key to return to radio operation.

Polling Call by Manually Entering an MMSI


press the [SELECT] soft key.


This feature allows you to contact a vessel by manually entering the MMSI of the ship you want to track.

2. Rotate the **DIAL/ENT** knob to select "**MANUAL**", then


[🛲] 🗰 "DSC CALL" 🗰 "POLLING CALL"

- 3. Rotate the **DIAL/ENT** knob to select the first number in the MMSI and press the **[SELECT]** soft key.
- 4. Repeat step 3 until all the digits of the MMSI are shown on the display.
- If a mistake was made entering in the MMSI number, rotate the DIAL/ENT knob to select "←" or "→", press the [SELECT] soft key until the wrong character is selected, then perform step 3.
- 6. When finished entering the MMSI number, press the [FINISH] soft key.
- 7. Press the **[YES]** soft key to transmit the polling call.
- 8. Press the [QUIT] soft key to return to radio operation.

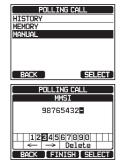

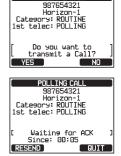

POLLING CALL

 

Receiving a Polling Call 10.8.2

When another vessel transmits a polling call to the **GX6000E** the following will happen:

- 1. When a polling call is received, the radio will automatically respond to the calling vessel.
- 2. To exit from the polling call display, press the **[QUIT]** soft key.

10.9 AUTO POSITION POLLING

The GX6000E has the capability to automatically track seven vessels programmed into the individual directory, or to automatically send your position information to the programmed stations.

Setting up the Polling Operation 10.9.1

REPORT), and press the **[ENTER]** soft key.


3. Press the **CLEAR** key to return to radio operation.

10.9.2 Setting up the Polling Time Interval

- [@END] 🗰 "SETUP" 🗰 "DSC SETUP" 🗰 "AUTO POS INTERVAL" 1.
- 2. Rotate the **DIAL/ENT** knob to select "AUTO POS **INTERVAL**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select the desired interval time (30 second, 1, 2, 3, and 5 minutes) and press the [ENTER] soft key.
- 4. Press the CLEAR key to return to radio operation.

DSC	SETUP	
	EPLY	
	CON POLL	ING
	ITERVAL	
AUTO CHANNE		ΞE
	TIMER	
	JAITING	TIME
DSC BEEP		
BACK		ELECT
	CETUR	
	SETUP	
AUTO PO	5 INTER	VAL
AUTO PO	5 INTER Øsec	VAL
AUTO PO	5 INTER	JAL
	5 INTER Øsec	JAL
	5 INTER Øsec 1min	JAL
	5 INTER Øsec 1min 2min	JAL

 I 1







10.9.3 Selecting Vessels to be Automatically Polled NOTE


The radio uses the individual directory to select vessels to be automatically polled. Refer to section "**10.4.1 Setting up the Individual** / **Position Call Directory**" and to enter MMSI of vessels you want to poll before proceeding.

- Rotate the DIAL/ENT knob to select "SELECTED ID", then press the [SELECT] soft key.
- 3. The radio will show a blank row highlighted when you select the vessel for the first time. Press the **[SELECT]** soft key.
- The radio will show the vessels programmed in the individual directory. Rotate the **DIAL/ENT** knob to select the desired vessel, then press the **[ENTER]** soft key.
- For more entries, rotate the **DIAL/ENT** knob to select a blank row, press the **[SELECT]** soft key, then perform step 4.
- 6. When finished, press the **CLEAR** key to exit to the radio mode.

10.9.4 Enabling/Disabling Auto POS Polling

- 2. Rotate the **DIAL/ENT** knob to select the "**ACTIVA-TION**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**START**" to enable transmissions or "**STOP**" to disable, then press the **[ENTER]** soft key.



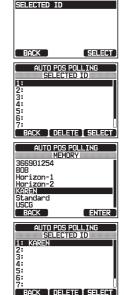

AUTO POS POLLING

STOP

ACTIVATION

- 4. Press the **CLEAR** key to return to radio operation.
- 5. Auto POS Polling starts and "**[A]**" icon will light up on the screen.



This function is used to contact another DSC equipped vessel to ensure the DSC functions of the radio are operating.

CUSTIUSA CI

745 u

18 JAN 201 18:33:33(

GX6000E

NOTE

To use this feature, the radio that will receive the test call also needs to have the DSC Test feature.

To perform the DSC test you will need to enter the MMSI of another vessel into the individual directory or manually enter in the MMSI using the procedure below.

10.10.1 Programming MMSI into Individual Directory

Refer to section "10.4.1 Setting up the Individual / Position Call Directory".

10.10.2 Transmitting a DSC Test to Another Vessel

DSC Test call by using Individual/Position Directory

[MEND] IN "DSC CALL" IN "DSC TEST CALL" 1 DSC TEST CALL 2. Rotate the **DIAL/ENT** knob to select "HISTORY" or HISTORY Memory "MEMORY", then press the [SELECT] soft key. BACK SELECT DSC TEST CALL 3. Rotate the **DIAL/ENT** knob to select the ship name, KAREN then press the [SELECT] soft key. 366901254 Horizon-1 Standard Horizon-2 BACK SELECT DSC TEST CALL 4. Press the [YES] soft key to transmit the DSC test call 987654321 Horizon-1 to the other vessel. Category: SAFETY 1st telec: TEST Do you want to transmit a Call? NO DSC TEST CALL 5. Press the **[QUIT]** soft key to return to radio operation. 987654321 Horizon-1 Category: SAFETY 1st telec: TEST Waiting for ACK Since: 00:05 RESEND QUIT

[@END] 🗰 "DSC CALL" 🗰 "DSC TEST CALL" 🗰 "MANUAL" 1. DSC TEST CALL 2. Rotate the **DIAL/ENT** knob to select "**MANUAL**", then HISTORY MEMORY press the [SELECT] soft key. BACK SELECT DSC TEST CALL 3. Rotate the **DIAL/ENT** knob to select the first digit in MMST the MMSI, then press the [SELECT] soft key. 98765432 4. Repeat step 3 until all the numbers of the MMSI are 12**3**4567890 ← → Delete shown on the display. BACK | FINISH | SELECT 5. Press the [FINISH] soft key to show the test call page. DSC TEST CALL 6. Press the [YES] soft key to transmit the DSC test call 987654321 to the other vessel. Category: SAFETY 1st telec: TEST Do you want to transmit a Call? YES N DSC TEST CALL 7. Press the **[QUIT]** soft key to return to radio operation. 987654321 Category: SAFETY 1st telec: TEST

NOTE

After the radio receives a test call reply from the vessel that was called, the radio will ring and show "RX TEST CALL" display, which confirms the radio you called has received the test call.

10.10.3 Receiving a DSC Test Call

When another vessel transmits a DSC Test call to the **GX6000E** the following will happen:

- 1. When a DSC Test call is received, the radio will automatically respond to the calling vessel.
- 2. To exit from the DSC Test call display, press the **[QUIT]** soft key.



Waiting for ACK Since: 00:05 RESEND

QUIT

10.11 DSC LOG OPERATION

The **GX6000E** logs transmitted calls, received DSC distress calls, and other calls (individual, group, all ships, etc.). The DSC log feature is similar to an answer machine where calls are recorded for review and a " \subseteq " icon will appear on the radio's display. The **GX6000E** can store up to 100 transmitted calls, up to the latest 50 distress calls, and up to the latest 100 other calls (individual, group, all ships, position report, position request ack, test call ack, and polling calls).

NOTE

When the "DSC LOG" menu is selected, the **GX6000E** may display high-priority logged call automatically.

10.11.1 Reviewing and Resending a Transmitted Logged Call

The **GX6000E** allows transmitted logged calls to be reviewed and to resend the call.

- 2. Rotate the **DIAL/ENT** knob to select "**TRANSMIT**-**TED**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select the station (name or MMSI number) you want to review and/or resend the call.
- 4. Press the **[SELECT]** soft key to review details for the selected station.
- Depending on the type of the DSC LOG selected in step 5, you can check the information of the LOG by pressing the [INFO] soft key and can reply by pressing the [CALL] soft key.



BACK I INFO DELETE

10.11.2 Reviewing a Logged DSC RX Distress Call

The GX6000E allows logged DSC RX distress call to be reviewed.

- 1. [IIIIII] ➡ "DSC CALL" ➡ "DSC LOG" ➡ "RX DISTRESS"
- Rotate the **DIAL/ENT** knob to select the station (name or MMSI number) you want to review and/or relay the distress call to other vessels.

Note: When there is an unread received call, " \square " icon will appear to the left of the logged call.

- DSC LOG RX DISTRESS □ 123 16 ALT 125392502 □ 1230 RLY YAESU-15 □ 13:05 ALT 336605425 13:06 ALT 336605425 BACK SELECT
- 3. Press the [SELECT] soft key to review details for the selected station.
- 4. Press the **[INFO]** soft key to display more information or press the **[BACK]** soft key to go back to the received DSC distress call list.



10.11.3 Reviewing Other Logged Calls

- Rotate the DIAL/ENT knob to select the station (name or MMSI number) you want to review and/or call back. *Note*: When there is an unread received call, "⊟" icon will appear to the left of the logged call.
- 3. Press the **[SELECT]** soft key to review details for the selected station.
- Press the [REPLY] soft key to reply to the call or press the [BACK] soft key to go back to the received call list.





10.11.4 Deleting Logged Calls from the DSC Log Directory

- 2. Rotate the **DIAL/ENT** knob to select the category ("TRANSMITTED", "RX DISTRESS", "RX OTHER CALL" or "ALL LOG") to be deleted.
- Press the [SELECT] soft key. The display will show "Do you want to delete the LOG?".
- 4. Press the **[YES]** soft key. (To cancel, press the **[NO]** soft key.)
- 5. Press the **CLEAR** key to return to radio operation.





NOTE

The procedure above will delete all logged calls of the selected category at one time.

To delete logged calls one by one, review the details of the call you want to delete, then press the **[DELETE]** soft key.

10.12 DSC LOOP BACK OPERATION

The **GX6000E** has a self-test feature for DSC call.

- 2. Press the **[YES]** soft key to start a test. (To cancel, press the **[NO]** soft key.)

The display will show "Passed!" if the DSC feature properly operates, then press the **[OK]** soft key to the "DSC CALL" menu.



3. Press the CLEAR key to return to radio operation.

11 NAVIGATION

The $\ensuremath{\text{GX6000E}}$ is capable of storing up to 250 waypoints for navigation using the compass page.

You can also navigate to DSC distress calls with position or a position received from another DSC radio using DSC polling.

11.1 WAYPOINT OPERATION 11.1.1 Starting and Stopping Navigation

Navigation by Using the Waypoint Directory

- Rotate the DIAL/ENT knob to select the desired category ("HISTORY" or "MEMORY"), then press the [SELECT] soft key.
- Rotate the **DIAL/ENT** knob to select a waypoint, then press the **[SELECT]** soft key. The navigation screen will appear.

The screen includes the distance and direction to the destination, and the waypoint is indicated by a dot (\bullet) inside the compass.

4. Press one of the soft keys to show the key selections. Press the **[STOP]** soft key to stop the navigation.


Navigation by Manually Entering a Waypoint

- 2. Rotate the **DIAL/ENT** knob to select "**MANUAL**", then press the **[SELECT]** soft key.
- If you want to give the waypoint an easy-to-find name, rotate the DIAL/ENT knob to select "NAME:", press the [SELECT] soft key, then enter the name. For details, refer to "10.4.1 Setting up the Individual / Position Call Directory".

GX6000E

STANDARD HORIZON

SELECT

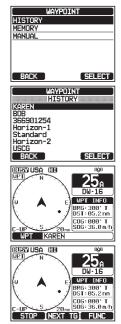

WAYPOINT

HISTORY

MANUAI

BACK

- 4. Rotate the **DIAL/ENT** knob to select "**POSITION:**", then press the **[SELECT]** soft key.
- 5. Rotate the **DIAL/ENT** knob to select the first number of latitude, then press the **[SELECT]** soft key to step to the next number.
- Repeat step 5 to set the position.
 If a mistake was made, rotate the DIAL/ENT knob to select "←" or "→", press the [SELECT] soft key until the wrong character is selected, then perform step 5.
- 7. When finished programming the position, press the **[FINISH]** soft key. The display will return to the previous screen.
- Rotate the DIAL/ENT knob to select "SAVE & GOTO", then press the [SELECT] soft key. To set the Waypoint as a temporary destination without saving and start the navigation, select "GOTO" and press the [SELECT] soft key.

The navigation screen will appear.

The screen includes the distance and direction to the destination, and the waypoint is indicated by a dot (\bullet) inside the compass.

9. Press one of the soft keys to show the key selections. Press the **[STOP]** soft key to stop the navigation.

11.1.2 Setting Up Waypoint Directory

Marking a Position

This feature allows the radio to mark the current position of the vessel.

1. [IIIII] IN "SETUP" IN WAYPOINT SETUP" IN MARK POSITION"

- 2. Rotate the **DIAL/ENT** knob to select "**NAME:**", then press the **[SELECT]** soft key.
- Enter the waypoint name by rotating the DIAL/ENT knob and the [SELECT] soft key.
 When finished entering the name (using fifteen characters or less), press the [FINISH] soft key.

Page 88



WAYP	DINT
NAME: 001WPT POSITION: 2 11	24°25.9755 S .8°59.4566 W
GO	то
SAVE 8	& GOTO
BACK	SELECT
	E DU-16 DU-16 BRG: 300" T DSI: 85.2 rm CG6: 000" T SG6: 36.9 n/h TG FUNC



GX6000E

- 4. If you want to modify the position, rotate the **DIAL/ENT** knob to select "**POSITION:**", press the **[SELECT]** soft key, then enter the new coordinates. When finished modifying the position, press the **[FINISH]** soft key.
- Rotate the DIAL/ENT knob to select "SAVE", then press the [SELECT] soft key to save the mark position into memory.
- 6. Press the **CLEAR** key to return to radio operation.

Adding a Waypoint

- 2. Rotate the **DIAL/ENT** knob to select "**ADD**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**NAME:**", then press the **[SELECT]** soft key.
- Enter the waypoint name by rotating the DIAL/ENT knob and the [SELECT] soft key.
 When finished entering the name (using fifteen characters or less), press the [FINISH] soft key.
- Rotate the DIAL/ENT knob to select "POSITION:", press the [SELECT] soft key, then enter the coordinates.
 When finished entering the position, press the [EINISH] soft key.

When finished entering the position, press the [FINISH] soft key.

- 6. Rotate the **DIAL/ENT** knob to select "**SAVE**", then press the **[SELECT]** soft key to save the waypoint into memory.
- 7. Press the **CLEAR** key to return to radio operation.

Editing a Waypoint

This function allows a previously entered waypoint to be edited.

- 1. [IIIII] IN "SETUP" IN "WAYPOINT SETUP" IN "WAYPOINT DIRECTORY"
- 2. Rotate the **DIAL/ENT** knob to select "**EDIT**", then press the **[SELECT]** soft key.


WAYPOINT SETUP	
WAYPOINT	DIRECTORY
(AC	D
ED	IT
DEL	ETE
BACK	SELECT



BACK	SELECT
	SAVE
POSITION:	24°25.9757 N 118°59.4564 E

MARK POSITION

 NAME: ØØ1MARK



- Rotate the **DIAL/ENT** knob to select the waypoint to be edited, then press the [SELECT] soft key to show the waypoint input display.
- Rotate the DIAL/ENT knob to select "NAME:" or "POSITION:", then press the [SELECT] soft key.
- 5. Rotate the **DIAL/ENT** knob to select "←" or "→", press the **[SELECT]** soft key until the character to be changed is selected, then enter a new character.
- Repeat step 5 until the waypoint is updated. When finished editing, press the [FINISH] soft key.
- Rotate the DIAL/ENT knob to select "SAVE", then press the [SELECT] soft key to store the edited waypoint into memory.
- 8. Press the **CLEAR** key to return to radio operation.

Deleting a Waypoint

 
- 1. [IIIII] IN "SETUP" IN "WAYPOINT SETUP" IN "WAYPOINT DIRECTORY
- Rotate the DIAL/ENT knob to select "DELETE", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select the waypoint to be deleted, then press the **[SELECT]** soft key.
- Confirm the waypoint to be deleted, rotate the DIAL/ ENT knob to select "OK", then press the [SELECT] soft key.
- 5. Press the **CLEAR** key to return to radio operation.

Saving a DSC Position Call as a Waypoint

When a position is received from another DSC radio the **GX6000E** allows the position to be saved as a waypoint.

Refer to section "10.7.4 Saving the Reported Position as a Waypoint" for details.

WAYPOINT SETUP
WAYPOINT DIRECTORY
EDIT
DELETE
BACK SELECT
WAYPOINT DIRECTORY
DELETE
366901254 BOB
Horizon-1
KAREN
Standard Horizon-2
HURIZUN-Z
BACK SELECT
DELETE
NAME
KAREN POSITION: 24°25,9757 N
POSITION: 24°25.9757 N 118°59.4564 E
ОК
BACK SELECT



	DIRECTORY
366901254	
BOB Horizon-1	
KAREN	
Standard Horizon-2	
USCG BACK	SELECT
	SELEU

11.1.3 Selecting the Display Range

This menu item allows setting of the range on the compass display.

- 1. [IIIII] IIII "SETUP" IIII "WAYPOINT SETUP" IIII "DISPLAY RANGE"
- Rotate the DIAL/ENT knob to select desired range. (Unit of measure depends on the settings in the GPS SETUP menu. Refer to section "18.7 UNITS OF MEASURE".)
- MEASURE".)
 3. Press the [ENTER] soft key to store the selected setting.
- 4. Press the **CLEAR** key to return to radio operation.

11.1.4 Selecting the Arrival Range

This menu item sets the distance to alert you when you are within the specified arrival range of the waypoint.


- 1. [IIII] IIII "SETUP" IIII "WAYPOINT SETUP" IIII "ARRIVAL RANGE"
- Rotate the DIAL/ENT knob to select desired range. (Unit of measure depends on the settings in the GPS SETUP menu. Refer to section "18.7 UNITS OF MEASURE".)

WAYPOINT SETUP	
ARRIVAL RANGE	
0.05nm	
0.1nm	
0.2nm	
0.5nm	
1nm	
BACK EN	TER

- 3. Press the [ENTER] soft key to store the selected setting.
- 4. Press the **CLEAR** key to return to radio operation.

11.2 ROUTING OPERATION

The **GX6000E** allows you to set 1 to 15 waypoints along the route.

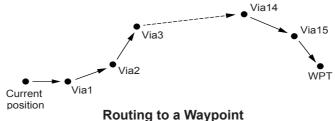


11.2.1 Setting Up Routing Directory

NOTE

All the destinations and via-points must be programmed as waypoints in the **GX6000E** memory. Refer to section "**11.1.2 Setting Up Waypoint Directory**".

FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

 

Adding a Route

1. [IIII] IIII "SETUP" IIII "WAYPOINT SETUP" IIII "ROUTE DIRECTORY"

- 2. Rotate the **DIAL/ENT** knob to select "**ADD**", then press the **[SELECT]** soft key.
- Rotate the DIAL/ENT knob to select "NAME:", then press the [SELECT] soft key.
- Enter the route name by rotating the **DIAL/ENT** knob and the **[SELECT]** soft key.
 When finished entering the name (using fifteen characters or less), press the **[FINISH]** soft key.
- 5. Rotate the **DIAL/ENT** knob to select "**ROUTE POINTS**", press the **[SELECT]** soft key.
- 6. Rotate the **DIAL/ENT** knob to select "**WPT:**", then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select a waypoint, then press the [SELECT] soft key.
- Rotate the DIAL/ENT knob to select "Via1", then press the [SELECT] soft key.
- 9. Rotate the **DIAL/ENT** knob to select a waypoint, then press the **[SELECT]** soft key.
- 10. Repeat steps 8 and 9 to add more via-points.
- 11. Press the [BACK] soft key.
- 12. Rotate the **DIAL/ENT** knob to select "**SAVE**", then press the **[SELECT]** soft key to store the route into memory.
- 13. Press the **CLEAR** key to return to radio operation.

Editing a Route

This function allows a previously entered route to be edited.

1. [IIIII] IN "SETUP" IN "WAYPOINT SETUP" IN "ROUTE DIRECTORY"





NAME:	IRECTORY
001RTE	
ROUTE	POINTS
Sf	AVE
BACK	SELECT

- 2. Rotate the **DIAL/ENT** knob to select "**EDIT**", then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select the route to be edited, then press the [SELECT] soft key to show the route input display.
- 4. Perform steps 3 to 11 of the previous page until the route is updated.
- 5. Rotate the **DIAL/ENT** knob to select "**SAVE**", then press the **[SELECT]** soft key to store the edited route into memory.
- 6. Press the **CLEAR** key to return to radio operation.

Deleting a Route

- 1. [IIII] IIII "SETUP" IIII "WAYPOINT SETUP" IIII "ROUTE DIRECTORY"
- Rotate the DIAL/ENT knob to select "DELETE", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select the route to be deleted, then press the **[SELECT]** soft key.
- Confirm the route to be deleted, rotate the DIAL/ENT knob to select "OK", then press the [SELECT] soft key.
- 5. Press the **CLEAR** key to return to radio operation.

11.2.2 Starting and Stopping Route Navigation

- Rotate the DIAL/ENT knob to select the desired category ("HISTORY" or "MEMORY"), then press the [SELECT] soft key.



SAVE

WAYPOINT SETUP


RACK

SELECT

WAYPOINT SETUP

ROUTE DIRECTORY

ROUTE DIRECTORY	
ADD	ור
EDIT	51
DELETE	=1
DEELTE	
BACK SELEC	Т
366901254	
BOB	
Horizon-1	_
KAREN Standard	-
Horizon-2	П
USCG	U
BACK SELEC	:Т]
DELETE	
NAME:	
KAREN	
POSITION: 24°25.9757	
118°59.4564	E
CANCEL	
OK	
BACK SELEC	т

 

- 3. Rotate the **DIAL/ENT** knob to select a route, then press the **[SELECT]** soft key. The navigation screen with "RUT" indicator appears.
- A message "ARRIVED" will appear when you have reached to the first target point.
 To start navigation to the next target, press the **[YES]** soft key.
- 5. Press one of the soft keys to show the key selections. Press the **[STOP]** soft key to stop the navigation.

11.2.3 Changing the Destination

- 1. On the navigation screen, press one of the soft keys to show the key selections.
- 2. Press the [NEXT TG] soft key.
- 3. Rotate the **DIAL/ENT** knob to select desired destination, then press the **[SELECT]** soft key.
- 4. The navigation screen with a new destination appears.

11.2.4 Selecting Automatic or Manual Routing

This selection allows you to start navigation to the next target automatically or manually when your vessel has arrived at a waypoint.

- Rotate the DIAL/ENT knob to select "AUTO" or "MANUAL", then press the [ENTER] soft key.
- 3. Press the **CLEAR** key to return to radio operation.



ROUTE

HISTORY

808 366901254 Horizon-1

Standard Horizon-2 USCG





12 GM OPERATION

The GM (Group Monitor) feature of the **GX6000E** utilizes the same system as the DSC Group call and Auto Position Polling, to display the group members' locations.

12.1 SETTING UP GM OPERATION

The **GX6000E** is capable of storing up to 10 groups with 1 to 9 members each.

12.1.1 Setting Up GM Group Directory

NOTE

- For this function to operate, the same group MMSI must be programmed into each transceiver of group members to be monitored. Refer to section "10.5.1 Setting up a Group Call" for details.
- Group members for GM operation can only be selected from the Individual/Position Call directory, there for all members that you want to monitor have to be stored in the directory. Refer to section "10.4.1 Setting up the Individual / Position Call Directory" for details.
- 2. Rotate the **DIAL/ENT** knob to select "**ADD**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**NAME:**", then press the **[SELECT]** soft key.
- Enter the route name by rotating the DIAL/ENT knob and the [SELECT] soft key.
 When finished entering the name (using eleven characters or less), press the [FINISH] soft key.
- 5. Rotate the **DIAL/ENT** knob to select "**GM ID:**", press the **[SELECT]** soft key, then enter the group MMSI number.

When finished entering the MMSI, press the **[FINISH]** soft key.

6. Rotate the **DIAL/ENT** knob to select "**MEMBER**", then press the **[SELECT]** soft key.



GM GROUP DIREC	TORY
NAME:	
Standard	
GM ID:	
0	
MEMBERS	
SAVE)
BACK	SELECT

GM GROUP DIR	ECTORY
NAME:	
Standard	
GM ID:	
087654323	
	_
MEMBERS	i .
SAVE	
BACK	SELECT

- 7. Rotate the **DIAL/ENT** knob to select a list number, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select a member from the Individual directory, then press the [SELECT] soft key.
- 9. Repeat steps 8 to add members to the group, then press the **[BACK]** soft key.
- 10. Press the [BACK] soft key to return to the "NAME:" and "GM ID:" screen.
- 11. Rotate the **DIAL/ENT** knob to select "**SAVE**" to store the data, then press the **[ENTER]** soft key.
- 12. To enter another group directory, repeat steps 2 through 11.
- 13. Press the **CLEAR** key to return to radio operation.

12.1.2 Setting Up the Polling Time Interval

- 2. Rotate the **DIAL/ENT** knob to select the desired interval time, then press the **[ENTER]** soft key.
- 3. Press the **CLEAR** key to return to radio operation.

12.1.3 Enabling/Disabling Transmission during GM Operation


- 2 Rotate the **DIAL/ENT** knob to select the desired transmission type, then press the **[ENTER]** soft key.
 - OFF: Disables the transmission during GM operation.
 - ON ALL: Enables the transmission during the GM operation.
- 3. Press the CLEAR key to return to radio operation.



GM SETU	
INTERVA	L
30sec	
1min	
(2min	
(3min	
5min	
BACK	ENTER

GM SETUP
 
<u>GM TX</u> OFF





GM GROUP DIRECTORY

1:

2: 34: 5: 6: 7: Standard

	operation.
ON GM:	Enables the transmission during the GM
	target display.
	Enclose the transmission during the CM and

12.2 STARTING GM OPERATION

NOTE

To start GM operation, configure the GM Group Directory setting in setup menu. Otherwise, you cannot start the GM operation. Refer to section "**12.1.1 Setting Up GM Group Directory**" for details.

- 1. [MENU] ••• "GM"
- Rotate the DIAL/ENT knob to select the desired category ("HISTORY" or "MEMORY"), then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select a group you want to monitor, then press the **[SELECT]** soft key.

The GM operation starts and the GM target display appears.


4. Press the CLEAR key to return to radio operation.

12.2.1 Changing the GM Group Being Monitored

- 1. On the GM target display, press one of the soft keys to show the key selections.
- 2. Press the **[TG LIST]** soft key.
- 3. Press the [CHG GP] soft key.
- Rotate the **DIAL/ENT** knob to select the name of the group you want to start monitoring, then press the [ENTER] soft key.



GROUP MONITOR

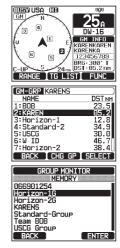

The GM group being monitored changes. The GM target display appears.

5. Press the **CLEAR** key to return to radio operation.

Transmitting a DSC Call to a Group Member 12.2.2

- 1. On the GM target display, press one of the soft keys to show the key selections.
- Press the [TG LIST] soft key.
- 3. Rotate the **DIAL/ENT** knob to select a member you want to call.
- 4. Press the [SELECT] soft key to display the location, distance, and bearing of the selected member.
- 5. Press the [CALL] soft key to transmit a DSC Individual call to the selected member.

12.2.3 Starting Navigation to a Group Member

- 1. On the GM target display, press one of the soft keys to show the key selections.
- Press the [TG LIST] soft key.
- 3. Rotate the **DIAL/ENT** knob to select a member you want to approach.
- 4. Press the [SELECT] soft key to display the location, distance, and bearing of the selected member.
- 5. Press the **[TO WPT]** soft key to start navigation to the selected member. (Press the [BACK] soft key twice to cancel and return to the GM target display.)



BACK CHG GP SELECT

POS INFO 123456789

KAREN

123456789

DST N

34

20 46

38.4

RUST USA DO

EUSY USA COD

4 ദ

GM-GRP KARENS

3:Horizon-1 4:Standard-2


5:USCG 6:W ID 7:Horizon-2

GM-GRP KARENS

Position:

 NAME 1:BOB 28KAREN





13 AUTOMATIC IDENTIFICATION SYSTEM (AIS)

13.1 GENERAL

NOTE

- The **GX6000E** is equipped with an antenna connection designated for AIS. By connecting a marine antenna to this connector, the transceiver can receive AIS signals while receiving a VHF voice transmissions.
- Install the VHF antenna and the AIS antenna as far away from each other as possible. Having a large vertical distance is especially effective for improving high frequency isolation. To make even longer-range communication possible, it is recommended to install the antenna for VHF at a height higher than the antenna for AIS.

The Automatic Identification System (AIS) is a short range coastal tracking system. AIS is intended to assist in collision avoidance by seeing positions and courses of AIS equipped vessels around your vessel.

AIS is mandatory on passenger ships, irrespective of size, all ships 300 gross tonnage and larger engaged on international voyages, cargo ships of 500 gross tonnage and larger not engaged on international voyages.

AIS uses two marine VHF channels. Each ship equipped with an AIS transponder transmits a packet every few seconds with information about the ship and its voyage. Radio frequencies: AIS1 = 161.975 MHz, or channel 87B and AIS2 162.025 MHz, or channel 88B. A stand-alone AIS receiver or the AIS receiver built in to a Class A or Class B transponder can pick up these radio signals and translate them into a NMEA data sentence that can be understood by a computer with the proper software or by an AIS-enabled chart plotter.

Classes of AIS:

- Class A 12.5W power output mandated for use on SOLAS Chapter V vessels (and others in some countries).
- Class B CS 2W output lower cost derivative for leisure and non-SOLAS markets.

The **GX6000E** is capable of receiving Class A and Class B CS transmissions with the internal Dual Channel AIS receiver.

13.2 AIS OPERATION

The **GX6000E** is equipped with an AIS receiver and can display AIS targets around your vessel on the radio's display. Therefore, you can identify and avoid in proximity to your vessel.

NOTE

To show AIS targets on the radio's display, the **SCU-31** or an external GPS devices needs to be connected via NMEA 0183 or NMEA 2000 so the radio knows its position relative to the AIS targets.

1. [MENU] 🗰 "AIS"

The AIS display shows your vessel as a "**i**" icon in the center of the display. AIS targets are shown as triangles. The line projected from the circle is the AIS vessels course over ground (COG).

 Press the ►/◀ key to change the AIS target. Pressing the ◀ key sequentially displays AIS vessels in order closest to your ship. Pressing the ► key sequentially displays AIS vessels in order furthest from your ship. The selected AIS target is displayed with "^r₄" icon, while other stations are displayed with "△" icon.

Note: Up to 15 AIS targets can be shown on the display. All received AIS targets are displayed on the compatible chartplotter or navigation software via NMEA 0183 or NMEA 2000.

3. Press the **CLEAR** key to return to radio operation.

13.2.1 Displaying the AIS Target Information Screen

 On the AIS screen, press one of the soft keys to show the key selections. These selections are described below:

[RANGE]: Press this key to change the display range of the screen.

- **[TG LIST]**: Press this key to show a list of the MMSI numbers or the vessel names being received.
- **[FUNC]**: Press this key to show the function menu.
- 2. Press the [TG LIST] soft key to show a list of AIS target being received.

Page 100







Information of the AIS Target

POS/TIME

Vessel Location

 
AIS

- Rotate the DIAL/ENT knob to select the MMSI number (or vessel name). then press the [SELECT] soft key. Pressing the [DANGER] soft key changes the order to the TCPA time order.
- The AIS target information screen appears. To see more information of the AIS target, press the [NEXT] soft key.
- 5. Press the **CLEAR** key to return to radio operation.

13.2.2 Changing the AIS Range

- 1. On the AIS screen, press one of the soft keys to show the key selections.
- Press the [RANGE] soft key. Press the soft keys at the center and right side to select the radius range to display on the AIS screen.
- 3. Press the [BACK] soft key to return to AIS screen.





NOTE

You may change the display range unit of the AIS screen, refer to section "**18.7 UNITS OF MEASURE**".

13.2.3 Transmitting an Individual Call to an AIS Ship

It is possible for the **GX6000E** to transmit a DSC individual call to a received AIS target by the procedure below:

- 1. On the AIS screen, press one of the soft keys to show the key selections.
- 2. Press the **[TG LIST]** soft key to show a list of AIS target being received.
- 3. Rotate the **DIAL/ENT** knob to select the MMSI number (or vessel name). then press the **[SELECT]** soft key.



- In the INTERSHIP CH list, rotate the DIAL/ENT knob to select the operating channel on which you want to communicate, then press the [SELECT] soft key. To select operating channels from all voice channels, press the [MANUAL] soft key.
- 6. To transmit an individual DSC call to the select AIS ship, press the **[YES]** soft key.

After the **GX6000E** transmits, the radio waits for the DSC radio on the AIS ship to transmit a reply, at which time the radio will ring like a telephone. Pick up the mic, press the **PTT** switch and talk to the AIS vessel.

- 7. Press the **[QUIT]** soft key to return to AIS screen.
- 8. Press the **CLEAR** key to return to radio operation.

13.2.4 CPA/TCPA Alarm Functions

The CPA (Closest Point of Approach) alarm sounds when other AIS vessels enter within the range set as the CPA Limit. For details, refer to section "**13.3.1 CPA**".

The TCPA (Time to Closest Point of Approach) alarm sounds according to the time set as the TCPA Limit which is the time taken until other AIS vessels enter within the range set as the CPA Limit. For details, refer to section "**13.3.2 TCPA**".

- 1. If other AIS vessels approach your ship, the alarm sounds according to the CPA Limit and TCPA Limit that you set in advance.
- Press any key to stop the alarm. The targets for the CPA/TCPA alarm will appear with "." "," and flash.

Up to 15 targets for the CPA/TCPA alarm can be shown on the screen.

Note: If the display is in a mode other than AIS, the radio automatically switches to the AIS mode.

TARGET INFO 1/5
Class: CLASS A MMSI: 366901254 Name: BOB
Origin: Call Sign: IMO No:
BACK CALL NEXT
INDIVIDUAL CALL
INTERSHIP CH
CH: 06
CH: 06
CH: 06 CH: 08
CH: 06 CH: 08 CH: 09
CH: 06 CH: 08 CH: 09 CH: 10







STANDARD HORIZON

- On the display you will notice 3 soft key selections. These selections are described below:
 - **[INFO]**: Pressing this key shows the information screen of the CPA/TCPA alarm targets.
 - [CALL]: Pressing this key switches the screen to the setting screen for transmitting individual DSC calls.

[QUIT]: Press this key to return to AIS screen.

4. To transmit individual calls to the CPA/TCPA alarm targets, follow steps 4 through 8 in **"13.2.3 Transmitting an Individual Call to an AIS Ship**"

13.2.5 Changing the Compass Display

The compass display can be switched between "COURSE-UP" and "NORTH-UP". The default setting is "COURSE-UP".

 
Refer to section "18.2 COMPASS DIRECTION" for details.

13.3 AIS SETUP

13.3.1 CPA

This function allows you to set the CPA (Closest Point of Approach) $\!\!\!\!^\times$ alarm distance.

- *: CPA means the positions at which two moving vessels reach their closest possible distance.
- Rotate the DIAL/ENT knob to select the distance you want the radio to alert you of an approaching AIS equipped vessel. You can select one from "0.5nm", "1nm", "2nm", "5nm", or "10nm" ("0.5nm" is default).
 Press the [ENTER] soft key to store the selected




setting.Press the **CLEAR** key to return to radio operation.

13.3.2 TCPA

This function allows you to set the TCPA (Time to Closest Point of Approach)* alarm.

 *: Setting up a TCPA alarm sets a time point where the radio will alarm when an AIS equipped vessel approaching is within the time selected.



STANDARD HORIZON

[▲ [▲ SETUP" ➡ "AIS SETUP" ➡ "TCPA"

- Rotate the DIAL/ENT knob to select the time you want the radio to alert you of an approaching AIS equipped vessel. The time can be set from "1min" to "30min" ("10min" is default).
- 3. Press the **[ENTER]** soft key to store the selected setting.
- 4. Press the **CLEAR** key to return to radio operation.

13.3.3 CPA/TCPA Alarm

1.

Enable/disable the CPA/TCPA alarm functions. The default setting is "OFF".



- 2. Rotate the **DIAL/ENT** knob to select "**CPA**" or "**TCPA**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select "OFF" or "ON".
- 4. Press the **[ENTER]** soft key to store the selected setting.
- 5. Press the **CLEAR** key to return to radio operation.

NOTE

The alarm will sound until it is disabled (1) by pressing any key, (2) following the steps above and selecting "OFF" in step 3, or (3) when the ship is out of the selected CPA/TCPA alarm range. The alarm is produced from the front panel speaker, the speaker in the mic, the optional external speaker and optional **RAM4** and **RAM4W** mic when connected.

13.3.4 IGNORE VESSELS

This function allows listed registered AIS vessels to be ignored by the CPA / TCPA alarm function.

- 1.



GX6000E



- Rotate the DIAL/ENT knob to select "IGNORE VESSELS", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**ADD**", then press the **[SELECT]** soft key.
- 4. Press the [SELECT] soft key.
- Rotate the DIAL/ENT knob to scroll through numbers, 0-9. Press the [SELECT] soft key to enter the desired number and move one space to the right. Repeat this procedure until all nine space of the MMSI number are entered.

If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select " \leftarrow " or " \rightarrow ", press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.

- 6. When the MMSI number is entered, press the [FINISH] soft key.
- To store the entered data, rotate the DIAL/ENT knob to select "SAVE", then press the [SELECT] soft key.
- 8. To enter another AIS vessel, repeat steps 3 through 7.
- 9. Press the CLEAR key to return to radio operation.





14 NMEA 2000 SETUP

Set the device numbers and system numbers of devices connected to the NMEA 2000 network.

14.1 SELECT DEVICE

Select the device for which you want to set the device number and system number.

- 2. In the SELECT DEVICE list, rotate the **DIAL/ENT** knob to select the external device for which you want to set the device number or the system number.



- 3. Press the [SELECT] soft key to store the selected setting.
- 4. Press the CLEAR key to return to radio operation.

NOTE

If any devices connected to the network are not displayed in the list, press the **[SEARCH]** soft key to update the list.

14.2 DEVICE NUMBER

If connecting two or more **GX6000E** radios, change the device number of either one. Set the device number of the device selected in "**14.1 SELECT DEVICE**".

- [@END] ➡ "SETUP" ➡ "NMEA2000 SETUP" ➡ "DEVICE NUMBER"
- Rotate the **DIAL/ENT** knob to select the first digit of the device number, then press the [SELECT] soft key to step to the next number.
- 3. Repeat step 2 to set the device number within the range of 000 to 251. ("000" is default).
- 4. If a mistake was made entering in the device number, rotate the **DIAL/ENT** knob to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform step 2.
- 5. When finished programming the device number, press the **[FINISH]** soft key.



NMEA2000 SETUP

DEVICE NUMBER

100

1234567890

← → Delete BACK FINISH SELECT

6. Press the **CLEAR** key to return to radio operation.

1.

14.3 SYSTEM NUMBER

Set the system number of the device selected in "14.1 SELECT DEVICE".

- 1. [IIII] 🗰 "SETUP" 🗰 "NMEA2000 SETUP" 🗰 "SYSTEM NUMBER"
- Rotate the DIAL/ENT knob to select the first digit of the system number, then press the [SELECT] soft key to step to the next number.
- 3. Repeat step 2 to set the system number within the range of 00 to 15. ("00" is default).
- If a mistake was made entering in the system number, rotate the DIAL/ENT knob to select "←" or "→", press the [SELECT] soft key until the wrong character is selected, then perform step 2.
- 5. When finished programming the system number, press the **[FINISH]** soft key.





6. Press the **CLEAR** key to return to radio operation.

14.4 SUMMARY OF THE NMEA 2000 SETUP

Item	Description	Default Value	Page
SELECT DEVICE	Select the device for which you want to set the device number or the system number	_	106
DEVICE NUMBER	Set the device number	000	106
SYSTEM NUMBER	Set the system number	00	107

14.5 COMPATIBLE NMEA 2000 PGN LIST

	Receive	Transmit	
059392	ISO Acknowledgement	059392	ISO Acknowledgement
059904	ISO Request	059904	ISO Request
060928	ISO Address Claim	060928	ISO Address Claim
065240	ISO Commanded Address	-	-
126464	Receive/Transmit PGN's group function	126464	Receive/Transmit PGN's group function
126993	Heartbeat	126993	Heartbeat
126996	Product Information	126996	Product Information
127237	Heading/Track Control	-	-
127250	Vessel Heading	-	-
127258	Magnetic Variation	-	-
128259	Speed	-	-
129025	Position, Rapid Update	-	_
129026	COG and SOG, Rapid Update	-	_

GX6000E

STANDARD HORIZON

Ihr Partner für Funktechnik | Your partner for radio technology FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

Receive			Transmit
129029	GNSS Position Data	129029	GNSS Position Data
129033	Local Time Offset	-	-
-	-	129038	AIS Class A Position Report
-	-	129039	AIS Class B Position Report
-	-	129040	AIS Class B Extended Position Report
-	-	129041	AIS Aids to Navigation (AtoN) Report
-	-	129793	AIS UTC and Date Report (Base Station)
-	-	129794	AIS Class A Static and Voyage Related Data
-	-	129796	AIS Acknowledge
-	-	129797	AIS Binary Broadcast Message
-	_	129798	AIS SAR Aircraft Position Report
-	-	129799	Radio Frequency/Mode/Power
-	-	129801	AIS Addressed Safety Related Message
-	-	129802	AIS Safety Related Broadcast Message
-	_	129808	DSC Call Information
-	_	129809	AIS Class B "CS" Static Data Report, Part A
-	_	129810	AIS Class B "CS" Static Data Report, Part B
129540	GNSS Sats in View	129540	GNSS Sats in View



15 CONFIGURATION SETUP

15.1 DISPLAY MODE

The display mode can be selected according to the time of day you operate the radio.

1.

[[SETUP" 🗰 "CONFIGURATION" 🗰 "DISPLAY MODE"

 Rotate the DIAL/ENT knob to select the desired setting. You can select one from "DAY MODE" or "NIGHT MODE".

DAY MODE: Normal display mode.



NIGHT MODE: Low brightness display mode for night use.

- 3. Press the [ENTER] soft key to store the selected setting.
- 4. Press the **CLEAR** key to return to radio operation.

15.2 DIMMER ADJUSTMENT

This menu selection adjusts the backlight intensity.

- Rotate the **DIAL/ENT** knob to select the desired level ("7" is default). When "OFF" is selected, the lamp is turned off.
- 3. Press the [ENTER] soft key to store the selected level.
- 4. Press the **CLEAR** key to return to radio operation.

 
15.3 DISPLAY CONTRAST

The display contrast can be adjusted to suit your operation environment.

1. SETUP" 🗰 "CONFIGURATION" 🗰 "CONTRAST"

- Rotate the DIAL/ENT knob to select the desired level. The contrast level can be set from "1" to "30" ("15" is default).
- 3. Press the [ENTER] soft key to store the selected level.
- 4. Press the **CLEAR** key to return to radio operation.





15.4 KEY BEEP

This selection is used to select the beep tone volume level when a key is pressed.


- 1.
- [🛲] 🛶 "SETUP" 🛶 "CONFIGURATION" 🛶 "KEY BEEP"
- Rotate the DIAL/ENT knob to select the desired level. The beep level can be set from "1" to "7", or "OFF" ("4" is default).
- 3. Press the [ENTER] soft key to store the selected level.
- 4. Press the **CLEAR** key to return to radio operation.

15.5 FOG ALERT TONE FREQUENCY

The function allows the radio to be setup to send the proper fog frequency which is dependent on vessel size, shown below:

	Vessel that are 200 meters or more in length
130 - 350Hz:	Vessel that are 75 meters or more but less than 200 meters in length
250 - 700Hz:	Vessel that are 20 meters or more but less than 75 meters in length
250 - 700Hz:	Vessel that are 12 meters or more but less than 20 meters in length

  Rotate the DIAL/ENT knob to select the desired level. The frequency level can be set from "200Hz" to "850Hz" ("400Hz" is default).



CONFIGURATION

KEY BEEP

Δ

ENTER

¥∎

BACK

- 3. Press the **[ENTER]** soft key to store the selected setting.
- 4. Press the **CLEAR** key to return to radio operation.

NOTE

By default, the radio Fog frequency is set to 400 Hz. In most cases this frequency should not be changed unless the vessel is very large.

15.6 LISTEN BACK

While in PA, FOG HORN, or HORN mode, toggle the listen back function between ON and OFF.

- 1.

STANDARD HORIZON

- Rotate the DIAL/ENT knob to select "OFF" or "ON" ("ON" is default).
- 3. Press the **[ENTER]** soft key to store the selected setting.
- 4. Press the **CLEAR** key to return to radio operation.

15.7 STATION NAME

This function allows you to change the name of the radio or second station microphone.

Example: "Radio - Cabin", "RAM 1 - Flybridge"

- 2. With the second station microphone connected, rotate the **DIAL/ENT** knob to select the unit to be named, then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select to scroll through the first letter of the new station name.
- 4. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.
- Repeat steps 3 and 4 until the name is complete. The name can consist of up to ten characters, and if you do not use all ten characters, select "→" to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the station name, rotate the **DIAL/ENT** knob to select " \leftarrow " or " \rightarrow ", press the **[SELECT]** soft key until the wrong character is selected, then perform steps 3 and 4.

- 6. When finished entering the station name (using ten characters or less), press the **[FINISH]** soft key to advance to the second station name entry.
- 7. Rotate the **DIAL/ENT** knob to select "**SSM-70H**", then press the **[SELECT]** soft key.
- 8. Rotate the **DIAL/ENT** knob to select to scroll through the first letter of the new station name.
- 9. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.







CONFIGURATION

10. Repeat steps 8 and 9 until the name is complete. The name can consist of up to ten characters, and if you do not use all ten characters, select "→" to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the station name, rotate the **DIAL/ENT** knob to select " \leftarrow " or " \rightarrow ", press the **[SELECT]** soft key until the wrong character is selected, then perform steps 8 and 9.

- 11. When finished entering the station name (using ten characters or less), press the **[FINISH]** soft key.
- 12. Press the **CLEAR** key to return to radio operation.

15.8 SOFT KEYS

From this menu, you can assign desired functions to each soft key from numbers 01 to 12. You can also set how long the soft key icon will be displayed after the corresponding soft key is pressed.

15.8.1 Key Assignment

- 2. Rotate the **DIAL/ENT** knob to select "**KEY ASSIGN-MENT**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select the key number to be programmed, and press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select a new function to be assigned, and press the **[ENTER]** soft key. Available functions are listed below. By selecting "NONE" the soft key assignment is removed.

Repeat steps 3 and 4 to program other soft keys.
 The VHF radio's functions can be assigned to the maximum of 12 soft keys.
 Pressing the ►/◀ key each time shows three different soft keys.



6. Press the **CLEAR** key to return to radio operation.



DISPLAY	FUNCTION	SOFT KEY NUMBERS ASSIGNED AS DEFAULT (See the previous page.)
NONE	-	-
TX HI/LO	Selects transmit power	02
WX/CH	Switches channels between weather and marine	01
SCAN	Turns on or off scanning function	05
DUAL WATCH	Starts and stops dual watch scan	06
MARK POSITION	Marks the current position for a "Waypoint"	09
SCAN MEMORY	Add or remove channels from memory channel scan	04
PRESET	Programs or deletes the preset memory channel	10
MAN OVERBOARD	Marks the position where a person falls overboard	03
NOISE CANCEL	Enables the noise canceling settings display	
CH NAME	Edit channel names	
STROBE*	Turns on or off the strobe light LED	
SCRAMBLER	Configures the secret communication settings	
COMPASS	Enables the "Compass" display	
WAYPOINT	Enables the "Waypoint" or "Route" navigation display	
FOG HORN	Select FOG HORN mode	
INTERCOM	Activates intercom between radio and RAM4 mic (optional SSM-70H (RAM4) or SSM-71H (RAM4W) required)	
GPS LOGGER	Starts and stops logging position data	
AIS DISPLAY	Shows the "AIS" display	
HORN BUTTON	Activates the Fog Horn function	12
PUBLIC ADDRESS	Activates the PA function	
RX RECORD	Records received voices	07
RX SENSE	Toggles between LOCAL and DISTANCE	11
PLAY	Plays recorded voices	08

(*: SSM-70H (RAM4) and SSM-71H (RAM4W) only)

15.8.2 Key Timer

- 2. Rotate the **DIAL/ENT** knob to select "**KEY TIMER**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select the desired time.
- 4. Press the **[ENTER]** soft key to store the selected setting.
- 5. Press the **CLEAR** key to return to radio operation.



15sec

BACK

ENTER

15.9 MODE/STATUS LED DIMMER

This menu selection adjusts the MODE/STATUS indicator intensity.

 
- 1. [IIIII] IN "SETUP" IN "CONFIGURATION" IN "MODE/STATUS LED DIMMER"
- 2. Rotate the **DIAL/ENT** knob to select the desired level ("7" is default). When "OFF" is selected, the indicator does not light.
- 3. Press the [ENTER] soft key to store the selected level.
- 4. Press the **CLEAR** key to return to radio operation.

15.10 RESET

You may reset the memory and settings of the setup categories independently or return the transceiver to the original factory setting.

1.

- Rotate the DIAL/ENT knob to select the desired category. You can select one from "DSC/GM SETUP", "WAYPOINT SETUP", "CHANNEL SETUP", "GPS SETUP", "AIS SETUP", "CONFIGURATION", or "FACTORY" (all settings* except the "MMSI" and "Vessel Information" will be initialized).
 - (*: The Individual Directory and the GPS Log also eliminated.)
- 3. Press the [SELECT] soft key.
- 4. Press the **[YES]** soft key. (To cancel, press the **[NO]** soft key.)
- 5. Press the [OK] soft key.
- 6. Press the CLEAR key to return to radio operation.









15.11 SUMMARY OF THE CONFIGURATION SETUP

ltem	Description	Default Value	Page
DISPLAY MODE	Toggles LCD display mode between daytime and nighttime mode	DAY MODE	109
DIMMER	Adjusts the backlight level of the LCD and keypad	DAY MODE: 7 NIGHT MODE: 4	109
CONTRAST	Adjusts the contrast of the LCD	15	109
KEY BEEP	Adjusts the volume of beep tone when a key is pressed	4	110
FOG FREQUENCY	Sets the tone frequency when transmitting FOG	400Hz	110
LISTEN BACK	Turns on or off of listen back func- tion	ON	110
STATION NAME	Sets the names of the radio and external devices	RADIO RAM 1 RAM 2	111
SOFT KEY			
KEY ASSIGNMENT	Sets the assignment of the soft keys		112
KEY TIMER	Sets the display time of the soft keys	10 sec	113
MODE/STATUS LED DIMMER	Adjusts the brightness level of the MODE/STATUS indicator	7	114
RESET	Initializes the memories and settings	_	114

16 CHANNEL FUNCTION SETUP

16.1 CHANNEL GROUP

This menu item allows you to select a channel group from USA, Canada, and International.

Refer to section "8.7 INTERNATIONAL, USA, AND CANADA MODE" for details.

16.2 WEATHER ALERT

Enables/disables the NOAA Weather Alert function. The default setting is "ON".

1. [IIII] IIII "SETUP" IIII "CHANNEL SETUP" IIIII "WEATHER ALERT"

- 2. Rotate the **DIAL/ENT** knob to select "ON" or "OFF".
- 3. Press the **[ENTER]** soft key to store the selected setting.
- 4. Press the **CLEAR** key to return to radio operation.

16.3 SCAN MEMORY

To be able to scan channels the radio must be programmed. This section allows channels to be stored in scan memory.

Refer to section "8.10.2 Programming Scan Memory" for details.

16.4 SCAN TYPE

This selection is used to select the scan mode between "**MEMORY**" and "**PRIORITY**". The default setting is "PRIORITY".

Refer to section "8.10.1 Selecting the Scan Type" for details.

16.5 SCAN RESUME

This selection is used to select the time the **GX6000E** waits after a transmission ends before the radio starts to scan channels again. The default setting is 2 seconds.

- 1.
- [@____] ➡ "SETUP" ➡ "CHANNEL SETUP" ➡ "SCAN RESUME"
- Rotate the **DIAL/ENT** knob to select the desired resume time, default is 2 seconds. The resume time can be set to "**1sec**" through "**5sec**".
- 3. Press the [ENTER] soft key to store the new setting.
- 4. Press the **CLEAR** key to return to radio operation.



CHANNEL SETUP

WX ALERT

ENTER

BACK

16.6 MULTI WATCH

This selection is used to select the watch type between "DUAL" and "TRIPLE". The default setting is "DUAL".

Refer to section "8.9 MULTI WATCH (TO PRIORITY CHANNEL)" for details.

PRIORITY CHANNEL 16.7

This procedure allows the radio to use a different priority channel used when priority scanning. By default, the radio priority channel is set to Channel 16.

- [@■■ "SETUP" → "CHANNEL SETUP" → "PRIORITY CHANNEL" 1.
- 2. Rotate the **DIAL/ENT** knob to select the desired channel to be a priority.
- Press the [ENTER] soft key to store the new setting.
- 4. Press the **CLEAR** key to return to radio operation.

16.8 SUB CHANNEL

By default, the sub channel is set to Channel 9. This procedure allows the radio to assign a different sub channel for instant access.

[@END] 🗰 "SETUP" 🗰 "CHANNEL SETUP" ា "SUB CHANNEL" 1.

 
- 2. Rotate the **DIAL/ENT** knob to select the desired channel to be a sub channel
- 3. Press the [ENTER] soft key to store the new setting.
- 4. Press the **CLEAR** key to return to radio operation.

 
16.9 CHANNEL NAME

When the radio ("Normal") mode is selected, the display will show a name under the channel number. This name describes the use of the channel. The radio has the capability to customize the name by the procedure below.

Example: CH69 PLEASURE to HOOKUP

- [@END] 🗰 "SETUP" 🗰 "CHANNEL SETUP" ា "CHANNEL NAME" 1.
- 2. Rotate the **DIAL/ENT** knob to select the channel to be named, then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to scroll through the first letter of the new channel name.







Page 117

- 4. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.
- Repeat step 3 and 4 until the name is complete. The name can consist of up to 16 characters, if you do not use all 16 characters, select "→" to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the channel name, rotate the **DIAL/ENT** knob to select " \leftarrow " or " \rightarrow ", press the **[SELECT]** soft key until the wrong character is selected, then perform steps 3 and 4.

- 6. When finished entering the channel name (using fifteen characters or less), press the **[FINISH]** soft key to save the name.
- 7. If you want to enter the name of another channel, repeat the steps 2 through 6.
- 8. Press the **CLEAR** key to return to radio operation.

NOTE

When "CHANNEL NAME" is assigned to the soft key, you can show the channel name input display directly by pressing the **[NAME]** soft key during radio operation.

16.10 NOISE CANCELLATION

Enables/disables the Noise-canceling function of the transmitter and receiver independently.

1.


[_____] 🗰 "SETUP" 🗰 "CHANNEL SETUP" 🗰 "NOISE CANCEL"

- Rotate the DIAL/ENT knob to select "TX MODE", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**ON**" or "**OFF**", then press the **[ENTER]** soft key.





 GX6000E



- 4. Rotate the **DIAL/ENT** knob to select "**RX MODE**", then press the **[SELECT]** soft key.
- Rotate the DIAL/ENT knob to select the noise level from "LEVEL1" through "LEVEL4" or "OFF", then press the [ENTER] soft key.
- 6. Press the **CLEAR** key to return to radio operation.

16.11 AUDIO FILTER OPERATION

This menu item allows you to select operation of the internal audio filter for the best acoustics in noisy environments. The default setting is "NORMAL".

- Rotate the **DIAL/ENT** knob to select the desired filter operation.
- 3. Press the **[ENTER]** soft key to store the new setting.
- 4. Press the **CLEAR** key to return to radio operation.

16.12 RX RECORDER

Configure settings of the function for recording received voices.

16.12.1 RX Recorder Function ON/OFF

Enable/disable the RX Recorder function. The default setting is "OFF".

- Rotate the DIAL/ENT knob to select "ACTIVATION", then press the [SELECT] soft key.
- Rotate the DIAL/ENT knob to select "ON" or "OFF", then press the [ENTER] soft key to store the new setting.
- 4. Press the **CLEAR** key to return to radio operation.

16.12.2 Setting for Recording Delay Time

Set the time interval until recording stops after the end of voice reception. The default setting is 3 seconds.







- 2. Rotate the **DIAL/ENT** knob to select "**RECORDING DELAY TIME**", then press the **[SELECT]** soft key.
- Rotate the DIAL/ENT knob to select the desired delay time. The delay time can be set to "1sec" through "5sec".
- 4. Press the [ENTER] soft key to store the new setting.
- 5. Press the **CLEAR** key to return to radio operation.

16.12.3 Setting for End of Tone

Enable/disable the tone function that indicates the end of recording when recording stops. The default setting is "ON".

- 2. Rotate the **DIAL/ENT** knob to select "**END OF TONE**", then press the **[SELECT]** soft key.
- Rotate the DIAL/ENT knob to select "OFF" or "ON", then press the [ENTER] soft key to store the new setting.
- 4. Press the **CLEAR** key to return to radio operation.

16.12.4 Data Erase

Delete recorded voice data.



2. Rotate the **DIAL/ENT** knob to select "**DATA ERASE**", then press the **[SELECT]** soft key.



GX6000E

L LHHNNEL SEIU	
RX RECORDER	
ACTIVATION	ON)
	IME
END OF TONE	ON
ERASE	
LEKHOE	
l	
BACK	SELECT
RX RECORDER	
END OF TONE	
Í OFF	
I	
ON	
	ENTER

ILACTIVATION	(ON)
RECORDER DELAY	TIME
END OF TONE	ON
ERASE	
BACK	SELECT
RX RECORD	FR
RECORDER DELA	
1sec	
2sec	
2sec 3sec	
3sec	

CHANNEL SETUP

RX RECORDE

- 3. Press the **[YES]** soft key. (To cancel, press the **[NO]** soft key.)
- 4. Press the [OK] soft key.
- 5. Press the **CLEAR** key to return to radio operation.

16.13 SCRAMBLER SETUP

Configure the voice scrambler setting. Two types of voice scrambler functions are available: the 4-code type (**CVS2500A** compatible) and the 32-code type (**FVP-42** compatible for Furuno Electric FM-4721) (This function is not available for CH16 and CH70).

- 2. Rotate the **DIAL/ENT** knob to select "**TYPE**", then press the **[SELECT]** soft key.
- Rotate the DIAL/ENT knob to select "CVS2500" or "FVP-42", then press the [ENTER] soft key. *Note*: Changing this setting will delete all scrambler codes set for each channel.
- 4. Rotate the **DIAL/ENT** knob to select "**CODE**", then press the **[SELECT]** soft key.
- Rotate the DIAL/ENT knob to select the channel to be scrambled, then press the [SELECT] soft key. *Note*: CH16 and CH70 cannot be used.

Ihr Partner für Funktechnik | Your partner for radio technology FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com SELECT



CHANNEL SETUP CROMRI ER TYPE (0982500) CODE BACK SELECT CHANNEL SETUP SCRAMBLER CVS2500 FUP-42 BACK ENTER CHANNEL SETUP SCRAMBLER TYPE CODE BACK SELECT SCRAMBLER CHANNEL [USA] CH: 09 (88) CH: 10 62 CH: 11 CH: 12 CH: 13 00

BACK

Rotate the DIAL/ENT knob to select the scrambler code. The scrambler code can be set from "00" to "03" or "OFF" (While FVP-42 is selected in step 6, the scrambler code can be set from "00" to "31" or "OFF"). When "OFF" is selected the voice scrambler is disabled.

SCRAMBLER
CVS2500 CODE
OFF)
00
01
02
03
BACK

- 7. Press the [ENTER] soft key to store the selected code.
- 8. Repeat steps 5 through 7 to set other channels.
- 9. Press the **CLEAR** key to return to radio operation.

16.14 SUMMARY OF THE CANNEL FUNCTION SETUP

Item	Description	Default Value	Page
CHANNEL GROUP	Selects the channel group	INTL	37
WEATHER ALERT	Turns on or off the Weather Alert function	OFF	116
SCAN MEMORY	Add or remove a channel to Scan Memory	-	40
SCAN TYPE	Select priority scan or memory scan	PRIORITY	40
SCAN RESUME	Sets the resume time of scanning	2sec	116
MULTI WATCH	Selects Dual Watch or Triple Watch	DUAL	39
PRIORITY CHANNEL	Selects a priority channel	CH16	117
SUB CHANNEL	Selects a Sub Channel	CH09	117
CHANNEL NAME	Edit the name of memory chan- nels	-	117
NOISE CANCEL	Turns on or off of noise cancelling function (independently available for transmission and reception)	OFF	118
AF PITCH CONTROL	Selects the audio filter operation	NORMAL	119
RX RECORDER	Configures settings of the func- tion for recording received voices	ACTIVATION: OFF RECORDING DELAY TIME: 3sec END OF TONE: ON DATA ERASE: -	119
SCRAMBLER	Configures the secret communi- cation settings	TYPE: CVS2500 CORD: -	121

17 DSC SETUP

17.1 INDIVIDUAL DIRECTORY

The **GX6000E** has a DSC directory that allows you to store a vessel or person's name and the associated MMSI you wish to contact via individual calls, position requests and position report transmissions.

To transmit an individual call you program this directory with information of the vessel you wish to contact, similar to a cellular phone's telephone directory.

Refer to section **"10.4.1 Setting up the Individual / Position Call Directory"** for details.

17.2 INDIVIDUAL REPLY

This menu item sets up the radio to automatically (default setting) or manually respond to a DSC Individual call requesting you to switch to a working channel for voice communications. When "MANUAL" is selected the MMSI of the calling vessel is shown allowing you to see who is calling. This function is similar to caller id on a cellular phone.

Refer to section "10.4.2 Setting up the Individual Call Reply" for details.

17.3 INDIVIDUAL ACKNOWLEDGMENT

The radio can be setup to transmit a reply automatically (default) or set so the radio will not reply to an individual call.

Refer to section "**10.4.3 Enabling the Individual Call Acknowledgment**" for details.

17.4 INDIVIDUAL RINGER

The radio can be setup to ring like a telephone to alert you the radio received a DSC individual call. The default setting is 2 minutes, however this can be changed to 5, 10 or 15 seconds with the procedure below.

Refer to section "10.4.6 Setting up the Individual Call Ringer" for details.

17.5 GROUP DIRECTORY

For this function to operate, the same group MMSI must be programmed into all the DSC VHF radios within the group of vessels that will be using this feature. Refer to section "**10.5.1 Setting up a Group Call**" for details.

FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

17.6 POSITION REPLY

The **GX6000E** can be set up to automatically (default setting) or manually send your position when requested by another vessel. This selection is important if you are concerned about someone polling the position of your vessel that you may not want to. In the manual mode you will see the MMSI (Maritime Mobile Service Identity Number) or persons name shown on the display allowing you to choose to send your position to the requesting vessel.

Refer to section "10.6.1 Setting up a Position Request Reply" for details.

17.7 AUTO POSITION POLLING

The **GX6000E** has the capability to automatically track seven vessels programmed into the individual directory.

Refer to section "10.9 AUTO POSITION POLLING" for details.

17.8 AUTO POSITION INTERVAL

The **GX6000E** has the capability to automatically track seven vessels programmed into the individual directory.

Selecting the auto position polling time interval between position request transmissions to be setup.

Refer to section "10.9.2 Setting up the Polling Time Interval" for details.

17.9 AUTO CHANNEL CHANGE

When a DSC distress or an all ships (urgency or safety) call is received, the **GX6000E** will automatically switch to Channel 16.

This menu selection allows the automatic switch time to be changed. The default selection is 30 seconds.

1.

- 2. Rotate the **DIAL/ENT** knob to select the desired time, then press the **[ENTER]** soft key.
- 3. Press the **CLEAR** key to return to radio operation.

When the "**OFF**" is selected, "[**C**]" icon will light up on the screen.



17.10 NO ACTION TIMER

If no key is pressed during the "MENU" or "DSC CALL" screen, the GX6000E will automatically return to radio operation.

The default selection is 15 minutes.

[@____] 🗰 "SETUP" 🗰 "DSC SETUP" 🗰 "NO ACTION TIMER" 1.

- 2. Rotate the **DIAL/ENT** knob to select the desired time, then press the [ENTER] soft key.
- 3. Press the CLEAR key to return to radio operation.

17.11 WAIT TIME FOR POSITION FIX

This menu allows you to select the maximum wait time till obtaining position information when receiving a distress call, POS Report call, or acknowledgement to POS request call.

The default selection is 15 seconds.

- [@END] 🛶 "SETUP" 🛶 "DSC SETUP" 🛶 "POS UNFIX WAITING TIME" 1.
- 2. Rotate the **DIAL/ENT** knob to select the desired time, then press the [ENTER] soft key.
- 3. Press the **CLEAR** key to return to radio operation.

DSC SETUP
POS UNFIX WAITING TIME
15sec
30sec
1min)
1.5min
2min 2
BACK

17.12 DSC BEEP

This feature allows the alarm beeps to be turned on or off when a DSC call is received. The DSC calls that can be customized are: individual, group, all ships, position request, position report, geographical, polling, and DSC test. Refer to section "10.5.4 Setting up the Group Call Ringer" for details.

17.13 SUMMARY OF THE DSC SETUP MENU

Item	Description	Default Value	Page
INDIVIDUAL DIRECTORY	Enter or edit addresses used for individual call	-	59
INDIVIDUAL REPLY	Selects a reply to individual call	MANUAL	60
INDIVIDUAL ACK.	Selects the message to be sent automatically as an individual call acknowledgement	ABLE	60
INDIVIDUAL RING	Selects the ringing time when an individual call or a position request is received	2 min	64

Ihr Partner für Funktechnik | Your partner for radio technology FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

	SC SET	
ND AC	CTION	TIMER
	1mir	ו
	Зmir	ו
	5mir	۱
	10mir	ו
	15mir	<u>۱</u>
DACK		

Item	Description	Default Value	Page
GROUP DIRECTORY	Enter or edit addresses used for group call	-	65
POSITION REPLY	Selects reply mode when receiv- ing a position call	AUTO	70
AUTO POSITION POLLING	Selects the AUTO POSITION POLLING operation type	AUTO POS REQUEST	80
AUTO POS INTERVAL	Selects the transmission interval of AUTO POSITION POLLING signal	30 sec	80
AUTO CHANNEL CHANGE	Selects the delay time to move to the requested channel automati- cally after receiving a distress call, All Ship call, or group call	30 sec	124
NO ACTION TIMER	Selects the delay time to return to radio operation automatically after no key press	15 min	125
POS UNFIX WAITING TIME	Sets the maximum wait time to obtain position information when receiving a distress call, POS Report call, or acknowledgement to POS request call	15 sec	125
DSC BEEP	Turns on or off the audible alarm when receiving a DSC call	INDIVIDUAL CALL:ON GROUP CALL: ON ALL SHIPS: ON POS REQUEST: OFF POS REPORT: ON GEOGRAPHICAL:ON POLLING CALL: OFF DSC TEST CALL:OFF	125



18 GPS SETUP

The "GPS Setup" mode allows the parameters for the NMEA2000 or the NMEA -0183 or the **SCU-31** external GPS antenna to be customized for your operating requirements.

18.1 ORDER OF PRIORITY

Specify the order of priority of the connection devices to be used when obtaining location information.

- 1. [IIII] IIII "SETUP" IIII "GPS SETUP" IIII "ORDER OF PRIORITY"
- Rotate the DIAL/ENT knob to select "NMEA2000" or "NMEA-0183" then press the [ENTER] soft key to save the new setting.



3. Press the **CLEAR** key to return to radio operation.

NOTE

The SUC-31 external GPS antenna is always set as the lowest priority.

18.2 COMPASS DIRECTION

This menu item selects the compass direction to be shown on the **GX6000E** display. The default setting is "COURSE-UP".

- 2. Rotate the **DIAL/ENT** knob to select the desired direction from "COURSE-UP" and "NORTH-UP".
- 3. Press the **[ENTER]** soft key to save the new setting.
- 4. Press the **CLEAR** key to return to radio operation.

GPS SETUP COMPASS DIRECTION COURSE-UP NORTH-UP BACK ENTER

18.3 LOCATION FORMAT

This menu item selects the coordinate system to be shown on the **GX6000E** display. The default setting is "ddd°mm.mmmm".

- Rotate the **DIAL/ENT** knob to select the desired coordinate system. The location format can be selected from "ddd°mm.mmmm" and "ddd°mm'ss".
- 3. Press the [ENTER] soft key to save the new setting.
- 4. Press the CLEAR key to return to radio operation.

18.4 TIME OFFSET

Sets the local time offset between UTC (Universal Time Coordinated) and local time shown on the display. The offset is added or subtracted from the time received from the GPS.

Refer to section "7.8.1 Changing the GPS Time" for details.

18.5 TIME AREA

This menu selection allows the radio to show UTC time or local time with the offset. Refer to section **"7.8.2 Changing the Time Area**" for details.

18.6 TIME FORMAT

This menu selection allows the radio to show time in 12-hour or 24-hour format. Refer to section **"7.8.3 Changing the Time Format**" for details.

18.7 UNITS OF MEASURE

This section allows you to set the speed, distance and altitude units.

- 2. Rotate the **DIAL/ENT** knob to select the item you want to set.
- 3. Press the [SELECT] soft key.
- 4. Rotate the **DIAL/ENT** knob to select the unit.
- 5. Press the **[ENTER]** soft key to store the new setting.
- 6. Press the **CLEAR** key to return to radio operation.

18.8 MAGNETIC VARIATION

This selection allows customizing the GPS COG (Course Over Ground) indication on the normal and compass pages and BRG on the waypoint and AIS pages. Refer to section "**7.8.4 Changing COG to True or Magnetic**" for details. **NOTE**

Setting to "ON" is effective only when the RMC sentences with magnetic data are input from external devices such as a GPS chart plotter.



GPS SETUP

LOCATION FORMAT

ddd°mm'ss

BACK

ENTER

18.9 **NMEA 0183 IN/OUT** 18.9.1 Data Speed

This menu is used to setup the NMEA 0183 baud rate of the GPS input (Blue and Green wires) and DSC output (Gray and Brown wires). The default setting is 4800 bps.

- S SETUP" 🗰 "NMEA 0183 IN/OUT" 1
- Rotate the DIAL/ENT knob to select "DATA SPEED", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select the desired speed from "4800bps" and "38400bps".
- 4. Press the **[ENTER]** soft key to save the new setting.
- Press the **CLEAR** key to return to radio operation. 5.

18.9.2 **Output Sentences**

This selection is used to setup the NMEA output sentences of the **GX6000E**. By default, all the NMEA sentences are turned "ON".

- 🏧 💷 "SETUP" 🗰 "GPS SETUP" 🗰 "NMEA 0183 IN/OUT" 1.
- 2. Rotate the **DIAL/ENT** knob to select "OUTPUT SENTENCES", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select the desired sentence type, then press the [SELECT] soft key.
- 4. Rotate the **DIAL/ENT** knob to select "ON" or "OFF".
- 5. Press the **[ENTER]** soft key to save the new setting.
- Repeat steps 3 through 5 to set the other sentences. 6.
- 7. Press the **CLEAR** key to return to radio operation.



GPS SETUP

NMEA-0183 IN/OUT



- Data output will be performed based on the data acquisition order of priority configured from "ORDER OF PRIORITY". Refer to section "18.1 ORDER OF PRIORITY" for details.
- While "UNIT POWER" of "OPTION GPS UNIT" is set to OFF, NMEA sentences will not be output. (OPTION GPS reception data will be output as is.)
- The output interval of each NMEA sentence depends on the output timing on the input device. However, sentences which include POS data will be output at intervals of two seconds or less.
- When all sentences are set to be output, depending on the baud rate, not all sentences can be output at intervals of one second or less. GSA and GSV sentences will be output at intervals of around five seconds.

18.10 Position Data Output

Select the connection device to be used when outputting position data.

 
- 2. Rotate the **DIAL/ENT** knob to select "**POS DATA OUTPUT**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select "**NMEA 2000**" or "**NMEA 0183**", then press the **[SELECT]** soft key.
- 4. Rotate the **DIAL/ENT** knob to select "OFF" or "ON".
- 5. Press the **[ENTER]** soft key to store the new setting.
- 6. Press the **CLEAR** key to return to radio operation.

18.11 OPTION GPS UNIT

Change the external GPS antenna (SCU-31) setting.

18.11.1 Unit Power

When you use the **SCU-31**, set this selection to "ON". The default setting is "OFF".



STANDARD HORIZON

- Rotate the DIAL/ENT knob to select "UNIT POWER", then press the [SELECT] soft key.
- 3. Rotate the DIAL/ENT knob to select "OFF" or "ON".
- 4. Press the [ENTER] soft key to store the new setting.
- 5. Press the **CLEAR** key to return to radio operation.

18.11.2 Pinning

This selection is used to enable or disable position updates when the vessel is not underway. The default setting is "OFF".

- 2. Rotate the **DIAL/ENT** knob to select "**PINNING**", then press the **[SELECT]** soft key.
- Rotate the DIAL/ENT knob to select "OFF" or "ON". ON: When pinning is turned on, the GX6000E will not update its position unless the ship's speed over approximately 0.4 knot.
 - OFF: When the vessel is underway or stopped, the **GX6000E** continuously updates its position. This improves accuracy of the position fix.
- 4. Press the [ENTER] soft key to save the new setting.
- 5. Press the **CLEAR** key to return to radio operation.

18.11.3 Differential GPS

This selection enables or disables differential GPS function by SBAS (Satellite Based Augmentation System) such as WAAS, EGNOS and MSAS. In some areas (Australia for example), the GPS reception can have problems on enabling the SBAS. The default setting is "OFF".

1. [IIII] 🗰 "SETUP" 🗰 "GPS SETUP" 🗰 "OPTION GPS UNIT"



GPS SETUP

OPTION GPS UNIT UNIT POWER (DN)



- Rotate the DIAL/ENT knob to select "DIFFERENTIAL GPS", then press the [SELECT] soft key.
- 3. Rotate the **DIAL/ENT** knob to select "OFF" or "ON".
- 4. Press the [ENTER] soft key to store the new setting.
- 5. Press the CLEAR key to return to radio operation.

18.11.4 Logger Interval

- 1. [IIII] 🗰 "SETUP" 🗰 "GPS SETUP" 🗰 "OPTION GPS UNIT"
- 2. Rotate the **DIAL/ENT** knob to select "LOGGER INTERVAL", then press the [SELECT] soft key.
- Rotate the **DIAL/ENT** knob to select the desired time and press the **[ENTER]** soft key.
 Note: Log time for each logger interval setting 15 sec: Aprox. 25 hours 30 sec: Aprox. 50 hours 1 min: Aprox. 100 hours 2 min: Aprox. 200 hours
 - 5 min: Aprox. 500 hours
- 4. Press the **CLEAR** key to return to radio operation.



GPS SETUP	
OPTION GPS UNIT	
POS DATA OUTPUT	11
PINNING ON	11
DIFFERENTIAL GPS	11
LOGGER INTERVAL	
BACK SELEC	Ē
DPTION GPS UNIT	ſ
DPTION GPS UNIT	7
LOGGER INTERVAL	
LOGGER INTERVAL	
LOGGER INTERVAL (
LOGGER INTERVAL (

18.11.5 Log Erase

- Rotate the DIAL/ENT knob to select "LOG ERASE", then press the [SELECT] soft key.
- 3. Press the **[YES]** soft key. (To cancel, press the **[NO]** soft key.)
- 4. Press the [OK] soft key.
- 5. Press the CLEAR key to return to radio operation.

18.12 SUMMARY OF THE GPS SETUP

ltem	Description	Default Value	Page
ORDER OF PRIORITY	Sets the order of priority of the connection devices when obtaining position information	NMEA-0183	127
COMPASS DIRECTION	Selects the compass direction to be displayed	COURSE-UP	127
LOCATION FORMAT	Selects the coordinate system to be displayed	ddd°mm.mmmm	127
TIME OFFSET	Sets the offset time from the UTC (available only when "LOCAL" is selected in the item "TIME AREA")	00:00	128
TIME AREA	Selects the time location to be displayed, from UTC or local	UTC	128
TIME FORMAT	Selects the time format to be displayed, 12-hour or 24-hour (fixed to "24H" when "UTC" is selected in the item "TIME AREA")	24hour	128
UNITS OF MEASURE	Selects the unit if measure when displaying speed, distance, and altitude	SPEED: kts (knots) DISTANCE: nm (nautical mile) ALTITUDE: ft (feet)	128
MAGNETIC VARIATION	Enables/disables the magnetic variation function	OFF	128



FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

Item	Description	Default Value	Page
NMEA 0183 IN/OUT		~	
DATA SPEED	Sets the NMEA 0183 data speed	4800bps	129
OUTPUT SENTENCES	Enables/disables NMEA sentences	GLL: ON GGA: ON GSA: ON GSV: ON RMC: ON DSC/DSE: ON	129
POS DATA OUTPUT	Selects the connection device when outputting position data	NMEA 2000: OFF NMEA-0183: OFF	130
OPTION GPS UNIT			
UNIT POWER	Enables/disables the OPTION GPS UNIT	OFF	130
PINNING	Turns on or off GPS position updates for vessel not underway	OFF	131
DIFFERENTIAL GPS	Turns on or off of use of SBAS	ON	131
LOGGER INTERVAL	Selects the interval time of logging	2 min	132
LOG ERASE	Erases the log data	_	133



GX6000E

19 ATIS SETUP

The **GX6000E** supports the ATIS (Automatic Transmitter Identification System) used in Inland waterways in Europe. When enabled ATIS mode transmits a unique ATIS code each time the PTT switch is released at the end of a transmission.

Users should check with their local marine regulatory authority in their country for assistance in obtaining an ATIS code.

19.1 ATIS CODE PROGRAMMING

- Rotate the **DIAL/ENT** knob to select the first number of your ATIS, then press the [SELECT] soft key to step to the next number.
- 3. Repeat step 2 to set your ATIS (ten digits).
- If a mistake was made entering in the ATIS, Rotate the DIAL/ENT knob to select "←" or "→", press the [SELECT] soft key until the wrong number is selected, then perform step 2.
- 5. When finished programming the number, press the **[FINISH]** soft key. The Radio will ask you to input the ATIS number again. Perform steps 2 through 4 above.
- 6. After the second number has been input, press the **[FINISH]** soft key to store the ATIS number in memory.
- 7. Press the **[OK]** soft key to return to radio operation.



 


19.2 ATIS CH GROUP

The **GX6000E** has the capability to turn on and off the ATIS feature for each channel group.

1.

- Rotate the **DIAL/ENT** knob to select the channel group (International, Canadian*, or USA) you wish to change the setting, and press the **[SELECT]** soft key. (*: Depending on the region setting.)
- 3. Rotate the DIAL/ENT knob to select "ON" or "OFF".
- 4. Press the [ENTER] soft key to save the new setting.
- 5. If you want to set the ATIS feature to another channel group, repeat step 2 through .
- 6. Press the [BACK] soft key to return to radio operation.






NOTE

- The "Scan" and "Dual Watch" features are not available on the channel group while the ATIS feature is turned on.
- The TX output power is set to "1W" automatically on the following channels of the channel group while the ATIS feature is turned on. CH 06, 08, 10, 11, 12, 13, 14, 15, 17, 71, 72, 74, 75, 76, and 77

20 SSM-70H (RAM4) REMOTE MIC OPERATION

When a remote microphone is connected to the **GX6000E**, all VHF, DSC, setup menus, AIS, Navigation, GM (Group Monitor) functions and PA/Fog modes can be remotely operated. The **SSM-70H**'s operation is same as **GX6000E** except the receiver audio volume setting and squelch level setting. The reason for the same operation is to make the operation of the radio and **SSM-70H** mic easy. For specific operation of the **SSM-70H** mic review sections in the radio manual. The **SSM-70H** is supplied with 7 m of routing cable and can be extended up to 21 m using three 7 m extension cables model **CT-100**. The Intercom feature can be used between the **SSM-70H** and the **GX6000E**. In addition, speaker wires are supplied at the panel mount of the routing cable for external speakers to be connected in noisy environments.

20.1 REMOTE MIC CONTROLS

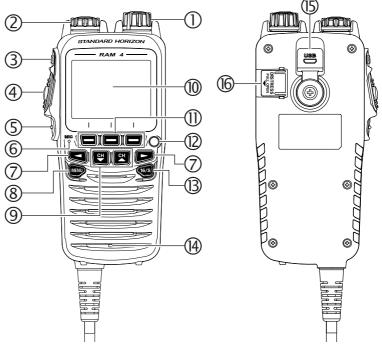

① Power/VOL knob

Press and hold this knob to turn the transceiver and the remote mic on or off. Rotate this knob to adjust the internal speaker volume.

② DIAL/ENT knob

While the normal screen is displayed, rotate the **DIAL/ENT** knob to select your desired channel. While the MENU screen is displayed, rotate the knob to select your desired menu item.

GX6000E	
---------	--

STANDARD HORIZON

SECONDARY USE

Press this knob to enter a selection in the MENU.

- ③ SQL key (Squelch control) Press this key to activate the squelch adjusting mode. Press the CH▲ or CH▼ key to adjust the squelch threshold level.
- ④ PTT (Push-To-Talk) switch

Push this switch to enable the transmitter.

5 CLEAR/On key

Press this key to cancel a menu selection. Press and hold this key to activate the key lock function. Press and hold this key again to deactivate the key lock function.

6 Microphone

The internal microphone transmits your voice reducing background noise using Clear Voice Noise Reduction Technology.

Note: Position your mouth about 1.5 cm away from the microphone hole and speak in a normal voice.

⑦ ◀/► key

Press these keys to switch the function of soft keys

SECONDARY USE

While the MENU screen is displayed, press the key to slide the on-screen menu to the right/left side.

⑧ MENU key

Press this key to access the MENU.

④ CH▼/CH▲ key

These keys are used to change the operating channel.

Press the key momentarily, the channel increases/decreases one step. Holding the key, the channel increases/decreases continuously.

SECONDARY USE

- While the MENU screen is displayed, press the key to slide the on-screen menu upward/downward.
- When in the PA or Fog mode, press the key to change the channel.

① Display

Full dot matrix display, 222 by 162 pixels.

Soft keys

These three programmable keys can be customized through the setup menu mode. When pressing one of these keys briefly, the key functions will appear at the bottom of the display. Refer to section "20.2 RAM4 SOFT KEY ASSIGNMENT" for details.

12 Strobe LED

When the **[STROBE]** soft key is pressed, the Strobe LED will light and flash repeatedly.

From MENU \rightarrow SETUP \rightarrow CONFIGURATION \rightarrow STROBE LED, you can select one option from "CONTINUOUS", "SOS", "BLINK 1", "BLINK 2" and "BLINK 3".

16/S key

Pressing this key immediately recalls channel 16 from any channel location. Holding down this key recalls the SUB channel (The default setting is channel 9). Pressing this key again reverts to the previous selected working channel.

The internal speaker is located here.

15 DATA jack

Use the micro USB type B jack for **SSM-70H** (**RAM4**) firmware updates. Note: When the DATA jack is securely covered with rubber cap, the SSM-70H meets the waterproofing performance.

(6) DISTRESS key

This key is used to send a DSC distress call. Refer to section "10 DIGITAL SELECTIVE CALLING (DSC)".

20.2 RAM4 SOFT KEY ASSIGNMENT

From this menu, you can assign desired functions to each **RAM4** soft key from numbers 01 to 12. You can also set how long the soft key icon will be displayed after the corresponding soft key is pressed. The keys maybe setup to control the following functions:

DISPLAY	FUNCTION	SOFT KEY NUMBERS ASSIGNED AS DEFAULT (See the next page.)
NONE	-	-
TX HI/LO	Selects transmit power.	02
WX/CH	Switches channels between weather and marine.	01
SCAN	Turns on or off scanning function.	05
DUAL WATCH	Starts and stops dual watch scan.	06
MARK POSITION	Marks the current position for a "Waypoint".	09
SCAN MEMORY	Add or remove channels from memory channel scan.	04
PRESET	Programs or deletes the preset memory channel.	10
MAN OVER BOARD	Marks the position where a person falls overboard.	03
NOISE CANCEL	Enables the noise canceling settings display.	
CH NAME	Edit channel names.	
STROBE	Turns on or off the strobe light LED.	
SCRAMBLER	Configures the secret communication settings.	
COMPASS	Enables the "Compass" display.	
WAYPOINT	Enables the "Waypoint" or "Route" navigation display.	
FOG HORN	Select FOG HORN mode.	
INTERCOM	Activates intercom between radio and RAM4 mic (optional RAM4 required).	
GPS LOGGER	Starts and stops logging position data.	
AIS DISPLAY	Shows the "AIS" display.	
HORN BUTTON	Activates the Fog Horn function.	12
PUBLIC ADDRESS	Activates the PA function.	
RX RECORD	Records received voices.	07
RX SENSE	Toggles between LOCAL and DISTANCE.	11
PLAY	Plays recorded voices.	08

You can assign functions to soft keys on each of the transceiver and the optional **SSM-70H** (**RAM4**) remote mic.

20.2.1 Key Assignment

Configure all settings on the **SSM-70H** (**RAM4**) remote mic for which you want to assign functions to soft keys.

- 1. [IIII] I SETUP" I CONFIGURATION" I SOFT KEY"
- 2. Rotate the **DIAL/ENT** knob to select "**KEY ASSIGN-MENT**", then press the **[SELECT]** soft key.
- 3. Rotate the **DIAL/ENT** knob to select the key number to be programmed, and press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select a new function to be assigned, and press the **[ENTER]** soft key. Available functions are listed below. By selecting "**NONE**" the soft key assignment is removed.
- 5. Repeat steps 3 and 4 to program other soft keys. Up to 24 functions can be assigned.

The VHF radio's functions can be assigned to the maximum of 12 soft keys. Pressing the $\blacktriangleright/\blacktriangleleft$ key each time shows three different soft keys.



(The illustration above is the default setting.)

CONFIGURATION

SOFT KEY KEY ASSIGNMENT

KEY TIMER

SOFT KEY

KEY ASSIGNMENT

SOFT KEY

KEY ASSIGNMENT

1ULTI WATCH SCAN

TRANSMIT PO MAN OVERBOARD

BACK

01: WX/CH

BACK

Back

02: TX HI/LO 03: MAN OVER BOARD 04: SCAN MEMORY 05: SCAN

SELECT

SELECT

ENTE


6. Press the CLEAR/On key to return to radio operation.



21 CONNECTING A USB DATA TERMINAL TO THE PC

The **GX6000E** settings can be programmed using the USB terminal and PC Programming Software. You can also download the log data from the radio by using the PC Programming Software which may be downloaded from the Standard Horizon website. The PC Programming Software is compatible with Windows[®].

To connect a PC, use the supplied USB cable through the **DATA** jack of the **GX6000E**.

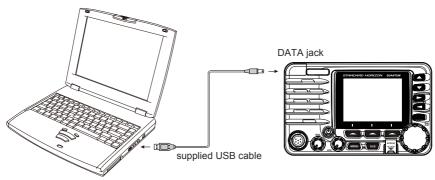

CAUTION

The **DATA** jack is NOT designed to be waterproof when the cover is opened. Connect the radio and PC in a dry location.

STANDARD HORIZON

22 MAINTENANCE

The inherent quality of the solid-state components used in this transceiver will provide many years of continuous use. Taking the following precautions will prevent damage to the transceiver.

- Never key the microphone unless an antenna or suitable dummy load is connected to the transceiver.
- Ensure that the supply voltage to the transceiver does not exceed 16 VDC or fall below 11 VDC.
- Use only STANDARD HORIZON approved accessories and replacement parts.

In the unlikely event of serious problems, please contact your Dealer or our repair facility. Address and phone numbers for this facility, as well as warranty information, are contained in section "**24 WARRANTY**".

22.1 REPLACEMENT PARTS

Occasionally an owner needs a replacement mounting bracket or knob. These can be ordered from your Dealer.

Commonly requested parts, and their part numbers are listed below.

- DC Power Cord: T9027407
- VOL and SQL Knob: RA6057800
- DIAL/ENT Knob: RA6057700
- Mounting Bracket: RA6060600
- Mounting Bracket Knob: RA0978600
- Microphone Hanger: RA0458800
- RAM4 Mic Routing Cable Assembly: S8101512
- USB Cable: T9101648

22.2 FACTORY SERVICE

In the unlikely event that the radio fails to perform or needs servicing, please contact your Dealer.

An "RA" (Return Authorization) number is not necessary to send a product in for service. Include a brief note describing the problem along with your name, return address, phone number, and proof of purchase.

22.3 TROUBLESHOOTING CHART

SYMPTOM	PROBABLE CAUSE	SE REMEDY		
Transceiver fails to	No DC voltage to the	a. Check the 12VDC battery connections		
power up.	transceiver, or blown fuse.	and the fuse. b. The ⊕ key needs to be pressed and held to turn the radio on.		
Transceiver blows fuse when connected to power supply.	Reversed power wires.	Check the power cable for DC voltage, or replace the fuse (7A). Make sure the red wire is connected to the positive (+) battery post, and the black wire is connected to the negative (-) battery post. If the fuse still blows, contact your Dealer.		
Popping or whin- ing noise from the speaker while engine runs.	Engine noise.	Re-route the DC power cables away from the engine. Add noise suppressor on power cable. Change to resistive spark plug wires and/or add an alternator whine filter.		
Sound is not emit- ted from the inter- nal or external speaker.	Accessory cable.	Check the connections of the acces- sory cable. External speaker cable (WHITE/ SHIELD) shorted together.		
Sound is not emit- ted from the PA speaker.	Accessory cable.	Check the connections of the accessory cable. PA speaker cable (RED/SHIELD) shorted together.		
Receiving station reports low trans- mit power, even with transceiver set to HI power.	Antenna.	Have the antenna checked or test the trans- ceiver with another antenna. If the problem persists, contact your Dealer for servicing.		
"HI BATTERY" or "LO BATTERY" message appears when the power is turned on.	The power supply voltage is too high or too low.	Confirm that the connected power supply voltage is between 11 volts and 16.5 volts DC.		
Your position is not	SCU-31 cable.	Check the SCU-31 cable connection.		
displayed.	Accessory cable.	Check the accessory cable connection. Some GPS use the battery ground for NMEA connection.		
	Setting of the GPS chart plotter.	Check the output signal format of the GPS navigation receiver. This radio requires NMEA 0183 and NMEA 2000 format with GLL, RMB, or RMC sentence as an output signal. If the GPS has a baud rate setting make sure to select 4800 and parity to NONE.		

23 CHANNEL ASSIGNMENTS

					CHANNEL USE		
СН	TX (MHz)	RX (MHz)	SIMPLEX/DUPLEX	LOW PWR	All countries (except Germany)	Germany	
01	156.050	160.650	DUPLEX	_	TELEPHONE	NAUTIK	
02	156.100	160.700	DUPLEX	_	TELEPHONE	NAUTIK	
03	156.150	160.750	DUPLEX	_	TELEPHONE	NAUTIK	
04	156.200	160.800	DUPLEX	_	INTL	NAUTIK	
05	156.250	160.850	DUPLEX	_	INTL	NAUTIK	
06	156	.300	SIMPLEX	LOW*4	SAFETY	SHIP-SHIP	
07	156.350	160.950	DUPLEX	_	INTL	NAUTIK	
08	156	.400	SIMPLEX	LOW*4	COMMERCIAL	SHIP-SHIP	
09	156	.450	SIMPLEX	_	CALLING	NAUTIK	
10	156	.500	SIMPLEX	LOW*4	COMMERCIAL	SHIP-SHIP	
11	156	.550	SIMPLEX	LOW*4	VTS	SHIP-PORT	
12	156	.600	SIMPLEX	LOW*4	VTS	SHIP-PORT	
13	156	.650	SIMPLEX	LOW*4	BRG/BRG	SHIP-SHIP	
14	156	.700	SIMPLEX	LOW*4	VTS	SHIP-PORT	
15	156	.750	SIMPLEX	LOW	COMMERCIAL	ON-BOARD	
16	156	.800	SIMPLEX	_	DIST	RESS	
17		.850	SIMPLEX	LOW	SAR	ON-BOARD	
18	156.900	161.500	DUPLEX	_	INTL	NAUTIK	
19	156.950		DUPLEX	_	INTL	NAUTIK	
1019		.950	SIMPLEX	_	_	_	
2019		.550	SIMPLEX	_	_	_	
20		161.600	DUPLEX	LOW*6	PORT OPR	NAUTIK	
1020			SIMPLEX		-	-	
2020			SIMPLEX	_	_	_	
21	157.050	161.650	DUPLEX	_	INTL	NAUTIK	
22	157.100	161.700	DUPLEX	_	INTL	NAUTIK	
23	157.150	161.750	DUPLEX	_	INTL		
24	157.200	161.800	DUPLEX	_	TELEP		
25	157.250	161.850	DUPLEX	_	TELEP		
26	157.300	161.900	DUPLEX	_	TELEP		
27	157.350	161.950	DUPLEX	_	TELEP		
28	157.400	162.000	DUPLEX	_	TELEP		
31*1	157.550	162.150	DUPLEX	LOW	NED JACHTHAV	_	
37*2		.850	SIMPLEX	LOW	YACHTING UK	_	
60	156.025	160.625	DUPLEX	_	TELEPHONE	NAUTIK	
61	156.075	160.675	DUPLEX	_	INTL	NAUTIK	
62	156.125	160.725	DUPLEX	_	INTL	NAUTIK	
63	156.175	160.775	DUPLEX	_	INTL	NAUTIK	
64	156.225	160.825	DUPLEX	_	TELEPHONE	NAUTIK	
65	156.275	160.875	DUPLEX	_	INTL	NAUTIK	
66	156.325	160.925	DUPLEX	_	INTL	NAUTIK	
67	1	.375	SIMPLEX	_	BRG/BRG	NAUTIK	
68		.425	SIMPLEX	_	SHIP-	-	
69		.475	SIMPLEX	_	PLEA		
70		156.525	SIMPLEX	_	DS		
71	156	.575	SIMPLEX	LOW*4	PLEASURE	SHIP-PORT	
72		.625	SIMPLEX	LOW*4	SHIP-		
73		.675	SIMPLEX		PORT OPR	NAUTIK	
74	1	.725	SIMPLEX	LOW*4	PORT OPR	SHIP-PORT	
75	1		SIMPLEX	LOW	_	SHIP-PORT	
_ 10	156.775				_		

Ihr Partner für Funktechnik | Your partner for radio technology FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

					CHANN	EL USE
СН	TX (MHz)	RX (MHz)	SIMPLEX/DUPLEX	LOW PWR	All countries (except Germany)	Germany
76	156	.825	SIMPLEX	LOW	_	NAUTIK
77	156	.875	SIMPLEX	LOW*4	PORT OPR	SHIP-SHIP
78	156.925	161.525	DUPLEX	_	INTL	NAUTIK
1078	156	.925	SIMPLEX	_	-	-
2078	161	.525	SIMPLEX	_	-	-
79	156.975	161.575	DUPLEX	_	INTL	NAUTIK
1079	156	.975	SIMPLEX	_	-	_
2079	161	.575	SIMPLEX	_	_	-
80	157.025	161.625	DUPLEX	_	INTL	NAUTIK
81	157.075	161.675	DUPLEX	_	INTL	NAUTIK
82	157.125	161.725	DUPLEX	_	INTL	TELEPHONE
83	157.175	161.775	DUPLEX	_	INTL	TELEPHONE
84	157.225	161.825	DUPLEX	_	TELEPHONE	
85	157.275	161.875	DUPLEX	-	TELEP	HONE
86	157.325	161.925	DUPLEX	_	TELEP	HONE
87	157	.375	SIMPLEX	_	PORT	OPR
88	157	.425	SIMPLEX	-	PORT	OPR
M*3	157	.850	SIMPLEX	-	YACHTING UK	-
M2*3	161.425		SIMPLEX	_	YACHTING UK	_
L1*5	155.500		SIMPLEX	-	PLEASURE	-
L2*5	155.525		SIMPLEX	_	PLEASURE	_
L3*5	155.650		SIMPLEX	_	PLEASURE	_
F1*5	155	.625	SIMPLEX	-	FISHING	_
F2*5	155	.775	SIMPLEX	_	FISHING	_
F3*5	155	.825	SIMPLEX	-	FISHING	_

NOTE Country Channel assignment are different depending on the region.

- *1: Channel 31 is assigned to only BELGIUM and NETHERLAND.
- *2: Channel 37 is assigned to only NETHERLAND.
- *3: Channel M and M2 are assigned to only UNITED KINGDOM.
- *4: LOW Power setting for BELGIUM, NETHERLAND and GERMANY.
- *5: Channel L1, L2, L3, F1, F2 and F3 are assigned to only SWEDEN.

*6: LOW Power setting for GERMANY.

STANDARD HORIZON Ihr Partner für Funktechnik | Your partner för radio technology FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

24 WARRANTY

PLEASE NOTE

To receive warranty service in Europe, for European Sourced products, the purchaser must return the Product, shipment and insurance prepaid to the purchasing dealer or authorized Service Centre in Europe. Contact details for warranty in Europe are available from the dealer in your country or from www.standardhorizon.co.uk where details of warranty terms and contact details for Europe can be obtained.

STANDARD HORIZON LIMITED WARRANTY

STANDARD HORIZON (the Marine Division of Yaesu Musen Co. Ltd) warrants, to the original purchaser only, each new Marine Product ("Product") manufactured and/or supplied by STANDARD HORIZON against defects in materials and workmanship under normal use and service for a period of 3 years from the date of purchase.

In the event of a defect, malfunction or failure of the Product during the warranty period, STANDARD HORIZON's liability for any breach of contract or any breach of express or implied warranties in connection with the sale of Products shall be limited solely to repair or replacement, at its option, of the Product or part(s) therein which, upon examination by STANDARD HORIZON, appear to be defective or not up to factory specifications. STANDARD HORIZON may, at its option, repair or replace parts or subassemblies with new or reconditioned parts and subassemblies.

STANDARD HORIZON will not warrant installation, maintenance or service of the Products. In all instances, STANDARD HORIZON's liability for damages shall not exceed the purchase price of the defective Product.

STANDARD HORIZON will pay all labor and replacement parts charges incurred in providing the warranty repair service except where purchaser abuse or other qualifying exceptions exist. The purchaser must pay any transportation expenses incurred in returning the Product to STANDARD HORIZON for service.

This limited warranty does not extend to any Product which has been subjected to misuse, neglect, accident, incorrect wiring by anyone other than STANDARD HORIZON, improper installation, or subjected to use in violation of instructions furnished by STANDARD HORIZON, nor does this warranty extend to Products on which the serial number has been removed, defaced, or changed. STANDARD HORIZON cannot be responsible in any way for ancillary equipment not furnished by STANDARD HORIZON which is attached to or used in connection

with Products, or for the operation of the Product with any ancillary equipment and all such equipment is expressly excluded from this warranty.

STANDARD HORIZON disclaims liability for range, coverage, or operation of the Product and ancillary equipment as a whole under this warranty.

STANDARD HORIZON reserves the right to make changes or improvements in Products, during subsequent production, without incurring the obligation to install such changes or improvements on previously manufactured Products. The implied warranties which the law imposes on the sale of this Product are expressly LIMITED, in duration, to the time period specified above. STANDARD HORIZON shall not be liable under any circumstances for consequential damages resulting from the use and operation of this Product, or from the breach of this LIMITED WARRANTY, any implied warranties, or any contract with STANDARD HORIZON. IN CONNECTION WITH THE SALE OF ITS PRODUCTS, STAN-DARD HORIZON MAKES NO WARRANTIES, EXPRESS OR IMPLIED AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, EXCEPT AS EXPRESSLY SET FORTH HEREIN.

Some Countries in Europe and States of the USA do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how an implied warranty lasts, so the above limitation or exclusions may not apply. This warranty provides specific rights, there may be other rights available which may vary between countries in Europe or from state to state within the USA.

25 SPECIFICATIONS

Performance specifications are nominal, unless otherwise indicated, and are subject to change without notice. Measured in accordance with TIA/EIA-603.

25.1 GENERAL

Channels	All International, USA and Canadian*
	(*: Depending on the region setting)
Normal Input Voltage	
Operating Voltage Range	
Current Drain	
Standby	0.55.4
Receiver (at Maximum AF Output)	
Transmit	5.0 A (HI), 1.0 A (LO)
NMEA 2000 Load Equivalency Number	
DSC Transmitted Call Log	
DSC Distress Call Log	
DSC Received Call Log	64
Individual Call Directory	
Group Call Directory	
Waypoint Directory	
Display Type	
	Full Dot Matrix (222 x 162 pixels)
Dimensions (WxHxD)	
Flush-Mount Dimensions (WxHxD)	
Weight	
25.2 TRANSMITTER	
Frequency Range156.025 M	/Hz to 161.600 MHz (INTERNATIONAL)
RF Output Power	
Conducted Spurious Emissions	Less than -80 dBc (Hi), -66 dBc (Lo)
Audio Response	
•	mphasis characteristic at 300 to 3000 Hz

Audio Distortion	Less than 5 %
Modulation	16K0G3E (for Voice), 16K0G2B (for DSC)
	±0.0003 % (-20 °C to +60 °C)

25.3 RECEIVER (for Voice and DSC)

Frequency Range	
Sensitivity	
20 dB Quieting	0.35 μV
12 dB SINAD	0.30 µV
Squelch Sensitivity (Threshold)	0.13 µV
Modulation Acceptance Bandwidth	±7.5 kHz
Selectivity (Typical)	
Spurious and Image Rejection	
Intermodulation and Rejection	
Audio Output	

Audio Response	within +1/–3dB of a 6 dB/Octave
·	de-emphasis characteristic at 300 to 3000 Hz
Frequency Stability	±0.0003 % (–20 °C to +60 °C)
Channel Spacing	
	ITU-R M.493-14
	(Asia, Australia: Meets ITU-R M.493-13 Class D)
Attenuator (Local)	Approx. 10 dB

25.4 RECEIVER (for AIS)


Frequency	161.975 MHz (CH A), 162.025 MHz (CH B)
Sensitivity	0.5 µV (at 12 dB SINAD)
Selectivity(Typical)	
Spurious and Image Rejection	70 dB

25.5 NMEA INPUT/OUTPUT

NME	EA 0183 Input (4800 / 38400 baud)	GGA, GLL, GNS, RMC, GSA, & GSV
NME	EA 0183 Output (4800 / 38400 baud)	DSC, DSE, GGA, GLL, GNS,
		RMC, GSA & GSV
NME	EA 0183-HS AIS Output (38400 baud)	VDM
25.6	SCU-31 EXTERNAL GPS A	NTENNA


Receiver Channels	
Sensitivity	Less than –147 dBm
Time to First Fix	
	5 seconds typical (@ Hot Start)
Geodetic Datum	

25.7 DIMENSIONS

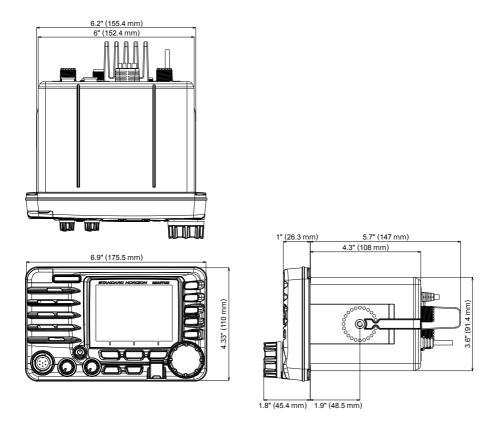





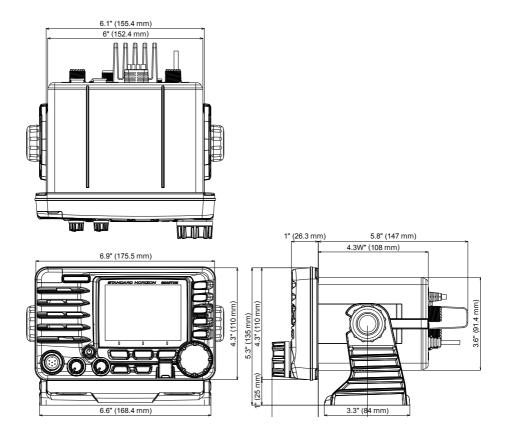

STANDARD HORIZON

EU Declaration of Conformity

We, Yaesu Musen Co. Ltd of Tokyo, Japan, hereby declare that this radio equipment GX6000E is in full compliance with EU Radio Equipment Directive 2014/53/EU. The full text of the Declaration of Conformity for this product is available to view at ://www.yaesu.com/jp/red

ATTENTION – Conditions of usage

This transceiver works on frequencies that are regulated and not permitted to be used without authorisation in the EU countries shown in this table. Users of this equipment should check with their local spectrum management authority for licensing conditions applicable for this equipment.

AT	BE	BG	CY	CZ	DE
DK	ES	EE	FI	FR	UK
GR	HR	HU	IE	IT	LT
LU	LV	MT	NL	PL	PT
RO	SK	SI	SE	CH	IS
LI	NO	-	-	-	-


Disposal of Electronic and Electrical Equipment

Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste.

Electronic and Electrical Equipment should be recycled at a facility capable of handling these items and their waste by-products.

Please contact a local equipment supplier representative or service center for information about the waste collection system in your country.



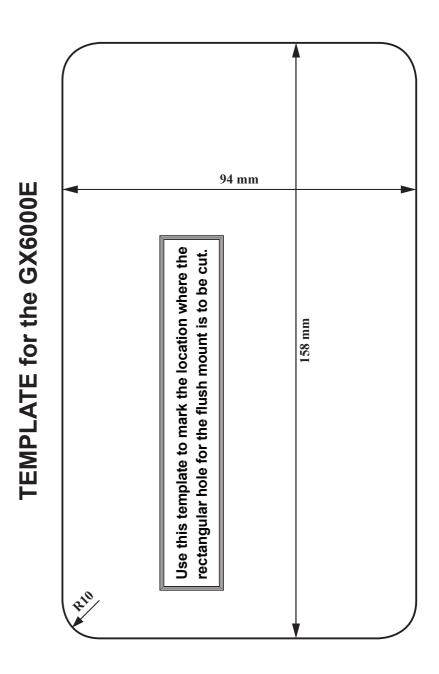

cut here

Ihr Partner für Funktechnik | Your partner for radio technology FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com

Ihr Partner für Funktechnik | Your partner for radio technology FELLECS-TECH | inbox@fellecs-tech.com | www.fellecs-tech.com



Nothing takes to water like Standard Horizon

FELLECS TECH

Ihr Partner für Funktechnik www.fellecs-tech.com

inbox@fellecs-tech.com

Copyright 2019 YAESU MUSEN CO., LTD. All rights reserved.

No portion of this manual may be reproduced without the permission of YAESU MUSEN CO., LTD.

YAESU MUSEN CO., LTD.

Tennozu Parkside Building 2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A. **YAESU UK**

Unit 12, Sun Valley Business Park, Winnall Close Winchester, Hampshire, SO23 0LB, U.K.

Printed in Japan

1907G-CS-1